

**PROGRAM / MAXXUM® 1800AF**



Camera Name							
NEX-VG10/ NEX-VG20/ NEX-VG20H/ NEX-VG900/ NEX-VG30/ NEX-VG30H/ NEX-EA50UH	DSC-HX400V/ DSC-HX400/ DSC-HX60V/ DSC-HX50V/ DSC-RX100M2/ DSC-RX10/ DSC-RX1R/ DSC-RX1	ILCE-3000/ ILCE-5000/ ILCE-6000/ ILCE-7R/ ILCE-7	NEX-3/ NEX-3N/ NEX-5/ NEX-5N/ NEX-5R/ NEX-5T/ NEX-6/ NEX-7/ NEX-C3/ NEX-F3	SLT-A33/ SLT-A35/ SLT-A37/ SLT-A55V/ SLT-A57/ SLT-A65V/ SLT-A77V/ SLT-A58/ SLT-A99V	DSLR-A560/ DSLR-A580	DSLR-A100/ DSLR-A200/ DSLR-A230/ DSLR-A290/ DSLR-A300/ DSLR-A330/ DSLR-A350/ DSLR-A380/ DSLR-A390/ DSLR-A500/ DSLR-A550/ DSLR-A700/ DSLR-A850/ DSLR-A900	

Flash Function	Compatibility	Not Usable	Not Usable	Not Usable	Not Usable	Not Usable	Not Usable	Not Recommended	
	Attaching							Yes (*1)	
	Burst							Yes	
	Program Reset							No	
	Flash Metering	ADI flash metering							No
		P-TTL flash metering							No
		TTL flash metering							No
	Auto Zoom							No	
	Flash Range Display							No	
	HSS (High-Speed Sync)	No	No	No	No	No	No	No	
	Wireless/Remote HSS							No	
	Wireless/Remote flash							No	
	Slow sync.							Yes	
	Modeling							No	
	Multiple flash							No	
	Manual flash							No	
	AF illuminator							No	
FEL Lock							No		

**Not Recommended** - The flash can be attached by using the Konica Minolta™ FS-1100 Flash Shoe Adapter. However, the Auto Focus illuminator is not available and overexposure is likely to occur due to incompatibility with the flash metering system.

\*1 - It is available with Flash Shoe Adapter FS-1100 (Konica Minolta made).