

MACRO TWIN 2400



		Camera Name																	
		NEX-VG900/ NEX-EA50UH	NEX-VG10/ NEX-VG20/ NEX-VG20H/ NEX-VG30/ NEX-VG30H/	DSC-RX1R/ DSC-RX1	DSC-HX400V/ DSC-HX400/ DSC-HX60V/ DSC-HX50V/ DSC-RX100M2/ DSC-RX10/	ILCE-5000	ILCE-3000/ ILCE-6000/ ILCE-7R/ ILCE-7	NEX-3/ NEX-3N/ NEX-5/ NEX-5N/ NEX-5R/ NEX-5T/ NEX-C3/ NEX-F3	NEX-6	NEX-7	SLT-A58/ SLT-A99V	SLT-A65V/ SLT-A77V	SLT-A33/ SLT-A35/ SLT-A37/ SLT-A55V/ SLT-A57/	DSLR-A100/ DSLR-A200/ DSLR-A230/ DSLR-A290/ DSLR-A300/ DSLR-A330/ DSLR-A350/ DSLR-A380/ DSLR-A390/ DSLR-A500/ DSLR-A550/ DSLR-A560/ DSLR-A580/ DSLR-A700/ DSLR-A850/ DSLR-A900					
Flash Function	Compatibility	Usable	Not Usable	Usable	Not Usable	Not Usable	Usable	Not Usable	Usable	Usable	Usable	Usable	Usable	Usable					
	Attaching	Yes (*3)	No	Yes (*3)	No	No	Yes (*3)	No	Yes (*3)	Yes	Yes (*3)	Yes	Yes	Yes					
	Burst	Yes		Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
	Program Reset	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Flash Metering	ADI flash metering		No			No		No	No	No	No	No	No	No	No	No	No	No
		P-TTL flash metering		Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes (*2)	Yes	Yes	
		TTL flash metering		No			No		No	No	No	No	No	No	No	No	No	No	
	Auto Zoom	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Flash Range Display	No		No			No		No	No	No	No	No	No	No	No	No	No	
	HSS (High-Speed Sync)	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Wireless/Remote HSS	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Wireless/Remote flash	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Slow sync.	Yes		Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes (*2)	Yes	Yes	
	Modeling	Yes		Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
	Multiple flash	No		No			No		No	No	No	No	No	No	No	No	No	No	
	Manual flash	Yes (*1)		Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
	AF illuminator	No		No			No		No	No	No	No	No	No	No	No	No	No	
FEL Lock	No	No		No			No		No	No	No	No	No	No	No	No	No		

*1 - The manual flash mode is available by setting the mode to custom setting on the flash unit.

*2 - It is available with the camera firmware Ver.1.03 or later.

*3 - Requires Shoe adaptor (included with camera) or Shoe adaptor ADP-MAA (optional).