

IPアドレスの設定方法 — 「SNC easy IP setup」を使用する場合

設定方法:取扱説明書「SNC easy IP setup ガイド」の“カメラにIP アドレスを割り当てる”の項を参照

手順

①、「SNC easy IP setup」を立ち上げる

②、IPアドレスを設定するカメラをクリックし選択

③、Use the following IP addressを選択し、下記を記入
IP address
Subnet mask
Default gateway

④、Administrator name,Administrator password
を入力
デフォルト Administrator name : admin
Administrator password : admin

⑤、Setをクリック

Device address(IPv4)	MAC address	DHCP/Fixed IP(IPv4)	HTTP Port No.	Model	Serial No.	Version No.
192.168.1.200	54-42-49-4f-cb-df	Fixed IP	80	SNC-CH120	100080	1.73.01
169.254.110.94	d8-d4-3c-11-ee-ee	DHCP	80	SNC-CX600W	3000874	1.9.2
169.254.32.161	54-42-49-3d-63-9a	DHCP	80	SNC-CH240	100092	1.73.01

Obtain IP address automatically

Use the following IP address

IP address: 192.168.1.218

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.254

After getting response of ping, the IP will be skipped

Obtain DNS server address automatically

Use the following DNS server address

Primary DNS server address: []

Secondary DNS server address: []

HTTP port No. 80 [] 1024 to 65534

Administrator name: []

Administrator password: []

Set Cancel

1 entries selected