



**SAT (digital)**

Brand	Code No.
Sony	042, 057
Amstrad	046
CANAL+	006, 042
Galaxis	030, 053
Gold box	036
Kathrein	043, 049
Nokia	017, 056
Pace	015
Philips	054
Radix	029, 052
Technisat	039, 051
TPS	055
Zehnder	048

**AMP**

Brand	Code No.
Sony	001, 022
Aiwa	039, 021, 022, 079
Akai	075
B&O (Bang&Olufsen)	068
Denon	026, 027, 035, 036, 009, 023
Grundig	020, 016, 061, 075
Finearts	043
Fisher	010
Harman/Kardon	034
JVC	046, 019, 018, 070, 078
Kenwood	024, 015, 014, 071, 082, 083
Magnavox	020
Marantz	028, 016
NAD	032
Onkyo	033, 038, 043, 084
Panasonic	007, 077, 006
Parasound	066
Philips	028, 016
Pioneer	031, 005, 017, 072, 081
Rotel	067
Sansui	037
Sanyo	010
Sharp	027, 015, 036, 080
Sherwood	030
Teac	057
Technics	025, 044, 007, 006, 073
Yamaha	029, 045, 013

**CD**

Brand	Code No.
Sony	001
Aiwa	036, 020, 021
Akai	069

Brand	Code No.
B&O (Bang&Olufsen)	063
Denon	025, 008, 007, 022
Fisher	039, 009
Grundig	019, 015, 057, 069
Harman/Kardon	030
Hitachi	040
JVC	032, 017, 018, 073
Kenwood	033, 013, 023, 014, 065, 077, 078
Marantz	071, 015, 038
NAD	028
Nakamichi	043
Onkyo	029, 034, 037, 079
Panasonic	009, 005, 004, 072
Philips	015
Pioneer	027, 016, 003, 066, 076
Sanyo	039, 009
Sherwood	038, 010, 011
Sharp	008, 014, 075
Teac	048, 053, 049
Technics	024, 031, 004, 066
Universum	062, 049, 050, 051, 052
Yamaha	026, 035, 012

**MD**

Brand	Code No.
Sony	001
Aiwa	011
Akai	017
Denon	002
JVC	004, 007
Kenwood	003, 010, 013
Marantz	006
Onkyo	014
Panasonic	009, 005
Pioneer	015
Sansui	008
Sharp	012, 002
Teac	004
Yamaha	016

**TAPE**

Brand	Code No.
Sony	001, 002, 003, 004, 005
Aiwa	042, 045, 025, 026, 072, 086
Akai	068
B&O (Bang&Olufsen)	059
Denon	028, 029, 009, 010, 027

Brand	Code No.
Fisher	011
Grundig	019, 057, 069
Goldstar/LG	008
Harman/Kardon	033
JVC	022, 023, 024, 060, 061, 071
Kenwood	036, 037, 015, 016, 017, 018, 064, 065, 074, 075
Marantz	047, 019, 050, 089
NAD	031, 032
Nakamichi	079
Onkyo	038, 039, 040, 041, 043, 044, 076
Panasonic	067, 070, 007
Philips	047, 019, 089
Pioneer	034, 035, 020, 021, 006, 066, 073
Sansui	079, 077, 078
Sanyo	011
Sharp	028, 010, 087, 088
Teac	077, 078, 080, 081, 064, 065
Technics	046, 007, 067, 066
Universum	053, 054
Yamaha	030, 014, 063

Use the space provided below to make notes of the code numbers and names assigned to your componens.

Utilisez l'espace ci-dessous pour noter les numéros de code et les noms attribués à votre composant.

Notieren Sie sich unten an der vorgesehenen Stelle die Codenummern und Namen, die Sie den Geräten zugewiesen haben.

Utilice el espacio proporcionado a continuación para anotar los números de código y los nombres asignados al componente.

Noteer hieronder de codenummers en namen die aan uw component zijn toegekend.

Per la creazione di un promemoria dei numeri di codice e dei nomi assegnati al componente in uso, utilizzare lo spazio sottostante.

Utilize o espaço fornecido abaixo para tomar nota dos números de código e dos nomes atribuídos ao componente.

Här nedanför kan du anteckna produktkoderna och komponentnamnen.

Setting Position number Numéro de position de programmation Einstellnummer Número de posición de ajuste Instelpositienummer Impostazione del numero di posizione Número da posição da programação Pos.nr. för inställn.	Factory setting Réglage d'origine Werkseitige Einstellung Ajuste de fábrica Fabrieksinstelling Impostazione di fabbrica Programação de fábrica Fabriksinställn.	Component Appareil Gerät Componente Component Componente Komponent	Code No. No de code Codenummer Nº de código Codenr N. codice No. de código Kodnr.	Name Nom Name Nombre Naam Nome Nome Namn	Learned key Touche programmée Programmierte Taste Tecla aprendida Geleerde toets Tasto di apprendimento Tecla aprendida Inlård knapp
S - 1	TV				
S - 2	SAT				
S - 3	VCR				
S - 4	DVD				
S - 5	CD				
S - 6	MD				
S - 7	TAPE				
S - 8	AMP				