

CFD-S550L: OPERATE
CFD-S550: POWER

VOL +, -

1 SLEEP "SLEEP"
2 SLEEP 가
3 SLEEP 가

"60" → "90" → "120" → "OFF" → "10" → "20" → "30".

OPERATE(POWER)

가 가

SOUND MODE (SOUND)

 
- ROCK
- POP
- JAZZ
- VOCAL
- FLAT 가

MEGA BASS "MEGA BASS"가

MEGA Xpand "MEGA Xpand"가

CD


- 1 CD ("Cd"가 FUNCTION). OPERATE(POWER)
- 2 CD CD
- 3 ▲ PUSH OPEN/CLOSE CD
- 4 ▶▶(▶)

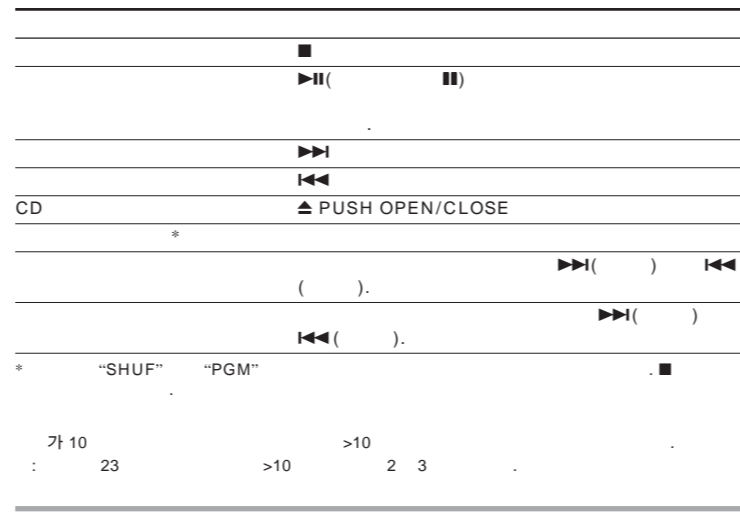

DISPLAY·ENT·MEMORY (E).



 "REP 1", "REP ALL", "SHUF", "SHUF REP", "PGM", "PGM REP"가 MODE

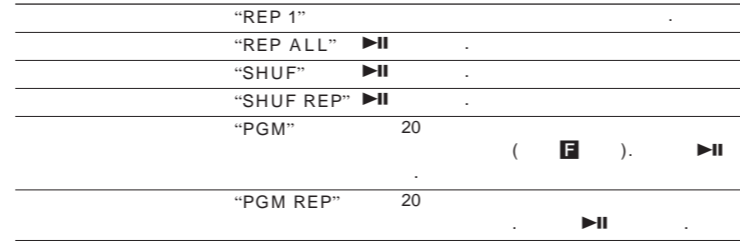


가 MODE

가 DISPLAY·ENT·MEMORY

CD가 ■ , CD가

RADIO BAND·AUTO PRESET

 - 1 가 RADIO BAND·AUTO PRESET ("Tape"가 FUNCTION). OPERATE(POWER)
 - 2 가 TUNE +
- CFD-S550: "FM" → "AM"
CFD-S550L: "FM" → "MW" → "LW".

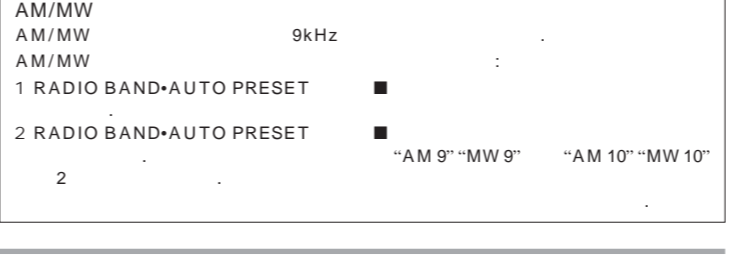

1 RADIO BAND·AUTO PRESET

2

3

가

1 RADIO BAND·AUTO PRESET

2

3



 
1 RADIO BAND·AUTO PRESET

2





TAPE

- 1 TAPE ("Tape"가 FUNCTION). OPERATE(POWER)
- 2 ▶▶ TYPE I()
- 3 ◀▶

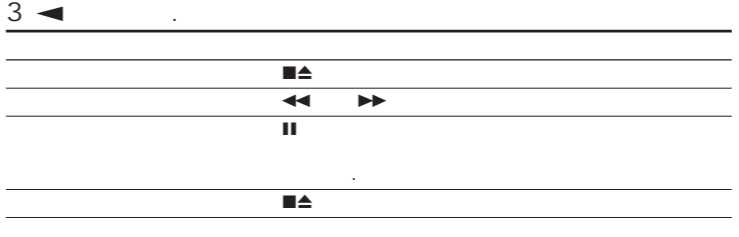

RADIO BAND·AUTO PRESET

  - 1 ▶▶ TYPE I()
- 2 CD CD ("CD")
- 3 RADIO BAND·AUTO PRESET (")
- 4 ▶▶ CD

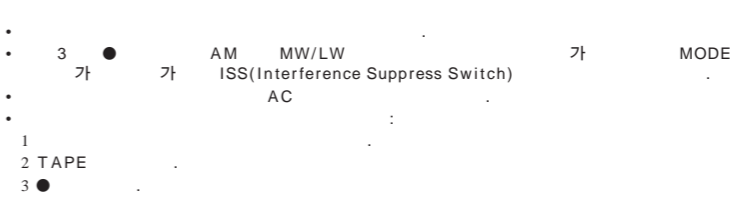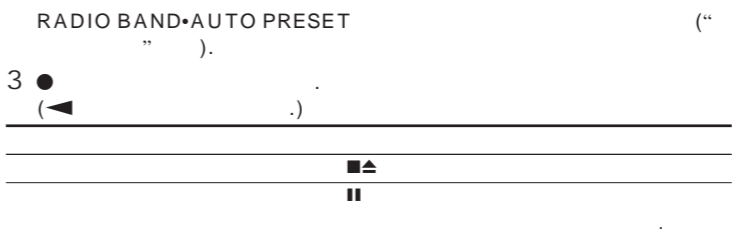

(CFD-S550L)

CD MiniDisc MD CD , TV, VCR

CD MiniDisc DAT

1 OUT(CD) MiniDisc DAT OPTICAL DIGITAL

(CD) OPTICAL DIGITAL OUT

POC-5AB

(MiniDisc)

L 7 (DAT) POC-DA12P

(MiniDisc , DAT) POC-10A

- 2
- 3
- 4 ▶▶ CD

1 *() LINE IN

* MiniDisc 가

* TV, VCR 가 2

2 LINE "Line"

3 LINE IN

OPTICAL DIGITAL OUT(CD) LINE IN