

CFD-S300L: OPERATE  
CFD-S300: POWER

VOLUME +, - (VOL +, -)

 
MEGA BASS  
"MEGA BASS"가

1 SLEEP "SLEEP"  
2 SLEEP  
3 SLEEP

OPERATE (POWER)

**CD**

- 1 CD ( ).  
( OPERATE( POWER) "Cd"가  
FUNCTION )
- 2 CD CD
- 3 ▲ PUSH OPEN/CLOSE CD
- 4 ▶▶

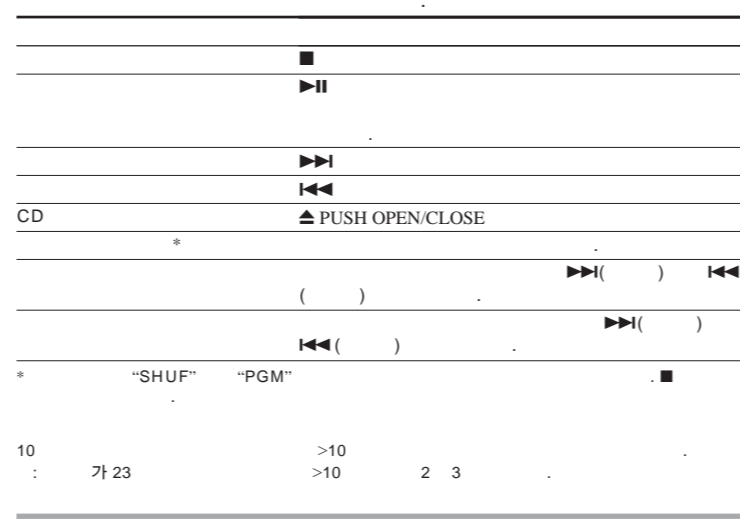

DISPLAY-ENT-MEMORY ( D ).



- "REP 1", "REP ALL", "SHUF", "SHUF REP", "PGM", "PGM REP"가
- "REP1" ▶▶
- "REP ALL" ▶▶
- "SHUF" ▶▶
- "SHUF REP" ▶▶
- "PGM" 20 ( E ).
- "PGM REP" 20 ▶▶

가 MODE

가 DISPLAY-ENT-MEMORY

CD CD ■

**RADIO BAND•AUTO PRESET**

- 1 PRESET ( ). RADIO BAND•AUTO  
CFD-S300: "FM" → "AM"  
CFD-S300L: "FM" → "MW" → "LW"
- 2 가 TUNE +



 
FM "Mono"가 MODE

AM/MW 9 kHz

1 RADIO BAND•AUTO PRESET ■ "AM 9", "MW 9" "AM 10", "MW 10"

2 RADIO BAND•AUTO PRESET ■

- 1 RADIO BAND•AUTO PRESET
- 2 "AUTO"가 RADIO BAND•AUTO PRESET
- 3 DISPLAY•ENT•MEMORY 가

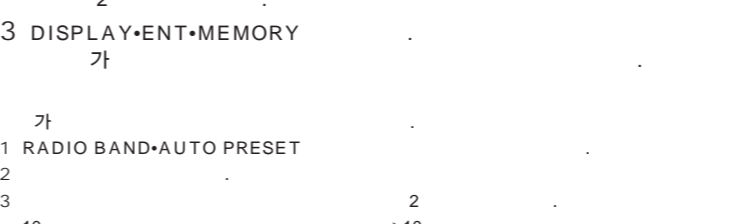


- 1 RADIO BAND•AUTO PRESET
- 2
- 3

- 1 RADIO BAND•AUTO PRESET
- 2

- 1 BAND
- 2 PRESET +



**TAPE**

 - 1 TAPE ( ). "TAPE"  
( OPERATE( POWER) )  
가 FUNCTION )
- 2 ■▲ TYPE I( )
- 3 ◀▶

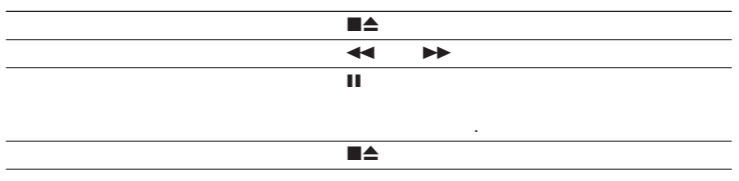

**RADIO•BAND•AUTO PRESET**

  - 1 ■▲ TYPE I( )
- 2 CD CD ("CD " ).
- 3 (▶▶)

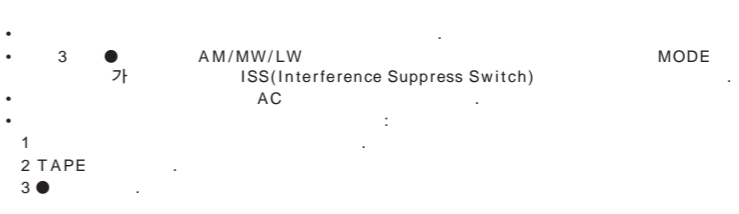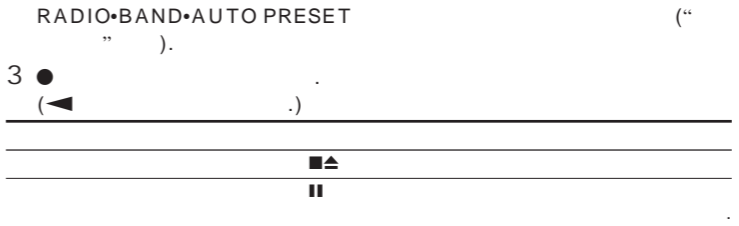

- 1 TAPE
- 2 TAPE
- 3 ●

**(CFD-S300L )**

CD MiniDisc MD CD , TV, VCR

MiniDisc DAT CD

- 1 OUT (CD) \*( ) OPTICAL DIGITAL  
MiniDisc DAT
- 2
- 3
- 4 ▶▶ CD

POC-15AB  
POC-15A

- 1 \*( ) LINE IN
- 2
- 3

- 1 \*( ) LINE IN
- 2 LINE "LINE"
- 3 LINE IN

\* MiniDisc  
\* TV, VCR  
가

OPTICAL DIGITAL OUT(CD) LINE IN  
가