

 
FM/AM Radio ICF-303

Operating Instructions
使用説明書 (背面)

© 2004 Sony Corporation

Printed in China

<http://www.sony.net/>

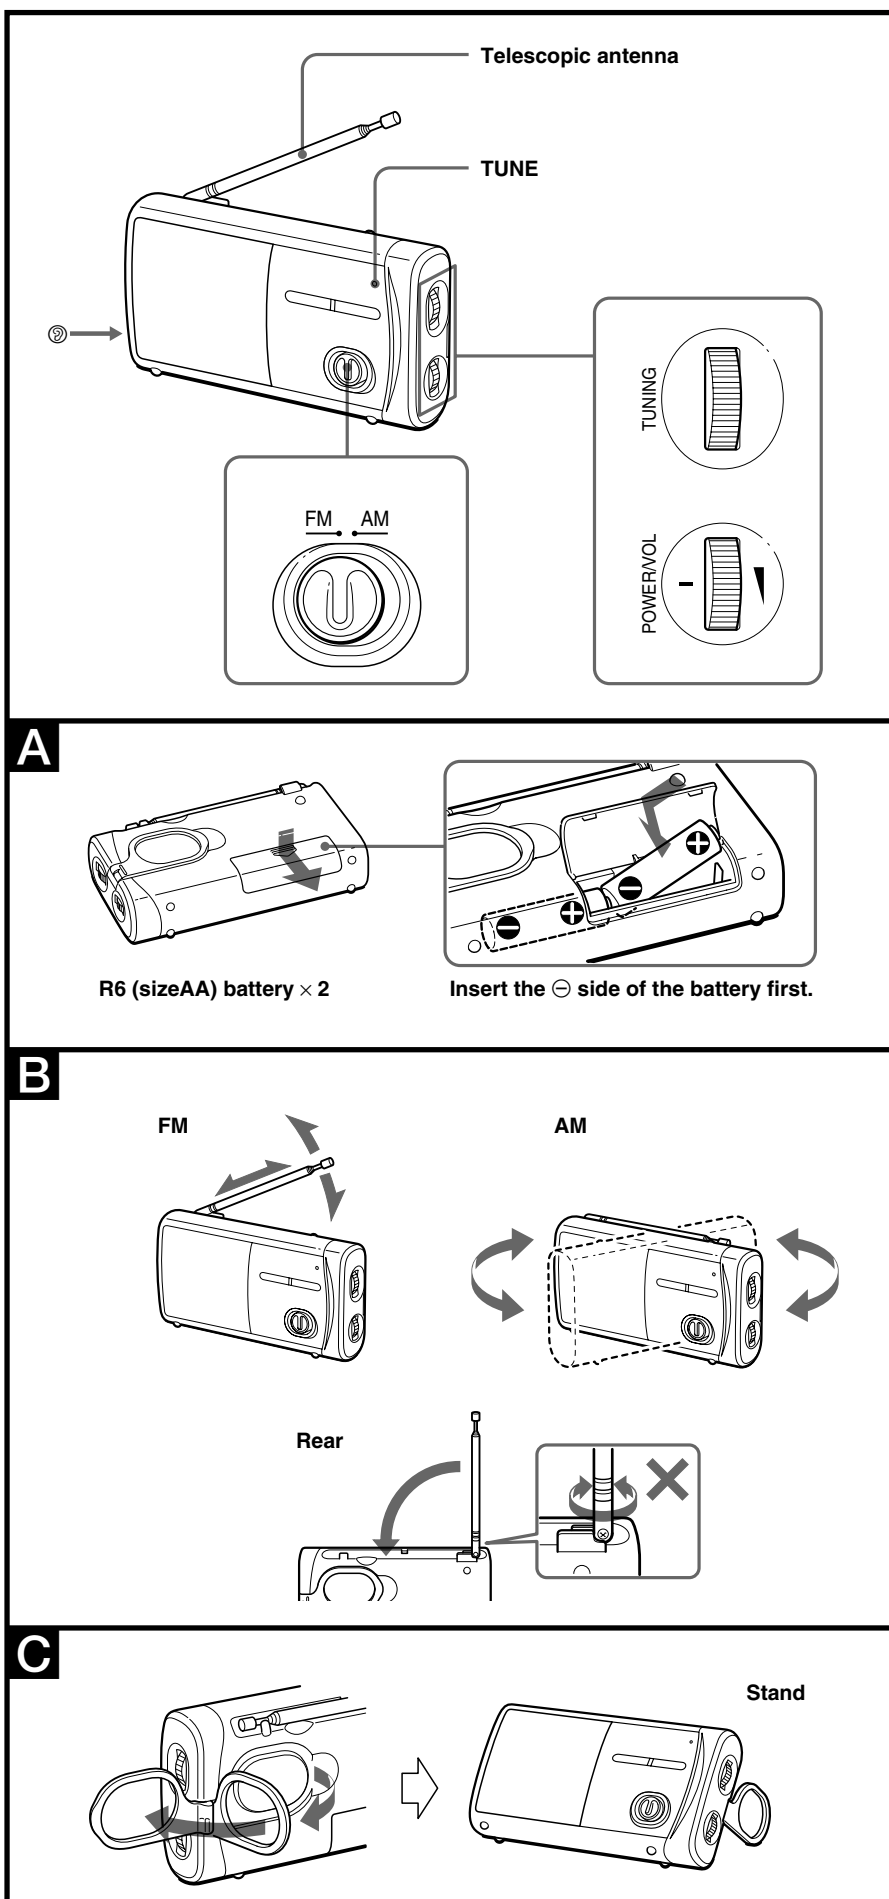

English

Features

- Compact radio
- TUNE indicator for easy tuning

Installing the Batteries

(See fig. A)

- 1 Open the battery compartment lid.
- 2 Insert two R6 (size AA) batteries (not supplied) with correct polarity.
- 3 Close the lid.

Battery life

Using Sony batteries R6 (size AA) :
Approx. 35 hours

Using Sony alkaline batteries LR6 (size AA):
Approx. 95 hours

Replacing batteries

When the sound becomes weak or distorted, replace all batteries with new ones.

Notes on batteries

- Do not charge the dry batteries.
- Do not carry the dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.
- Do not use different types of batteries at the same time.
- When you replace the batteries, replace all with new ones.

Operating the Radio

- 1 Turn up **POWER/VOL** to turn power on and adjust the volume.
- 2 Select a desired band.
- 3 Tune into a station using **TUNING**.
The TUNE indicator lights up when a station is tuned in.

To turn off the radio

Turn down **POWER/VOL** completely until a click is heard.

To listen with an earphone

Connect the earphone to the Ⓞ (earphone) jack.
The speaker is deactivated when an earphone is connected.

Improving the Reception

(See fig. B)

FM: Extend the telescopic antenna and adjust the angle for optimum reception.

AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built into the unit.

Notes

- Adjust the direction of the antenna by holding the bottom of it. The antenna can be damaged when you move the antenna with excessive force.
- Do not rotate the telescopic antenna.



To use the stand

(See fig. C)

- To use the stand as support for the unit, unfold the stand half-way.
- The stand can also be used as a handle to carry the unit. For this purpose, unfold the stand completely.

Precautions

- Operate the unit only on 3 V DC with two R6 (size AA) batteries.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, sand, excessive dust, or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries and have the unit checked by qualified personnel before operating it any further.
- Since a strong magnet is used for the speaker, keep personal credit cards, etc., using magnetic coding away from the unit.
- When the casing becomes soiled, clean it with a soft cloth dampened with mild detergent solution. Never use abrasive cleansers or chemical solvents, as they may mar the casing.
- In vehicles or in buildings, radio reception may be difficult or noisy. Try listening near a window.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Specifications

Frequency range:

FM 87.5-108 MHz
AM 530-1 605 kHz

Speaker

Approx. 6.6 cm (2 5/8 inches) dia., 8 Ω

Output

Ⓞ (earphone) jack (minijack)

Power output

100 mW (at 10 % harmonic distortion)

Power requirements

3V DC, two R6 (size AA) batteries
3V DC, two LR6 (size AA) batteries

Dimensions

Approx. 156.9 × 82.5 × 41.1 mm (w/h/d)
(6 1/4 × 3 1/4 × 1 5/8 inches) incl. projecting parts and controls

Mass

Approx. 309.5 g (10.9 oz) incl. batteries

Design and specifications are subject to change without notice.

中文

特點

- 小型收音機
- 便於調諧的 TUNE 指示燈

安裝電池

(參見圖A)

- 1 打開電池蓋蓋。
- 2 以正確的極性插入兩節 R6 (AA尺寸) 電池 (不附送)。
- 3 關閉電池蓋蓋。

電池使用時間

使用 Sony 電池 R6 (AA尺寸) : 約 35 小時

使用 Sony 鹼性電池 LR6 (AA尺寸) : 約 95 小時

更換電池

當聲音微弱或失真時，請用新電池更換全部電池。

關於電池注意事項

- 切勿對乾電池充電。
- 切勿將乾電池與硬幣或其他金屬物放在一起攜帶。如果電池的正負端子被金屬物意外連接，則會產生熱量。
- 當您打算長時間不使用本機時，請取出電池，以免因電池漏液和腐蝕而損壞本機。
- 切勿同時使用不同類型的電池。
- 更換時必須都用新電池。

使用收音機

- 1 向上轉動 **POWER/VOL** 打開電源並調節音量。
- 2 選擇需要的波段。
- 3 使用 **TUNING** 調入電台。
當電台調入時TUNE指示燈點亮。

若要關閉收音機

將 **POWER/VOL** 完全向下轉動，直至聽到喀嗒聲。

若要用耳機收聽

將耳機連接至 Ⓣ (耳機) 插孔。
當連接了耳機，揚聲器則被關閉。

提高接收品質

(參見圖B)

FM: 拉出伸縮式天線並調整角度以獲得最佳接收品質。

AM: 水平轉動收音機，直至最佳接收品質。本收音機具有內建鐵氧體磁棒天線。

注意

- 請握住天線的底部調整天線方向。當移動天線時用力過度，則會損壞天線。
- 切勿轉動伸縮式天線。



若要使用支架

(參見圖C)

- 若要使用支架支撐收音機，請將支架打開一半。
- 此支架也可以在攜帶時作為手柄使用。作為手柄使用時，請將支架完全打開。

預防措施

- 本收音機只能用兩節 R6 (AA尺寸) 電池，在 3V DC 電壓下使用。
- 切勿將本收音機遺留在熱源附近、或受太陽直射位置、沙灘、多塵或機械振動之處。
- 一旦有任何固體異物或液體進入本收音機，請取出電池並將本收音機交由專業人員檢查後方可繼續使用。
- 由於揚聲器使用了強磁鐵，請將使用磁性解碼的個人信用卡等物件遠離本收音機。
- 如果外殼弄髒，請用軟布沾中性清潔劑進行清潔。切勿使用擦洗劑或化學溶劑，這些都可能損壞外殼。
- 在車輛或大樓內，收音機接收可能有困難或有干擾。請嘗試靠窗收聽。

如果有關於本收音機的任何疑問或問題，請與附近的 Sony 銷售商聯絡。

規格

頻率範圍:

FM 87.5-108 MHz

AM 530-1 605 kHz

揚聲器

直徑約 6.6 cm, 8Ω

輸出

Ⓣ (耳機) 插孔 (小型插孔)

功率輸出

100 mW (10 % 諧波失真時)

電源要求

3V DC, 兩節 R6 (AA尺寸) 電池

3V DC, 兩節 LR6 (AA尺寸) 電池

尺寸

約 156.9 × 82.5 × 41.1 mm (寬/高/厚)

包括突出部分和控制器

質量

約 309.5 g 包括電池

設計和規格如有變更，恕不另行通知。

 
伸縮式天線

TUNE

TUNING

POWER/VOL


A

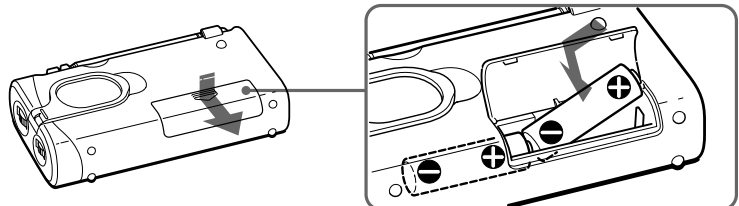


R6 (AA尺寸) 電池 × 2

首先將電池的 ⊖ 一側插入。

 B

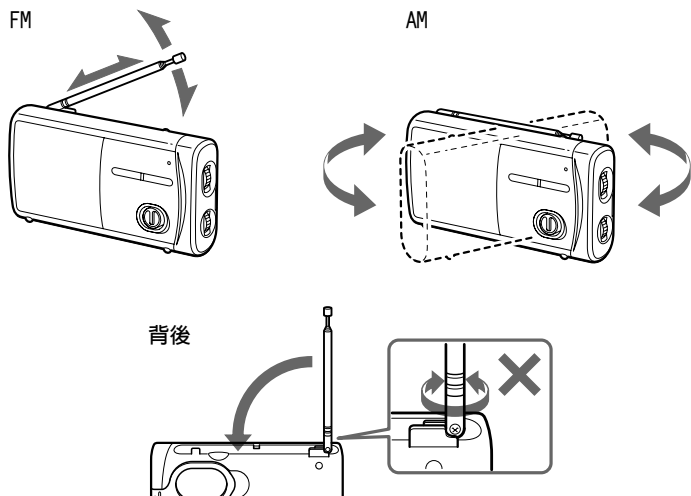

C

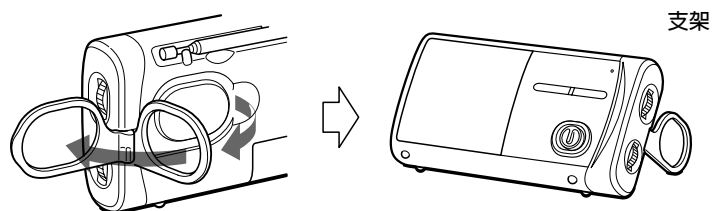 

支架