

English**Precautions**

When using the player, remember to follow the precautions below in order to avoid warping the cabinet or causing the player to malfunction.

- Do not expose the player to water. The player is not waterproof.



Remember to follow the precautions below.

- Be careful not to drop the player into a sink or other container filled with water.
- Do not use the player in humid locations or bad weather, such as in the rain or snow.
- Do not get the player wet.

If you touch the player with wet hands, or put the player in a damp article of clothing, the player may get wet and this may cause a malfunction of the player.

- Make sure not to sit down with the player in your back pocket.



- When you unplug the headphone from the player, make sure to hold the headphone plug to unplug it. Pulling the headphone cord itself may cause damage to the headphone cord.

Further information about precautions to be observed are included in the “Operation Guide (PDF file).”

Refer to it along with this manual.

