





4-136-137-11(1)

# Quick Setup Guide


DAV-HDX285

## 1 Connecting the speakers

Connect the speaker cords to match the color of the SPEAKER jacks of the unit.

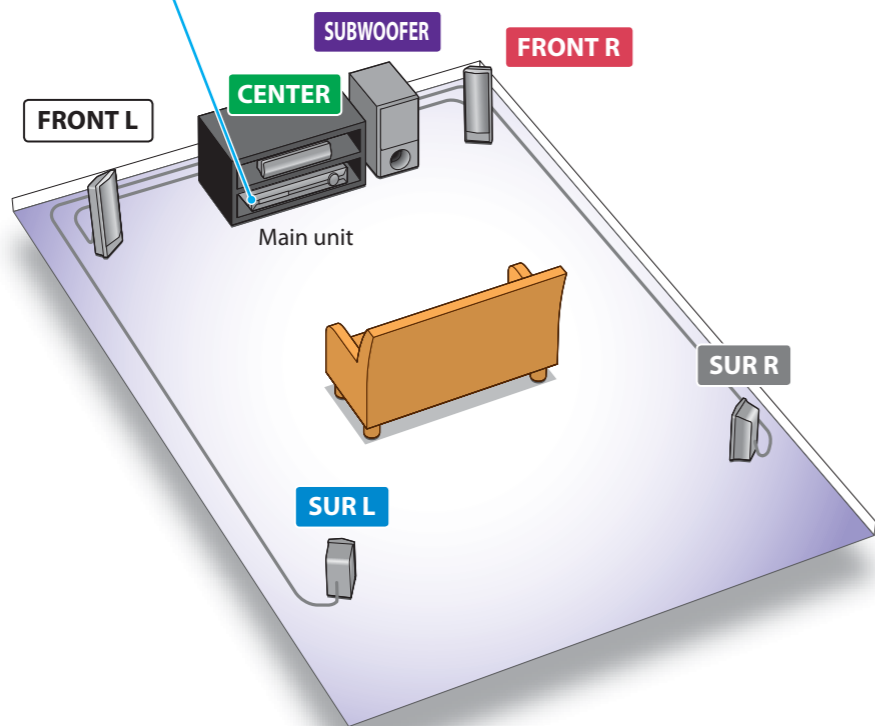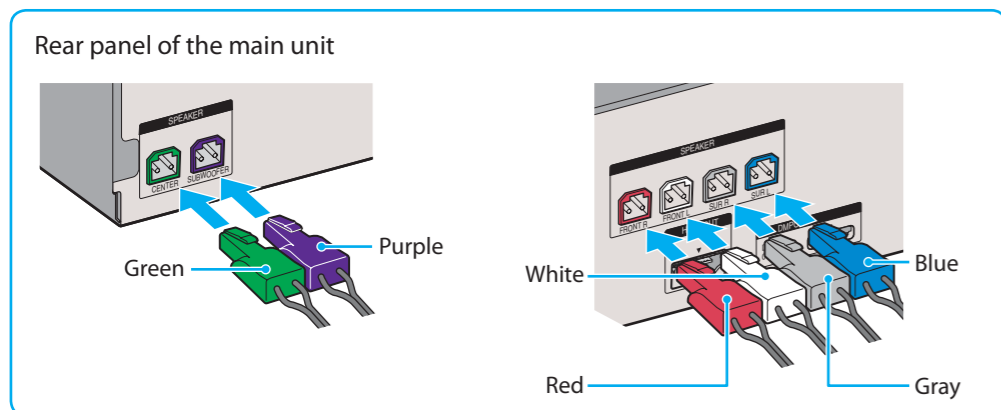

To connect speaker cords to the speaker

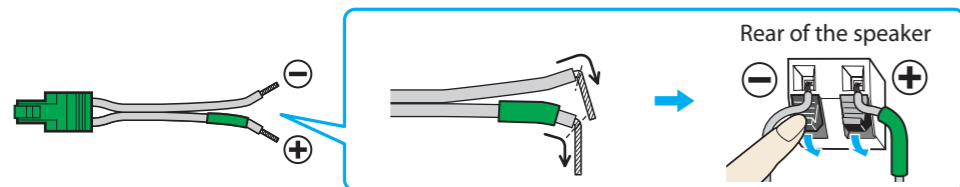


## 2 Connecting the TV


Depending on the jacks on your TV, select the video and audio connection method.

### Video connection method


#### Method 1

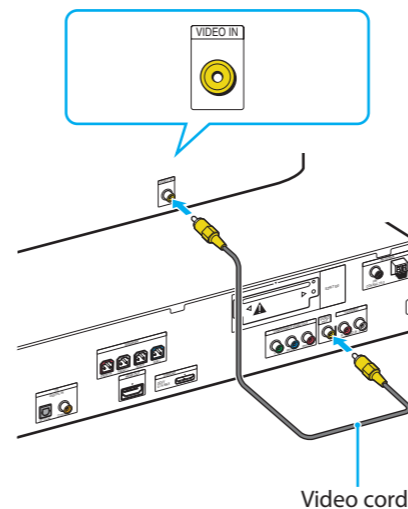

#### Method 2

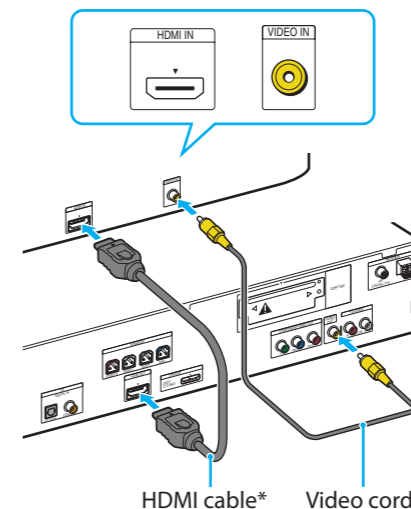


#### Method 3

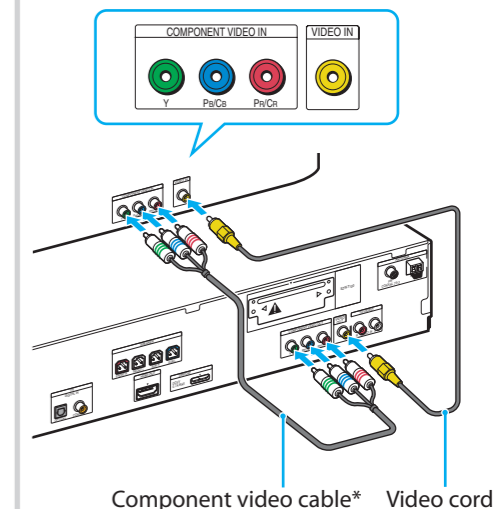


\*Not supplied

### Audio connection method


#### Method 1

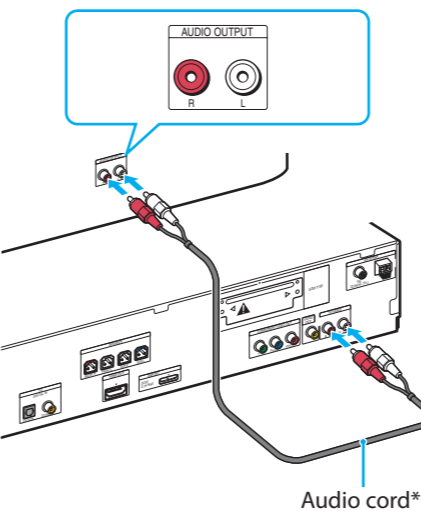

#### Method 2

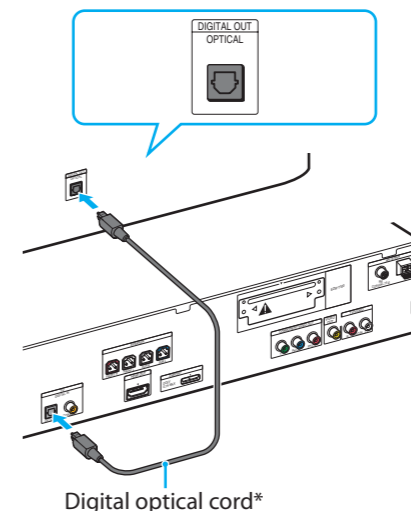

#### Method 3

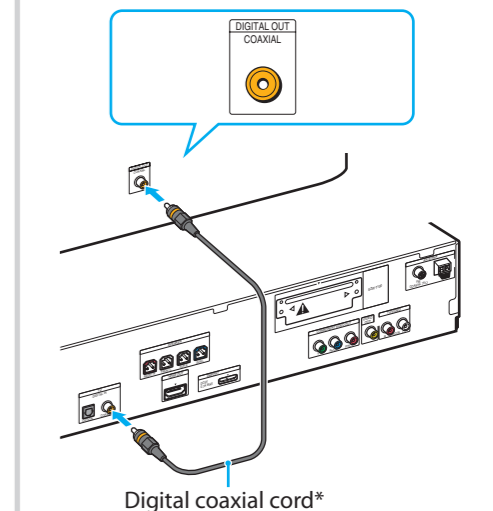


\*Not supplied

# 3 Performing the Quick Setup


Note

Do not insert a disc before performing the Quick Setup.

## 1 Connect the AC power cord.

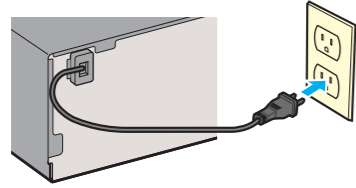


## 2 Turn on the power of the main unit and TV.

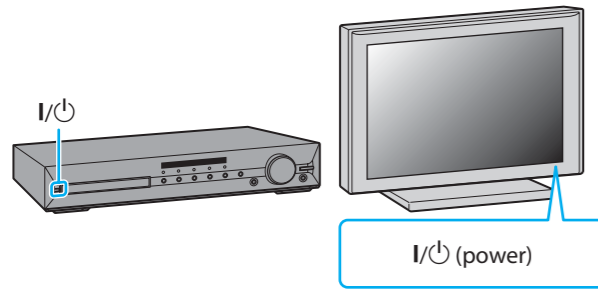

## 3 Switch the input selector on your TV to display "SONY Home Theatre System."

## 4 Set each following item, using ←/↑/↓/→ and +.

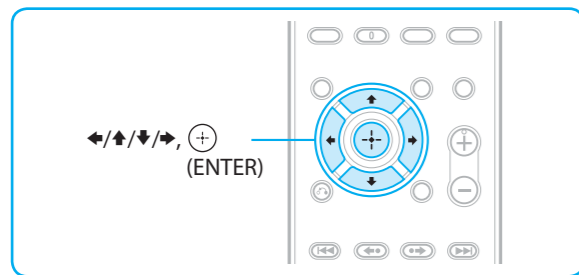


Note


Displayed items vary depending on the area.




Select an on-screen language.

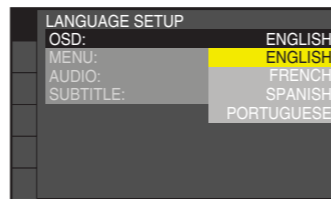


Select the aspect ratio of the connected TV.

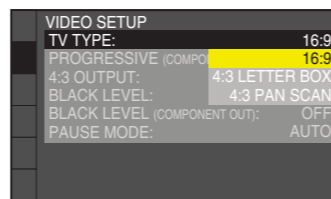


Select [ON] when you connect the main unit and the TV with an HDMI cable.

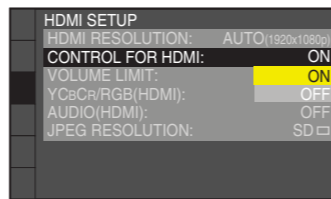


Select the speaker formation.

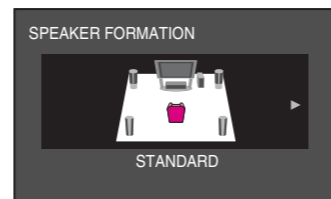


Connect the calibration mic and set it at the listening position.

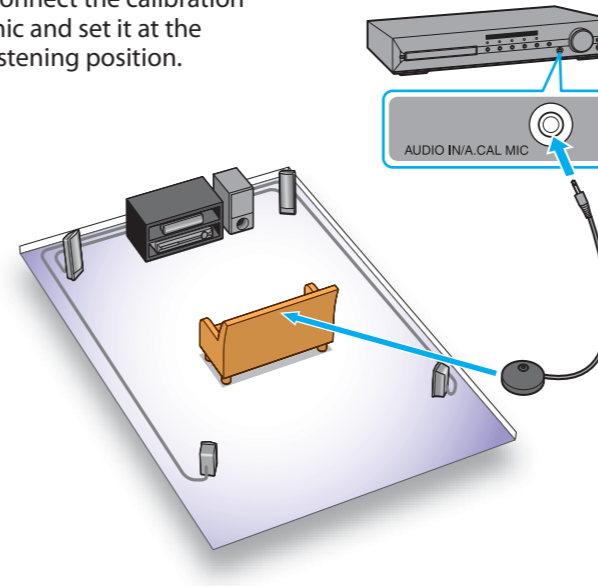

Select [YES] to perform [AUTO CALIBRATION].

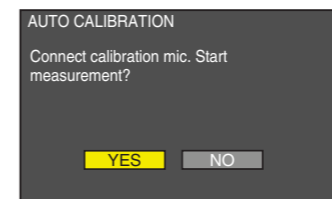


Select [YES] to save the measurement results.

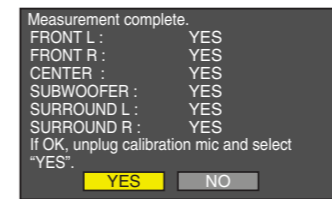


# Listening to TV sound from all speakers


## 1 Press FUNCTION +/- to display "TV/VIDEO."

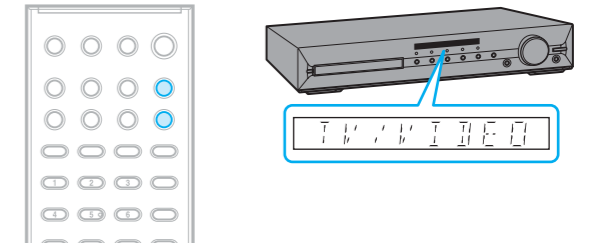



## 2 Press SYSTEM MENU.

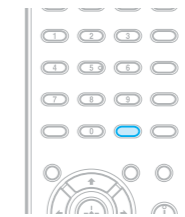

## 3 Press ↑/↓ to display "DEC. MODE," then press +.

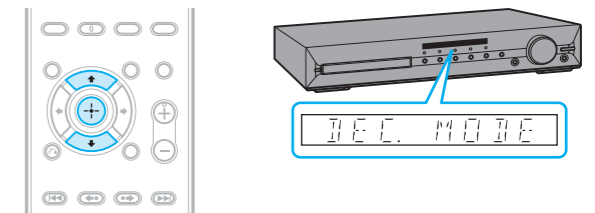

## 4 Press ↑/↓ to display "PRO LOGIC," then press +.

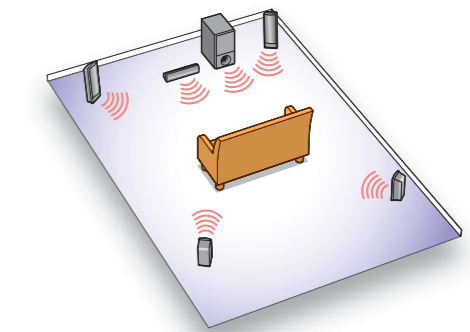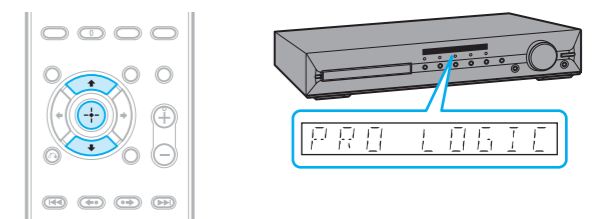

## 5 Press SYSTEM MENU to exit the menu.