

 
## About the Print Packs

To print an image, you need a color print pack containing print paper and ink ribbon. Please use a Sony optional color print pack designed for the printer. Other types of print packs may cause malfunctions.


The following print packs are available:

### SVM-F40P

You can make 40 sheets of post card (4 × 6 inch/10 × 15 cm) size print. (One ink ribbon, 20-sheet-pack × 2)



Ink ribbon for 40 prints


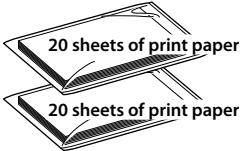 


20 sheets of print paper


20 sheets of print paper

### SVM-F120P (The type of 120-sheet pack may differ depending on the dealer.)

You can make 120 sheets of post card (4 × 6 inch/10 × 15 cm) size print. ((Three ink ribbons each for 40 prints, 20-sheet-pack × 6) or (Two ink ribbons each for 60 prints, 20-sheet-pack × 6))

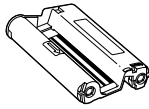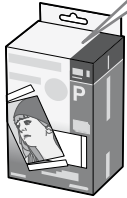

Ink ribbon for 40 prints

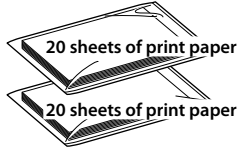


20 sheets of print paper


20 sheets of print paper

× 3

or

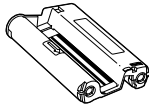

Ink ribbon for 60 prints

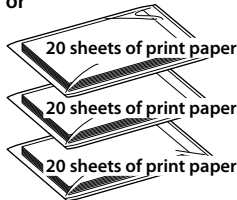

20 sheets of print paper

20 sheets of print paper

20 sheets of print paper

× 2