




快速设定指南/Quick Setup Guide


DAV-TZ510/TZ710

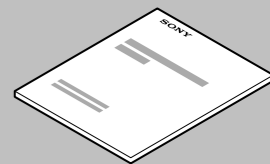

详细信息，请参阅使用说明书。
For details, refer to the Operating Instructions.


1 连接扬声器/Connecting the speakers

首先，装配扬声器（请参阅扬声器安装指南），然后连接扬声器导线，使其与装置上SPEAKERS插孔的颜色相符。
First, assemble the speakers (refer to the Speaker Installation Guide), and then connect the speaker cords to match the color of the SPEAKERS jacks of the unit.

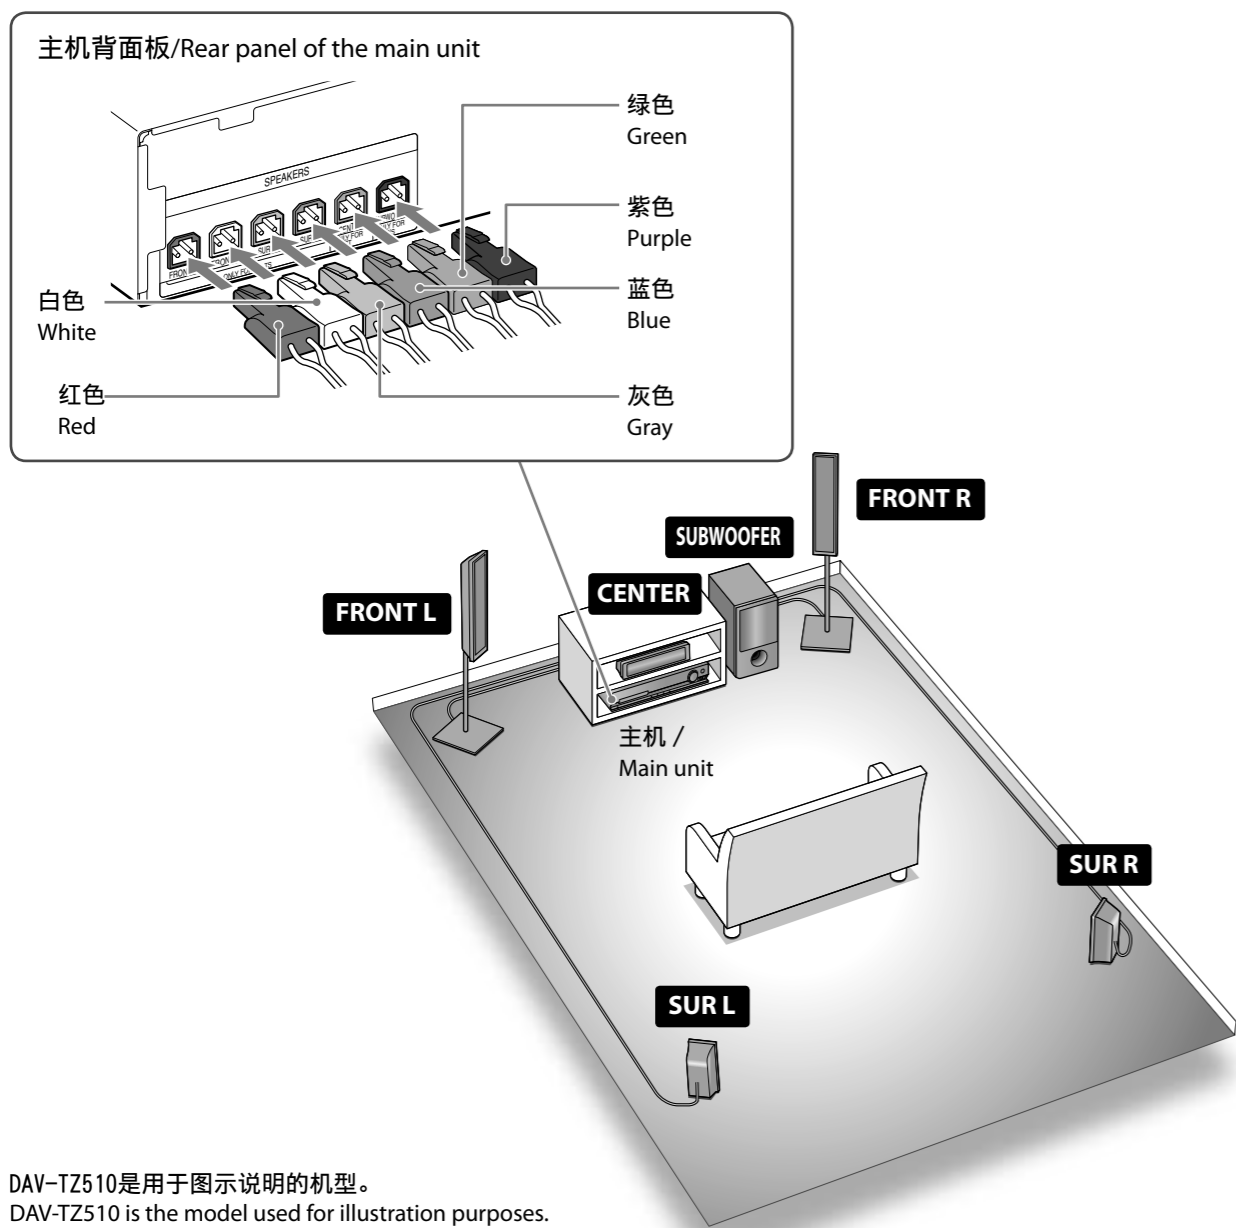

DAV-TZ510是用于图示说明的机型。
DAV-TZ510 is the model used for illustration purposes.


将扬声器导线连接至扬声器/
To connect speaker cords to the speaker

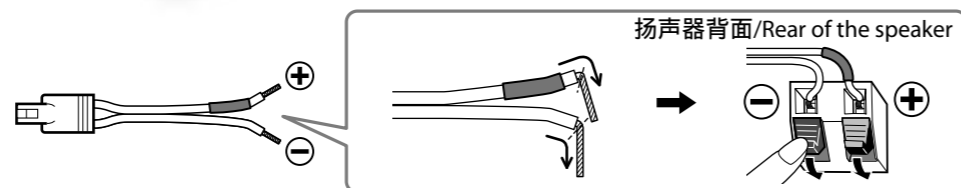

2 连接电视机/机顶盒/Connecting your TV/set-top box


视电视机或机顶盒上的插孔而定，选择视频和音频的连接方式。
Depending on the jacks on your TV or set-top box, select the video and audio connection method.

将视频连接至电视机/Connecting the video to your TV

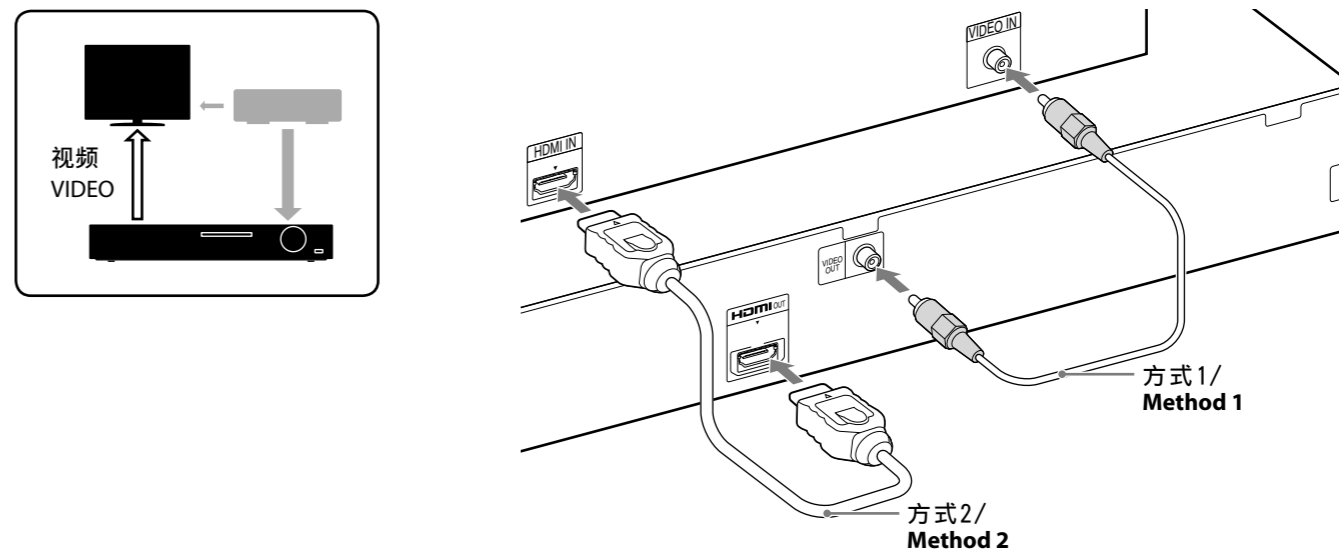

连接来自机顶盒的音频/Connecting the audio from your set-top box

如果不使用机顶盒，请参阅使用说明书中的“连接电视机 / 机顶盒”。
If you do not use a set-top box, refer to “Connecting your TV/set-top box” in the Operating Instructions.

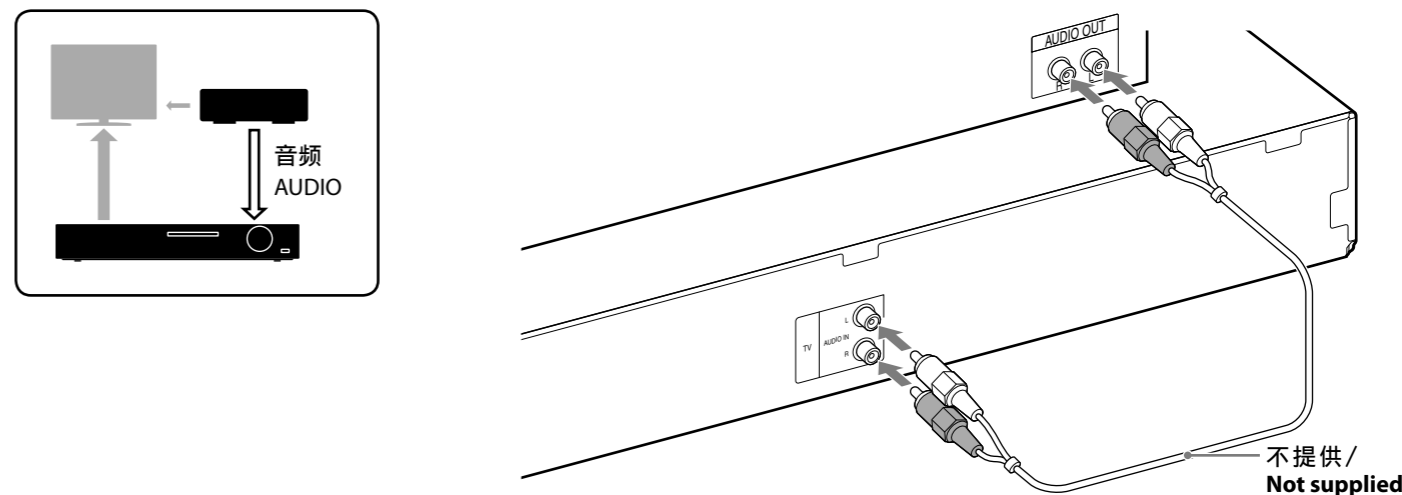

3 启用无线传输/Performing the Quick Setup


⚠ 执行快速设定之前请勿插入光盘。

⚠ Do not insert a disc before performing the Quick Setup.

1 连接交流电源线。
墙壁插座的形状因地区而异。


Connect the AC power cord.

The shape of the wall outlet differs depending on the area.

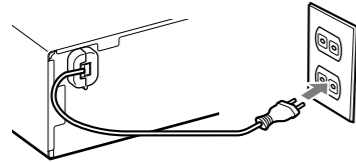

2 打开主机和电视机的电源。

Turn on the power of the main unit and TV.

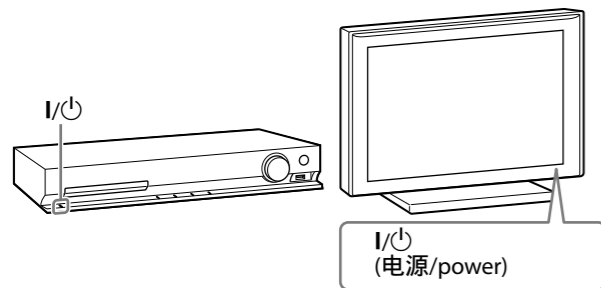



3 切换电视机上的输入选择器以显示“SONY Home Theatre System”。

Switch the input selector on your TV to display “SONY Home Theatre System.”


4 使用 ←/↑/↓/→ 和 ⊕ 设定以下每个项目。
视地区而定，显示项目会有所不同。

Set each following item, using ←/↑/↓/→ and ⊕.


Displayed items vary depending on the area.

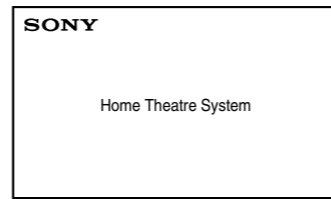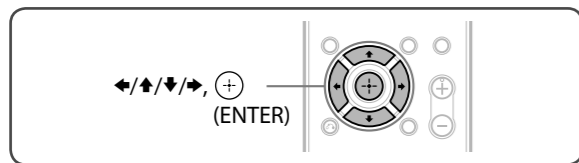



选择画面语言。
Select an on-screen language.

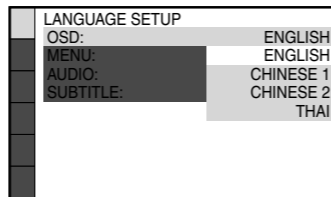




选择所连接电视机的纵横比。
Select the aspect ratio of the connected TV.

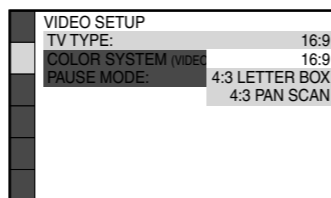

 使用 HDMI 电缆连接主机和电视机时，请选择 [开]。
Select [ON] when you connect the main unit and the TV with an HDMI cable.

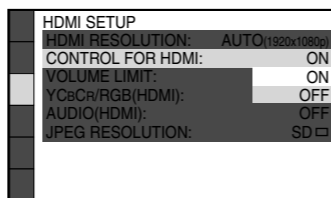


选择扬声器架构。
Select the speaker formation.

 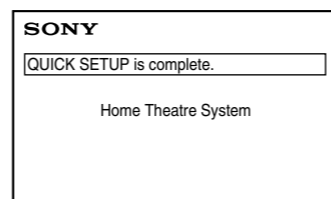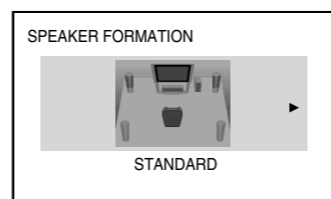

从所有扬声器聆听电视机声音/Listening to TV sound from all speakers


1 按 TV。

Press TV.

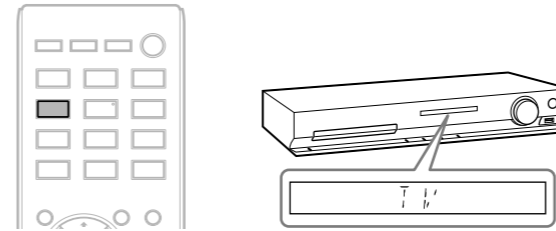


2 按 SYSTEM MENU。

Press SYSTEM MENU.

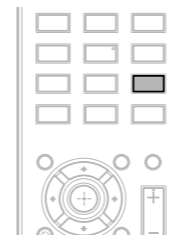


3 按 ↑/↓ 显示“SUR.SETTING”，然后按 ⊕。

Press ↑/↓ to display “SUR.SETTING,” then press ⊕.

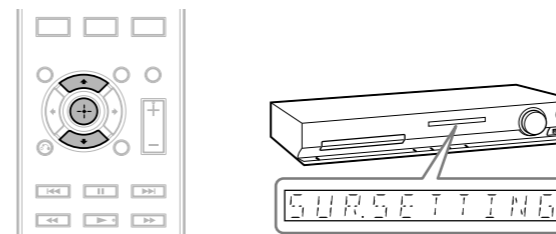

4 按 ↑/↓ 显示“PRO LOGIC”，然后按 ⊕。

Press ↑/↓ to display “PRO LOGIC,” then press ⊕.

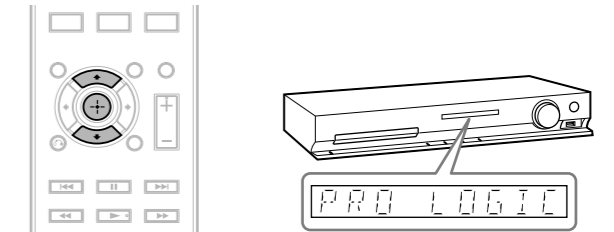

5 按 SYSTEM MENU 退出菜单。

Press SYSTEM MENU to exit the menu.

