




CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Snelstartgids / Guida all'avvio / Guía de inicio rápido / Guia de Início Rápido / Οδηγός εκκίνησης / Startvejledning / Käynnistysopas / Uppstartguide / Instrukcja uruchamiania / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Başlangıç Kılavuzu

1


A

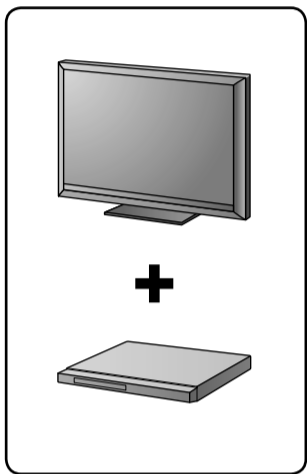


■ SCART

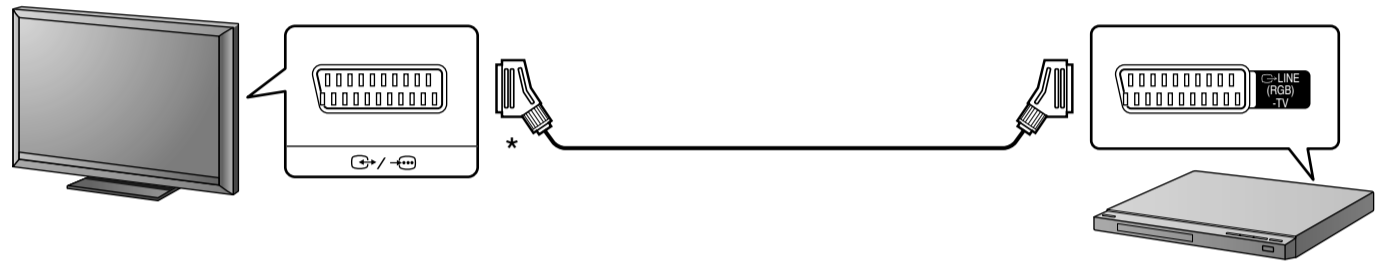


B

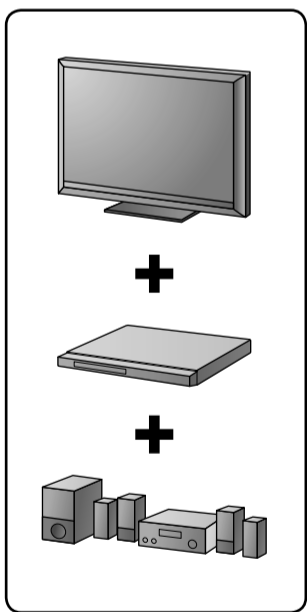

■ COAXIAL

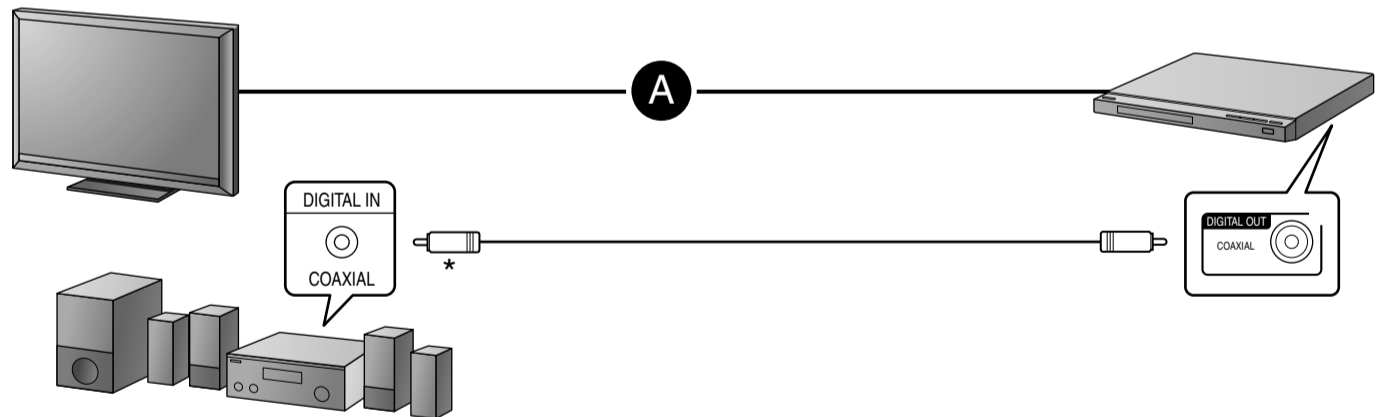


■ AUDIO

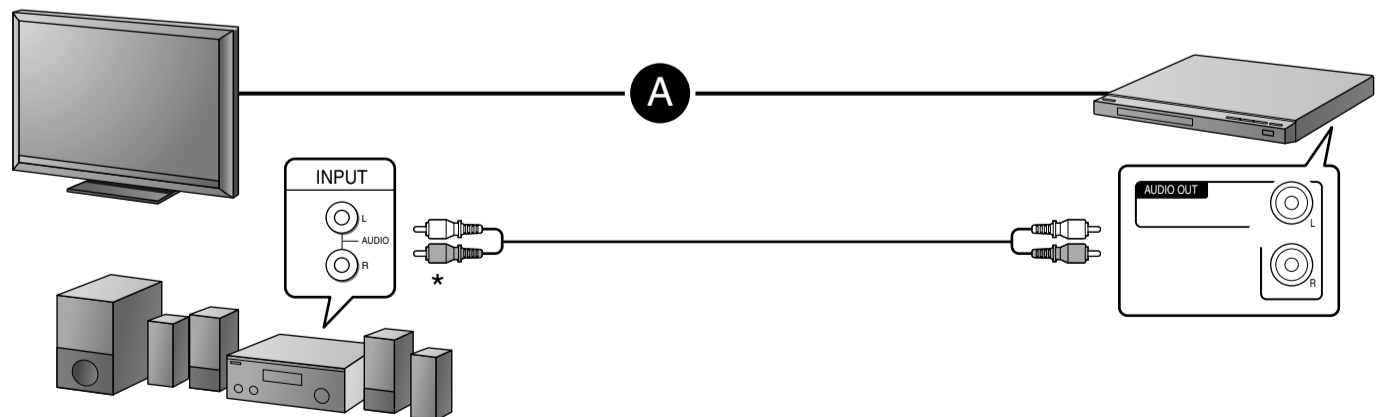


* Not supplied / Non fourni / Nicht mitgeliefert / Niet bijgeleverd / Non in dotazione / No suministrado / Não fornecido / δεν παρέχεται / Medfølger ikke / Ei sisälly vakiovarusteisiin / Medföljer ej / Nie należy do wyposażenia / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Birlikte verilmez

2



1

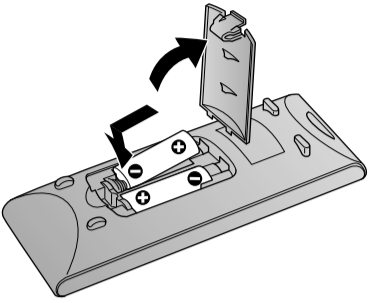

2

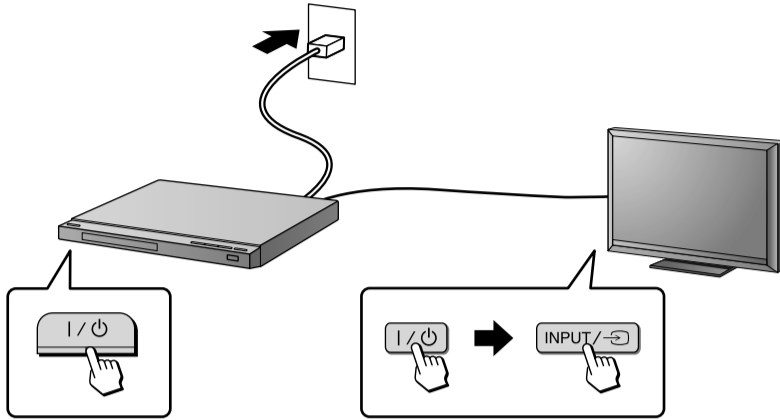


3

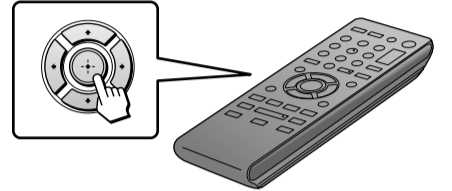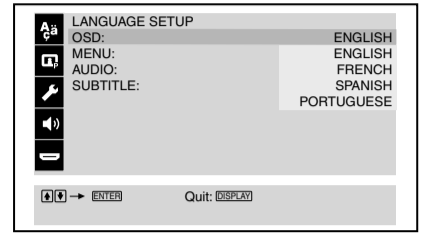

3

1

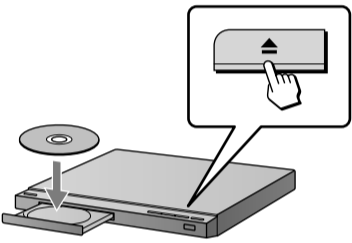

2

