 


SONY®

Please read this first.

 
1.5 N·m
{15 kgf·cm}

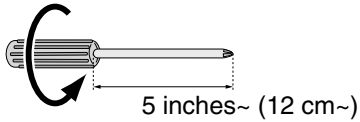


CAUTION

Tighten the supplied screws securely with a specified driver.

1


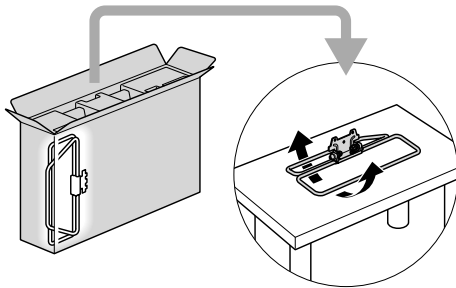


2


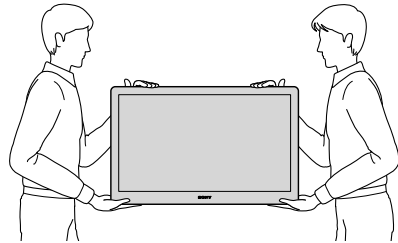 


3

 
 
NSX-24GT1

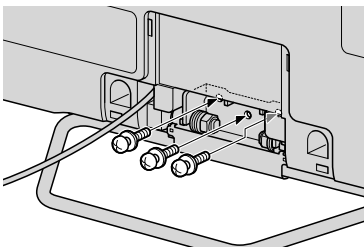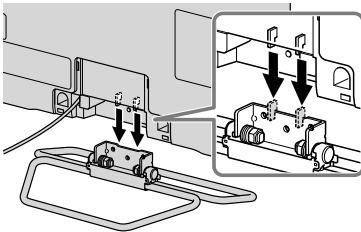

NSX-32GT1

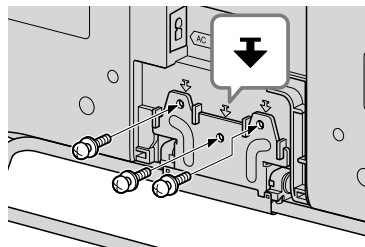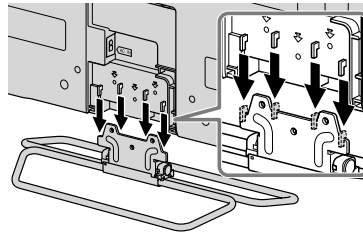  


NSX-40/46GT1

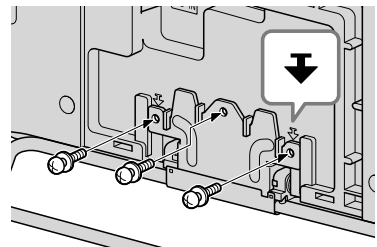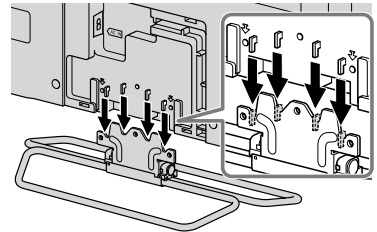  


4

 NSX-32GT1

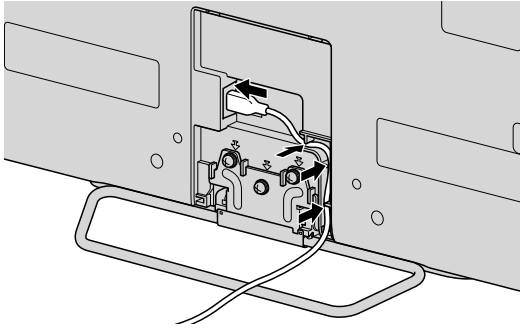


NSX-40/46GT1

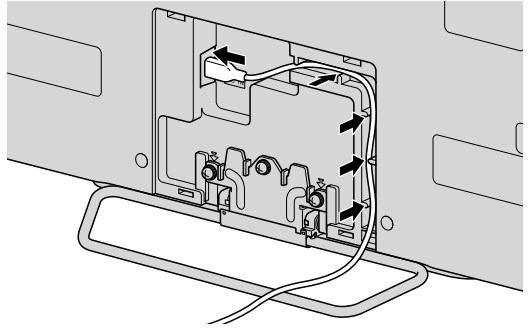 


5


 
NSX-24GT1

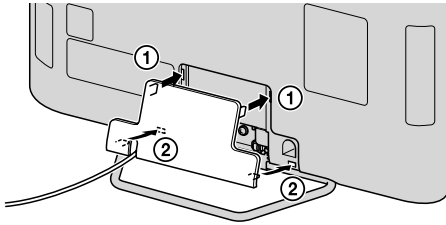

NSX-32/40/46GT1

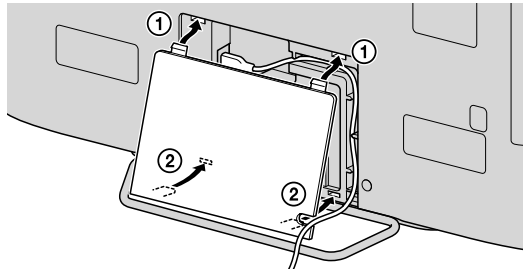 

  When adjusting the view angle, hold the front side of the stand and move the top of the TV.

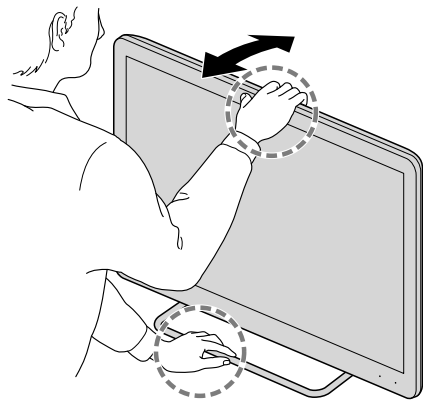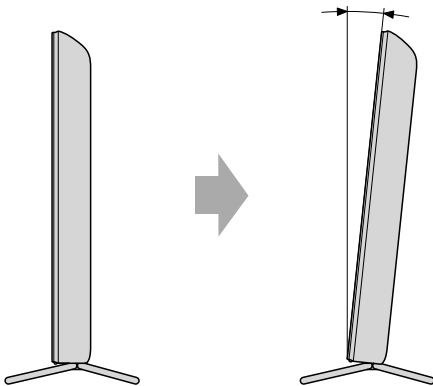

4-197-996-12(1)

