

SONY®

KV-14FV1U
KV-21FV1U

Checking the Accessories Supplied

1

Connecting an Indoor Aerial (only for KV-14FV1U)

3

Quick Start Guide

Thank you for purchasing this Sony product.

After following this step by step guide you will be able to:

Insert Batteries into the Remote Control.

Connect the Aerial to your TV.

Select the language of the menu screens.

Tune your TV.

Change the Programme order of the TV channels.

Adjust Automatically clock settings.

View TV Programmes.



Remote Control
RM-C815



2 Batteries



1 Loop aerial
(only for KV-14FV1U)

i For a better reception we recommend you connect an external aerial. However, if your local UHF signal is strong, you can connect the supplied loop aerial as follows:

- 1 Insert the loop aerial into the holder on top of the Video TV until it clicks.
- 2 Connect the aerial connector to the aerial socket T on the rear of the set.
- 3 After turning on the Video TV, adjust the aerial for optimum reception.




Connecting an Outdoor Aerial

4

Inserting Batteries into the Remote Control

2

i Connecting cables are not supplied.

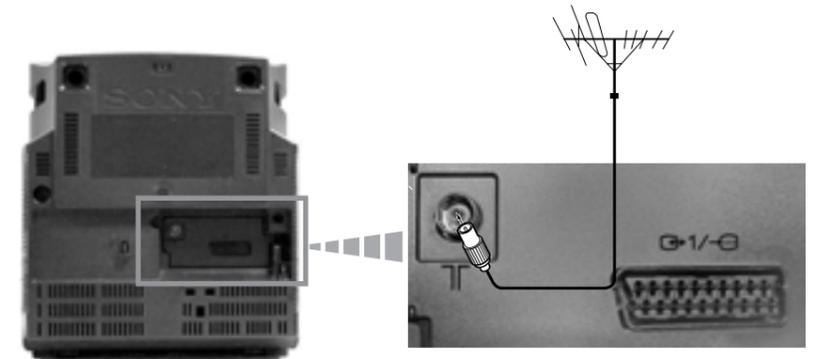

FD Trinitron Colour Video Television

VHS Video
combo

VIDEOplus+


VHS

PAL NTSC 4.43

4-205-769-01 (1)

Switching on the Video TV

5

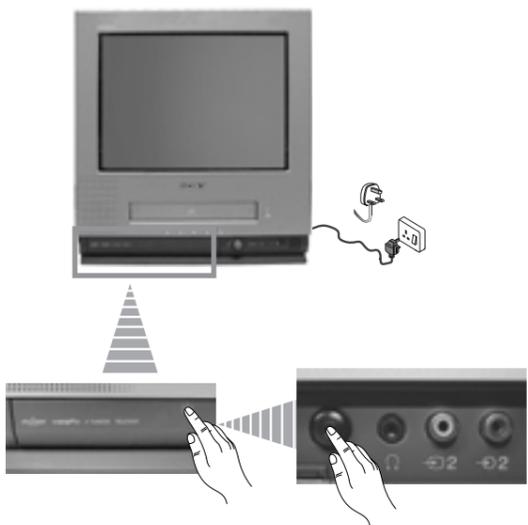

Connect the TV plug to the mains socket (220-240V AC, 50Hz)

Press on the mark \neq on the front of the Video TV to reveal the front control panel.

Press the **⓪** main on/off button on the TV set to turn on the Video TV.

Automatically Tuning the TV

You need to tune the Video TV to receive channels (TV Broadcast).

By following the instructions below, this TV automatically searches and stores all available channels for you.

7



Do you want to start automatic tuning?
Yes
No

Press the **OK** button on the remote control to select **Yes**.



Please confirm that aerial is connected
Confirm

Confirm that the aerial is connected and then press the **OK** button on the remote control.

Auto Tuning
Programme: 01
System: 1
Channel: C21
Searching...

The Video TV starts to automatically search and store all available channels (TV Broadcast) for you.

⚠ This procedure could take some minutes. Please be patient and do not press any button while the automatic tuning is in progress. Otherwise the automatic tuning will not be completed.

Programme Sorting
Programme: 01 -> 01
Confirm:

When the automatic tuning is finished, the Programme Sorting menu appears on the screen.

Changing the Programme Order of the TV channels

By following the instructions below, you can rearrange the order in which the channels appear on the screen.

8

a) If you do not wish to change the channel order:



Programme Sorting
Programme: 01 -> 01
Confirm:

- Press the **OK** button on the remote control and go to step 9.

b) If you wish to change the channel order:



Programme Sorting
Programme: 01 -> 01
Confirm:



Programme Sorting
Programme: 02 -> 04
Confirm:

- Press the **PROGR +** or **-** button to select the programme number with the channel (TV Broadcast) you wish to rearrange. This TV Broadcast will appear on the screen.
- Press the **⬇** or **⬆** button to select the new programme number position for your selected channel (TV Broadcast), then press the **OK** button.
- **i** The word **Confirm** is highlighted for a few seconds to confirm that the new programme position is stored.
- Repeat steps b)1 and b)2 if you wish to change the order of the other channels.
- When you have finished rearranging the order of the channels, press **OK**.

Selecting the language of the menu screens

This Video TV set works with menu screens. By following the instructions below, you can select the desired language of the menu screens.

6



The first time that you switch on your TV, the Language menu appears automatically.



Language
English
Deutsch
Netherlands
Français
Italiano
Español
Portugués
Select Language:

Press the **⬇** or **⬆** button on the remote control to select the language, then press the **OK** button on the remote control to confirm your selection.

Do you want to start automatic tuning?
Yes
No

The Automatic Tuning menu appears on the TV screen in the selected language.

Adjusting Automatically the Clock Settings

9

Auto Clock Set
Adjusting Clock...

The Video TV automatically adjusts the clock setting, and after a few seconds date and time settings will be displayed.

Auto Clock Set
23.09.2000 SAT 12:00
Exit: OK

If you want to change the time settings, you can adjust it manually through the menu system (for details, see "Setting the Clock Manually" section of the instruction manual).



Press the **MENU** button to remove the menu from the screen.

👍 Your Video TV is now ready for use.

Your television stations are now stored in your television's memory.