

 
*Micro Hi-Fi  
Component  
System*

---



*CMT-EX5*

가



1  
(CLASS 1 LASER)

가



ENERGY STAR®

ENERGY STAR®  
Sony Corporation  
ENERGY STAR®



..... 4  
 ..... 5



..... 6  
 ..... 7  
 ..... 8  
 ..... 8

CD

CD ..... 9  
 CD ..... 9  
 — / / ..... 9  
 CD ..... 10  
 — ..... 10  
 CD ..... 11  
 — ..... 11



..... 13

— / ..... 15  
 ..... 16  
 — ..... 16  
 (RDS)\* ..... 16  
 ..... 16



— DSG ..... 17



— ..... 17  
 — ..... 18



— ..... 19  
 ..... 19  
 ..... 20



..... 21  
 ..... 22  
 ..... 22



..... 23  
 ..... 25



..... 25  
 ..... 27

\*

TUNER/BAND **9** (13 - 15, 24)  
 ↑ / ↑

**A - U**

 
DISPLAY **11** (16, 19, 20)  
 FUNCTION **10** (9 - 13, 15,  
 22, 24)  
 TUNER/BAND **9**  
 (13 - 15, 24)  
 TUNING +/- **6** (13 - 15)

**V - Z**

VOLUME +/- **5** (18)  
**2** (23)  
**12**  
**4**

I/⏻ ( ) **1**

▲ **3**  
 ◀▶ **6**  
 ◀▶ **6**  
 ■ **7**  
 ▶▶ **8**

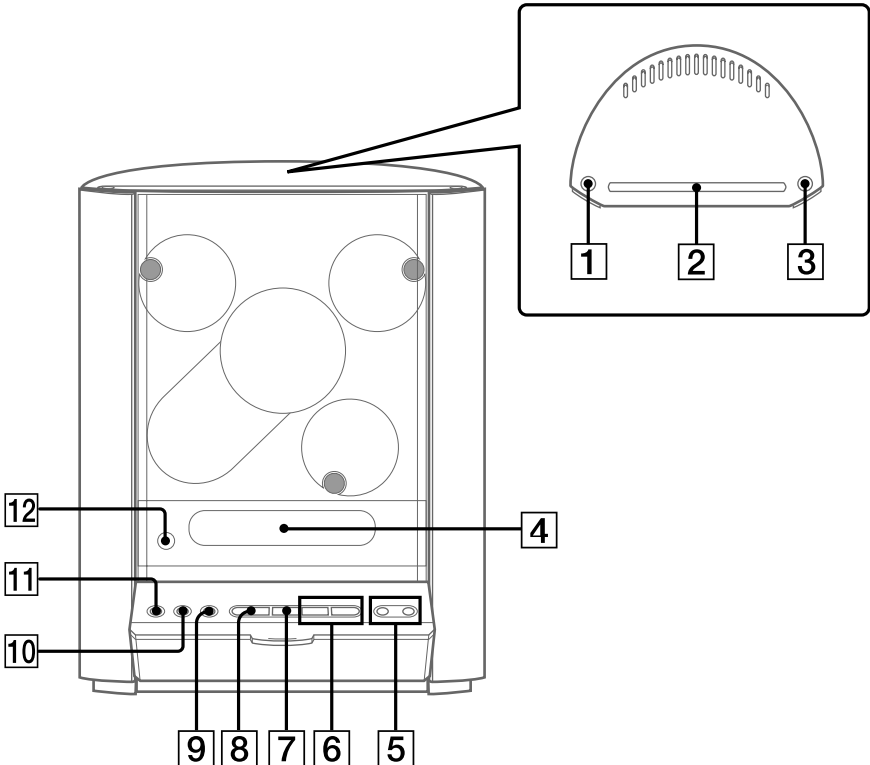


**A - M**

- BASS +/- **17** (17)
- CD ► **22** (9 - 11, 23)
- CLEAR **9** (10 - 12, 16)
- CLOCK/TIMER SELECT **6** (19)
- CLOCK/TIMER SET **7** (8, 18)
- CURSOR ←/→ **23** (8, 12)
- DIMMER **18** (19)
- DISPLAY **25** (16, 19, 20)
- DSG **14** (17)
- ENTER/YES **8** (8, 10, 12 - 14, 16, 18, 19, 22)
- FM MODE **13** (15, 24)
- FUNCTION **19** (9 - 13, 15, 22, 24)
- MENU/NO **10** (12 - 14, 16, 22)

**N - Z**


- NAME EDIT/SELECT **3** (11, 16)
- PLAY MODE **20** (9 - 11, 13, 23, 25)
- REPEAT **13** (10)
- SCROLL **5** (12, 20)
- SLEEP **2** (17)
- SURROUND **15** (17)
- TIME **26** (11, 20)
- TREBLE +/- **16** (17)
- TUNER BAND **21** (13 - 15)
- TUNING MODE **20** (13 - 15)
- VOL +/- **12** (18)
- / **24** (10, 12, 15)

 - ▲ **1**
- I/⏻ ( ) **4**
- ◀◀/▶▶ **11**
- +/- **11**
- ⏸ **22**
- **22**
- ◀◀/▶▶ **23**

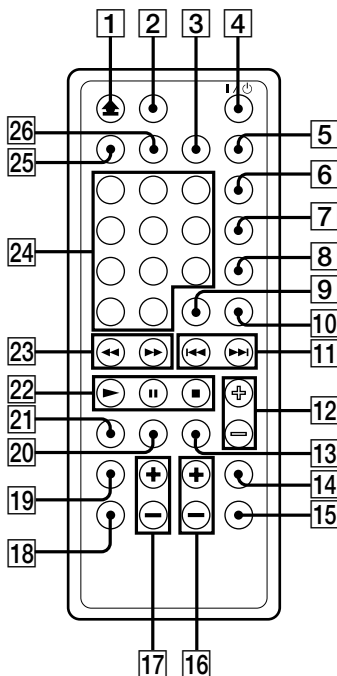


**1**

 **5**

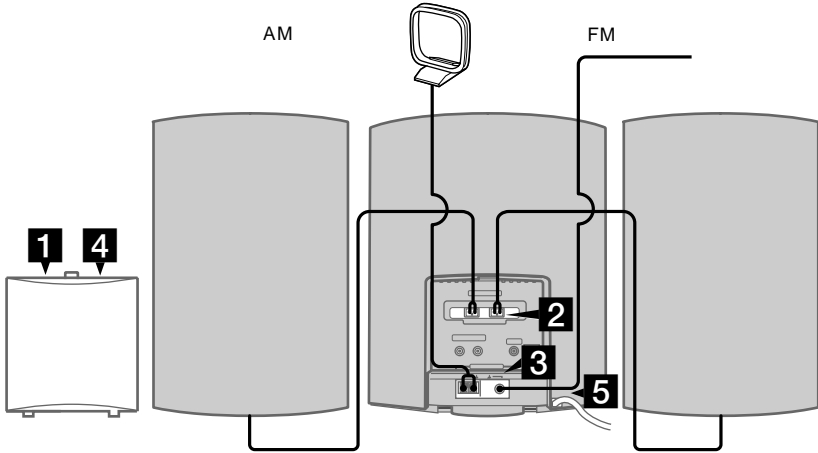


**1**

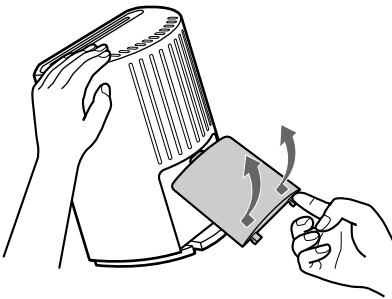 


**2**

 SPEAKER

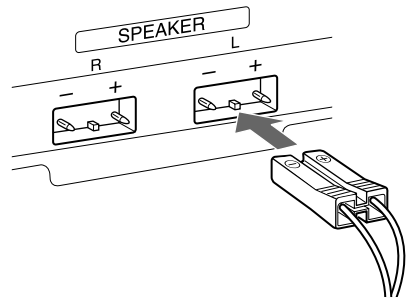


**3** FM/AM  
AM

 AM

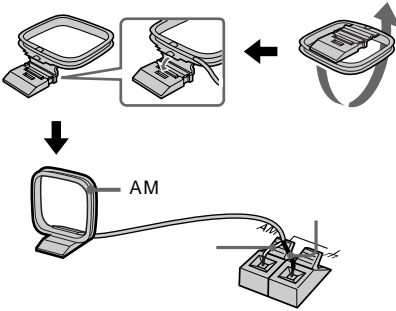


FM (A)

 FM




FM (B)

 FM

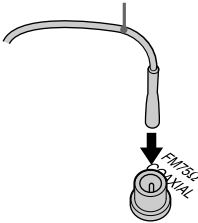


FM (C)

 FM

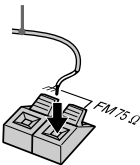


**4**

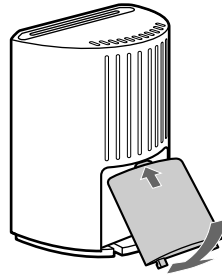 

**5**

 
가  
( 가 I/O ) .

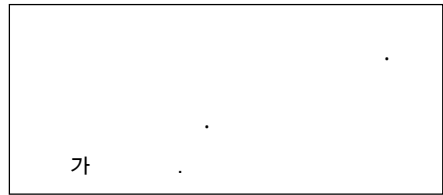


가



 
가

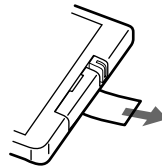

1

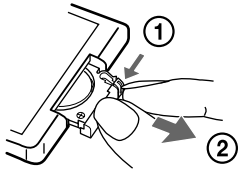 

2 +  
CR2025

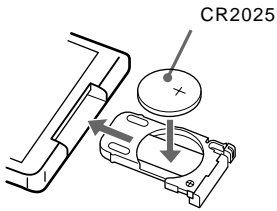 

3

1

2 CLOCK/TIMER SET

가

3 ◀▶

ENTER/YES

가

4 ◀▶

ENTER/

YES

가

5 ◀▶

ENTER/

YES

( . )  
←CURSOR CURSOR→

1

CLOCK/TIMER SET

2

◀▶

“CLOCK SET?”

ENTER/YES

3

3 5

 


CD

CD

1 ▲  
"OPEN" CD


2 CD 가  
CD가 가

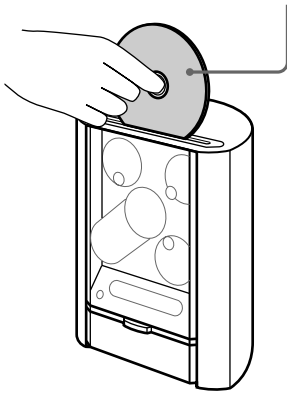

- CD CD
- CD (8 cm CD)
- CD (CD ) .

CD

 — / / CD



CD


1 FUNCTION  
CD

2 가  
PLAY MODE

CD
( )
SHUFFLE CD
( )
PROGRAM CD
( ) "CD (10
) .

3 ▶|| ( CD ▶)

 CD ( )

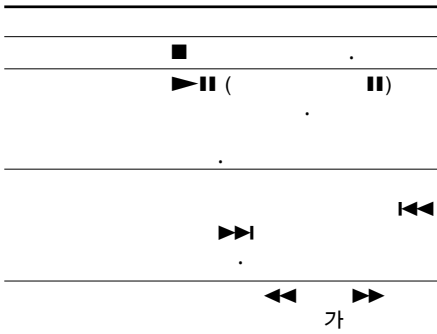

( ) " REPEAT "  
 " REPEAT1 "  
 REPEAT  
 REPEAT: CD  
 REPEAT1:  
 " REPEAT "  
 " REPEAT1 "  
 REPEAT

CD ▲ CD  
 ▲

( )

10

1 >10

2

0 10/0

:

3 10/0 30

>10


# CD

CD 25

1 FUNCTION  
CD

2 " PROGRAM "  
PLAY MODE

 
3 가



4 ENTER/YES

" Step "

 CLEAR



5 3 4

6 ►|| ( CD ►)

# CD

CD

---



---

▶▶      ◀◀

---

TIME

---

" PROGRAM "  
" SHUFFLE "

MODE      PLAY

---

3   4

가

---

CLEAR

---



---

100      CD   20

.      CD

---

1 FUNCTION  
CD  
" SHUFFLE "      " PROGRAM "

PLAY MODE

---

2      NAME EDIT/  
SELECT      .  
가

---

3      NAME EDIT/SELECT

---

/	/	Selected AB
/	/	Selected ab
		Selected 12

---

▶▶ (      CD ▶▶ )

• CD      가 21      100      CD

" - - . - - " 가

CD ( )

4 \_\_\_\_\_  
\_\_\_\_\_ 가

◀▶

CURSOR→

\_\_\_\_\_

\_\_\_\_\_ 10/0

\_\_\_\_\_

\_\_\_\_\_ 1

(‘-/,.(:!?)

\_\_\_\_\_ 1

\_\_\_\_\_

(&+<>\_=" ;#

\$% @ \* `)

◀▶

CURSOR→

\_\_\_\_\_

5 3 4

6 ENTER/YES

“ Complete! ” 가

3 4 ←CURSOR 가

CURSOR→

CLEAR

3 4

MENU/NO

가

2 CURSOR→

가

←CURSOR

3

1 FUNCTION

CD

2

MENU/NO

3 “ Name Check? ” 가

◀▶

ENTER/YES

4 ◀▶

100

001

SCROLL

1 FUNCTION  
CD  
" SHUFFLE " " PROGRAM "

PLAY MODE

(20 30  
FM 10 AM)

2 MENU/NO

3 " Name Erase? " 가

◀▶  
ENTER/YES

가

4 ◀▶

5 ENTER/YES

" Complete! " 가

가

3 " All Erase? " 가

◀▶  
ENTER/YES

1 4 MENU/  
NO

1 TUNER/BAND ( TUNER  
BAND) " FM "  
" AM "

2 " AUTO " 가  
TUNING MODE

3 TUNING - + ( -  
+)  
가  
가  
" TUNED " " STEREO "  
( )가

" TUNED " 가

" 2

8

( )

3 TUNING - + ( -  
+)

4 MENU/NO

4 MENU/NO

5 "Memory?" 가  
TUNING - + ( -  
+)  
ENTER/YES

5 "Memory?" 가  
TUNING - + ( -  
+)  
ENTER/YES

가

가

가

6

6

7

7

6 TUNING - + ( -  
+)

6 TUNING - + ( -  
+)



7 ENTER/YES

7 ENTER/YES

"Complete!" 가

"Complete!" 가

8 1 7

8 1 7

TUNING

MODE

1 TUNER/BAND ( BAND)  
" AM "

TUNER  
" FM "

2 " MANUAL " TUNING MODE

가	"
	"
	5 6
	MENU/NO
	1

AM ( )  
 AM 10 kHz) 9 kHz ( )  
 AM AM

FUNCTION

AM

3

10

>10

10/0

.0

2 10/0 20

>10

(16 ) .

—

1 TUNER/BAND ( BAND) " AM "

TUNER " FM "

2 " MANUAL " TUNING MODE

3 TUNING - + ( +)

—

(13 " "

) .

1 TUNER/BAND ( BAND) TUNER " FM "

2 " PRESET " TUNING MODE

3 TUNING - + ( +)

( \* RDS \*\*)

\*

(16 " "

) .

\*\*

•

• FM FM MODE " MONO " 가

• 2 " AUTO " 가 TUNING MODE TUNING - + ( +)

( ) .

가

# (RDS)

( )

10

?  
(RDS)\*

( ) .

가

1

(15

“ ” ) .

2 11

2 6 “CD”

가

RDS  
RDS

MENU/NO

\* FM RDS

. RDS

1

2 NAME EDIT/SELECT

RDS

3

CLEAR

FM

4

ENTER/YES

RDS

RDS  
DISPLAY

\*\* →

→

:

→

\*\* RDS



— DSG

DSG\*  
“ DSG ”  
DSG DSG

\* DSG:

DSG

SURROUND  
“ SURR ”

SURROUND

BASS + -

TREBLE + -

• 7 (-3 +3 )

• BASS TREBLE “ - - ”

SLEEP

AUTO\* → 90min → 80min → 70min  
→ ... → 10min → OFF

\* ( 4 )

SLEEP

\*\*

SLEEP

“ OFF ” 가  
SLEEP

\*\* “ AUTO ”



—

“ ” ) . (8

1

• CD: CD

“ CD ” (10

• :

“ ” (15)

2 VOLUME + - ( VOL + - )

3 CLOCK/TIMER SET

“ PLAY SET? ”  
ENTER/YES

4

가  
◀▶  
ENTER/YES

- 
- PLAY ONCE?
  - PLAY DAILY?
  - PLAY WEEKLY?
- 

5

4 “ PLAY ONCE? ”  
“ PLAY WEEKLY? ”

◀▶

ENTER/YES

가  
◀▶

ENTER/YES

가  
◀▶

ENTER/YES

4 가 : “ PLAY ONCE? ” “ PLAY WEEKLY? ” : “ PLAY DAILY? ” :

6 5

7

◀▶

TUNER ↔ CD PLAY

8

ENTER/YES

9 I/O

CLOCK/TIMER  
SELECT

ENTER/YES  
"PLAY ON?"  
ENTER/YES

CLOCK/TIMER  
SELECT  
"PLAY ON?"

▶▶▶▶ ▶▶▶▶  
ENTER/YES

1

CLOCK/TIMER  
SELECT  
"TIMER OFF?" 가

▶▶▶▶ ▶▶▶▶  
ENTER/YES

( 15 )

가

가

• PC/TAPE/MD IN

DIMMER  
가



( )

CD  
. CD TEXT

DISPLAY

:  
\* →      \*\* →      →  
\*\*

TIME

\*\* 8      ( )

:

SCROLL

\* →      CD →      \*\*

SCROLL

\*      가 21      CD      \*\*  
                                 " - - - - " 가  
\*\* 21      CD  
                                 21  
                                 가  
                                 " - - - - " 가

•      가      CD TEXT      CD  
                                 TIME

TIME

 
• CD      11  
" CD      "      16  
"      "

(CD)

DISPLAY

:  
                                 \*1 → CD  
\*2 →      \*3

\*1 8      CD  
\*2      CD      :  
                                 가      : CD  
                                 가      :  
                                 ,      CD  
\*3      TEXT      CD      )      (CD  
                                      가      가  
                                      CD가

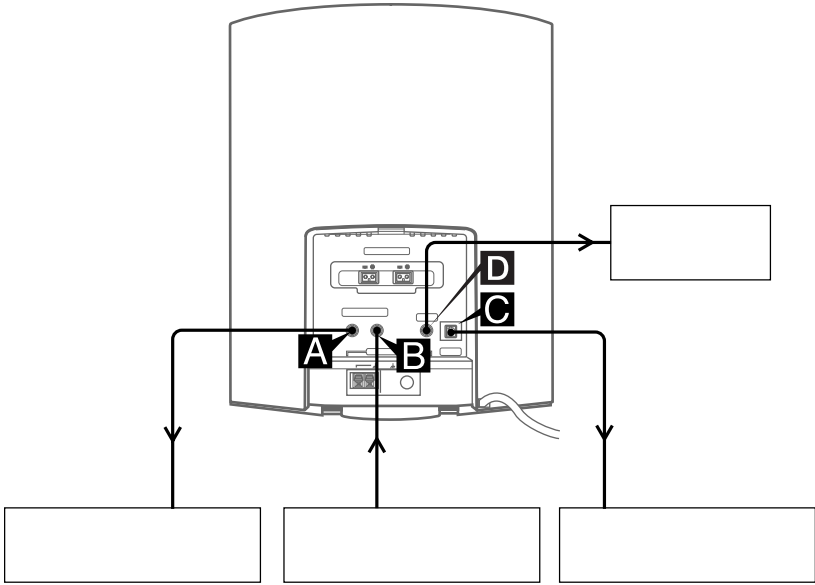

**A** PC/TAPE/MD OUT

( )  
 ( )  
 MD ( )

**C** OPTICAL CD DIGITAL OUT

( )  
 ( )  
 (MD )

**B** PC/TAPE/MD IN

( )  
 ( )  
 MD ( )

**D** PHONES



1  
21 “ ”

2 “ PC ”, “ MD ” “ TAPE ” 가  
FUNCTION

1  
21 “ ”

2

1  
2 “ PC ”, “ MD ” “ TAPE ” 가  
FUNCTION

3 MENU/NO

4 ◀▶

1  
21 “ ”

2

	PC?
MD	MD?
	TAPE?

5 ENTER/YES



가

가 가

가 Sony

“ - - : - - ”

(8

).

(6

가

(6

( )

(8

가

(19

).

(8 19 )

I/O

15

가 가 가

• CR2025

## CD

가

“ LOCKED ” 가

• 가 Sony

CD가

• 가 Sony

• CD

• CD (26

).

• CD

CD

• CD

• CD 가

• ►|| ( CD ►)

가

• CD (26

).

• CD

• ( 가 가

• 가 가

• 가 가

• “ PROGRAM ”

“ SHUFFLE ” 가  
PLAY MODE

( )

---

“ TUNED ” “ STEREO ” 가 ( ) .

- (13 ) .
- (7 ) .
- 가
- FM
- 가
- AM 가 Sony

---

FM

- “ MONO ” 가
- FM MODE
- “ “ TUNED ” “ STEREO ” 가 ( ) . ”

---



---

- 23 “
- “ ”
- (21 ) :
- 가 .
- 가 .
- 
- 
- “ PC ” ( “ MD ” “ TAPE ” ) 가
- FUNCTION

---

- 가
- 가
- “ MD ”
- (22 ) .

 
---

TUNER/BAND FUNCTION ▲,

“ COLD RESET ”

- 
- 
-





가 가

CD

Complete!

CD ( )

File Full

100

Initialize

CD  
" Initialize " 가

가

No Disc

CD 가

가

AC (

—OVER—



CD

( )

Push STOP!

PLAY MODE

가

Step Full!

26 ( )

• AC

•

•

— 가  
— 가  
—  
—

가

• , )

( ,

( )

CD

• CD

CD

가

• CD CD

가

가

CD

• CD

가 가

( , , )

가

CD-R/CD-RW

CD-R/CD-RW

가

CD  
가

CD

가

(CD)

가 Sony

CD

(CD)

가

CD

TV

TV

가

15 30

TV

, TV

가

CD

(HCD - EX5)

(λ = 795 nm)

2 Hz - 20 kHz

RMS ( ): 15 + 15 (1 kHz 4 , 10% THD) FM , FM/AM FM

DIN ( ): 12 + 12 (1 kHz 4 , DIN) : 87.5 - 108.0 MHz (100 kHz ) : 87.5 - 108.0 MHz (50 kHz ) RMS ( ): 15 + 15 (1 kHz 4 , 10% THD) FM 75 10.7 MHz

DIN ( ): 15 + 15 AM : 530 - 1,710 kHz ( 10 kHz) : 531 - 1,710 kHz ( 9 kHz) : 531 - 1,602 kHz ( 9 kHz) RMS ( ): 15 + 15 (1 kHz 4 , 10% THD, 110 V - 240 V AC) : 530 - 1,710 kHz ( 10 kHz) : 531 - 1,602 kHz ( 9 kHz) AM ,

PC/TAPE/MD IN ( ): 450 mV (MD)/ 250 mV (PC/TAPE), 47 (SS - CEX5) 2 ,

PC/TAPE/MD OUT ( ): 250 mV, 1 10 cm, 2.5 cm,

PHONES ( ): 8 가 ( / / ) 4 160 × 235 × 150 mm

OPTICAL CD DIGITAL OUT ( : 44.1 kHz) 1.5 g

( )

: 120 V AC, 60 Hz  
: 230 V AC, 50/60 Hz  
: 120 V AC, 60 Hz  
: 220 - 240 V AC,  
50/60 Hz  
: 220 V AC, 60 Hz  
: 220 V AC, 50/60 Hz  
: 110 - 240 V AC,  
50/60 Hz

:  
0.25 ( )

( / / ) 186 × 235 ×  
157 mm ( )

3.0 kg

AM (1)  
FM (1)  
FM (1)