

Micro Hi-Fi Component System

Operating Instructions



CMT-GP7

 
WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.



This appliance is classified as a CLASS 1 LASER product. This label is located on the rear exterior.



Don't throw away the battery with general house waste, dispose of it correctly as chemical waste.

Table of Contents

How to use this manual.....	4
Playable discs.....	4
<hr/>	
Getting Started	
Hooking up the system.....	6
Setting the clock.....	7
<hr/>	
CD/MP3 – Play	
Loading a disc.....	8
Playing a disc.....	8
— Normal Play/Shuffle Play	
Playing repeatedly.....	10
— Repeat Play	
Creating your own program.....	10
— Program Play	
<hr/>	
Tuner	
Presetting radio stations.....	12
Listening to the radio.....	13
— Preset Tuning	
— Manual Tuning	
Using the Radio Data System (RDS)....	14
<hr/>	
Tape – Play	
Loading a tape.....	15
Playing a tape.....	15
<hr/>	
Tape – Recording	
Recording your favorite CD tracks on a tape.....	16
— CD-TAPE Synchro Recording	
Recording on a tape manually.....	17
— Manual Recording	
<hr/>	
Sound Adjustment	
Adjusting the sound.....	17
<hr/>	
Timer	
Falling asleep to music.....	18
— Sleep Timer	
Waking up to music.....	18
— Daily Timer	
Timer recording radio programs.....	19

Display

Turning off the display.....	20
— Power Saving Mode	
Viewing information about the disc in the display.....	21

Optional Components

Hooking up optional components.....	22
-------------------------------------	----

Troubleshooting



Problems and remedies.....	24
Messages.....	26

Additional Information

Precautions.....	27
Specifications.....	28
List of button locations and reference pages.....	30

How to use this manual








- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the system having the same or similar names.
- The following symbols are used in this manual.

Symbol	Meaning
	Functions that can be used with audio CDs
	Functions that can be used with MP3

Playable discs

You can play back the following discs on this system. Other discs cannot be played back.

List of playable discs

Format of discs	Disc logo	Contents
Audio CDs		Audio
CD-R/CD-RW (audio data)	 	Audio
CD-R/CD-RW (MP3 files)	   	Audio

Discs that this system cannot play

- CD-ROMs
- CD-Rs/CD-RWs other than those recorded in the following formats:
 - music CD format
 - MP3 format that conforms to ISO9660*¹ Level 1/Level 2, Joliet or Multi Session*²
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive, cellophane tape, or a sticker still left on it.

*¹ ISO 9660 Format

The most common international standard for the logical format of files and folders on a CD-ROM. There are several specification levels. In Level 1, file names must be in the 8.3 format (no more than eight characters in the name, no more than three characters in the extension “.MP3”) and in capital letters. Folder names can be no longer than eight characters. There can be no more than eight nested folder levels. Level 2 specifications allow file names and folder names up to 31 characters long. Each folder can have up to 8 trees.

For Joliet in the expansion format (file and folder names can have up to 64 characters) make sure of the contents of the writing software, etc.

*² Multi Session

This is a recording method that enables adding of data using the Track-At-Once method.

Conventional CDs begin at a CD control area called the Lead-in and end at an area called Lead-out. A Multi Session CD is a CD having multiple sessions, with each segment from Lead-in to Lead-out regarded as a single session.

CD-Extra: This format records audio (audio CD data) on the tracks in session 1 and data on the tracks in session 2.

Mixed CD: This format records data on the first track and audio (audio CD data) on the second and subsequent tracks of a session.

Notes on CD-R and CD-RW

- This system can play CD-R/CD-RW discs edited by the user. However, note that playback of some discs may not be possible depending on the recording device used for recording or the disc condition.
- Discs recorded on CD-R/CD-RW drives may not be played back because of scratches, dirt, recording condition or the driver's characteristics.
- CD-R and CD-RW discs that have not been finalized (processing to allow play by a normal CD player) cannot be played.
- CD-R and CD-RW discs recorded in multi-session that have not ended by "closing the session" are not supported.
- The system may be unable to play MP3 format files that do not have the extender ".MP3".
- Attempting to play non-MP3 format files that have the extender ".MP3" may result in noise or malfunction.
- With formats other than ISO 9660 level 1 and 2, folder names or file names may not be displayed correctly.
- The following discs take a longer time to start playback.
 - a disc recorded with complicated tree structure.
 - a disc recorded in Multi Session.
 - a disc to which data can be added (non-finalized disc).

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.


Cautions when playing a disc that is recorded in Multi Session

- If the disc begins with a CD-DA session, it is recognized as a CD-DA (audio) disc, and MP3 sessions are played back without sound.
- If the disc begins with an MP3 session, it is recognized as an MP3 disc, and CD-DA sessions are played back without sound.
- The playback range of an MP3 disc is determined by the tree structure of files produced by analyzing of the disc.
- A disc with a mixed CD format will be recognized as a CD-DA (audio) disc.

Getting Started


Hooking up the system

Perform the following procedures **1** to **3** to hook up your system using the supplied cords and accessories.

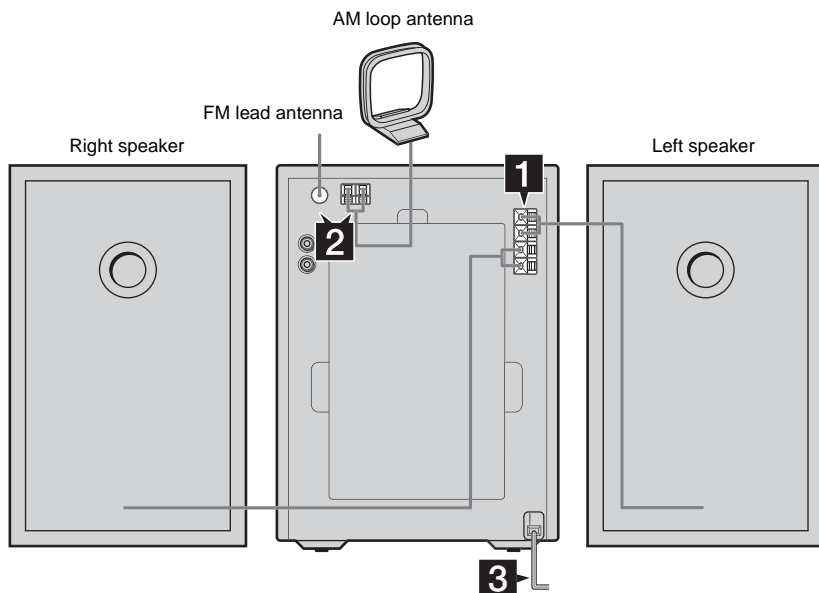


1 Connect the speakers.

Connect the right and left speaker cords to the SPEAKER terminals as shown below.

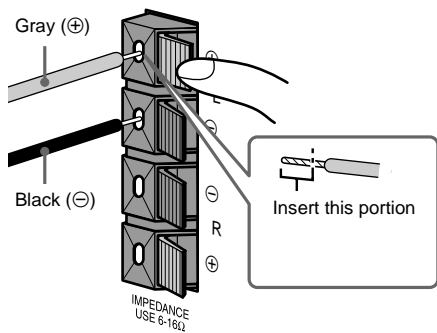

2 Connect the FM and AM antennas.

Set up the AM loop antenna, then connect it.

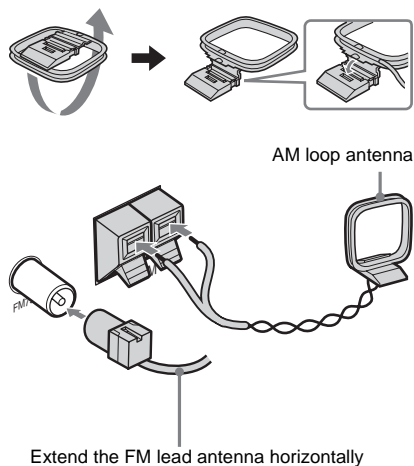

Note


To prevent noise pickup, keep the antennas away from the system and other components.

3 Connect the power cord to a wall outlet.

If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models equipped with an adaptor).

To turn on the system, press I/⏻.

Inserting two R6 (size AA) batteries into the remote

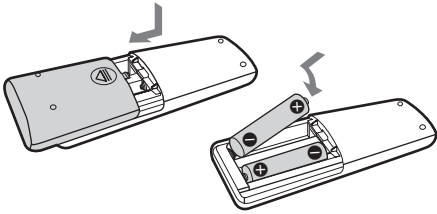**Note**

If you do not use the remote for a long period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Tip

When the remote no longer operates the system, replace both batteries with new ones.

Setting the clock

Use buttons on the remote for the operation.

- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press ◀◀/▶▶ repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press ◀◀/▶▶ repeatedly to set the minute.
- 6** Press ENTER.

The clock starts working.

To adjust the clock

- 1** Press CLOCK/TIMER SET.
- 2** Press ◀◀/▶▶ until "CLOCK" appears, then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.

Note

The clock is not displayed in Power Saving Mode.


CD/MP3 – Play

Loading a disc

Use buttons on the unit for the operation.

- 1 Press **▲**.
- 2 Place a disc with the label side up on the disc tray.

When you play an 8 cm disc, place it on the inner circle of the tray.

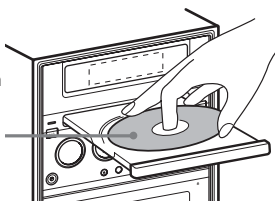

- 3 Press **▲** again to close the disc tray.

Notes

- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- Do not forcibly press the disc tray closed with your finger, as this may cause malfunction.

Playing a disc

— Normal Play/Shuffle Play

CD **MP3**

You can play audio CDs and discs with MP3 audio tracks.



- 1 Press **FUNCTION** on the remote repeatedly to switch the function to **CD**.
- 2 Press **PLAY MODE/TUNING MODE** on the unit in stop mode repeatedly until the mode you want appears.

Select	To play
No display (Normal Play)	The tracks on the disc in original order.
ALBM (Normal Play)	All MP3 audio tracks in the album on the disc in original order. When playing a non-MP3 disc, Album Play performs the same operation as Normal Play.
SHUF (Shuffle Play)	All tracks on the disc in random order.
ALBM SHUF (Shuffle Play)	All MP3 audio tracks in the album on the disc in random order. When playing a non-MP3 disc, Album Shuffle Play performs the same operation as Shuffle Play.
PGM (Program Play)	The tracks on the disc in the order you want them to be played (see “Creating your own program” on page 10).

- 3 Press **▶** on the remote (or **CD ▶||** on the unit).

Other operations

To	Do this
Stop play	Press ■.
Pause	Press II on the remote (or CD ▶II on the unit). Press again to resume play.
Select a track	Press ◀◀/▶▶ repeatedly.
Select an album of MP3	Press ALBUM +/- on the remote repeatedly after step 2.
Find a point in a track	Keep pressing ◀◀/▶▶ during playback and release it at the desired point.
Remove a disc	Press ▲ on the unit.

Playing a track by entering the track number

You can also select the track you want using the remote during Normal Play. Press the numeric button(s), then press ENTER. Playback automatically starts.

Notes

- You cannot change the play mode during playback.
- Some time may be needed to start playback of discs recorded in complex configurations such as many layers.
- When the disc is inserted, the player reads all the audio tracks on that disc. If there are many albums or non-MP3 audio tracks on the disc, it may take a long time for play to begin or for the next MP3 audio track to start play.
- Do not save unnecessary albums or audio tracks other than MP3 ones in the disc to be used for MP3 listening. We recommend that you do not save other types of audio tracks or unnecessary albums on a disc that has MP3 audio tracks.
- An album that does not include an MP3 audio track is skipped.
- Maximum album number: 150 (including root album and empty albums)
- The maximum number of MP3 audio tracks and albums that can be contained on a single disc is 300.
- Playback is possible up to 8 levels.
- MP3 audio tracks are played back in the order that they are recorded on the disc.
- Depending on the encoding/writing software, recording device, or the recording media used at the time an MP3 audio track is recorded, you may encounter such problems as disabled playback, sound interruptions and noise.
- When playing back an MP3 audio track, the playback elapsed time indication may differ from the actual time in the following cases.
 - When you play back a VBR (variable bit rate) MP3 audio track
 - When you perform Fast Forward or Rewind (Manual Search)

Tip

When disc access takes a long time, set “CD POWER” and “ON” by the CD power manage function (page 12).

Playing repeatedly

— Repeat Play



You can play all the tracks or a single track on a disc repeatedly.

Press REPEAT/FM MODE on the unit repeatedly during playback until “REPEAT” or “REPEAT 1” appears.

REPEAT: For all the tracks on the disc up to five times (or endlessly for MP3 tracks when “SHUF” is displayed).

REPEAT 1: For a single track only.

To cancel Repeat Play

Press REPEAT/FM MODE on the unit repeatedly until both “REPEAT” and “REPEAT 1” disappear.

Creating your own program

— Program Play




You can make a program of up to 25 steps. You can synchro record the programed tracks onto a cassette tape (page 16).

Use buttons on the remote for the operation.

- 1 Press FUNCTION repeatedly to switch the function to CD.**
- 2 Press PLAY MODE/TUNING MODE on the unit in stop mode repeatedly until “PGM” appears.**
- 3 Press ◀◀/▶▶ repeatedly until the desired track number appears.**

When programming an MP3, press ALBUM +/- repeatedly to select the album, then press ◀◀/▶▶ repeatedly until the desired track number appears.

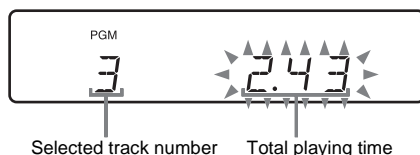

- 4 Press ENTER (or PLAY MODE/TUNING MODE on the unit).**

The track is programed.
The program step number appears, followed by the last programed track number.
- 5 To program additional tracks, repeat steps 3 and 4.**
- 6 Press ▶▶ (or CD ▶▶|| on the unit).**

Program Play starts.

Other operations

To	Do this
Cancel Program Play	Press PLAY MODE/TUNING MODE on the unit in stop mode repeatedly until both “PGM” and “SHUF” disappears.
Erase the program	Press CLEAR in step 4. Each time you press the button, a track is cleared from the end of the program.
Add a track to the end of the program	Perform steps 3 and 4 in stop mode.

Selecting a track by entering the track number

You can also select the track you want using the remote. Press the numeric button(s) instead of performing steps 3 and 4.

Tips

- The program you made remains after Program Play finishes. To play the same program again, press ► (or CD ►|| on the unit). However, the program is cleared when you open the disc tray.
- “--.--” appears when the total program time exceeds 100 minutes, or when you select a track whose number is 21 or over, or when you programmed an MP3 audio track.
- If you select “AL” in step 3, you can select all tracks on the disc at once.

Presetting radio stations

You can preset up to 20 FM stations and 10 AM stations. You can then tune in any of those stations simply by selecting the corresponding preset number.

Use buttons on the remote for the operation.

Automatic tuning preset

You can automatically tune in all of the stations that can be received in your area and then store the radio frequency of the desired stations.

- 1 Press **TUNER/BAND** on the unit repeatedly to select “FM” or “AM”.
- 2 Press **PLAY MODE/TUNING MODE** on the unit repeatedly until “AUTO” appears in the display.
- 3 Press **TUNING +/-**.

The frequency changes as the system scans for a station. Scanning stops automatically when a station is tuned in. At that time, “TUNED” and “STEREO” (for stereo program only) appear.

If “TUNED” does not appear and the scanning does not stop

Set the frequency of the desired radio station as described in steps 2 and 3 of “Manual tuning preset” (page 12).

- 4 Press **TUNER MEMORY**.
A preset number flashes. Perform steps 5 and 6 while the preset number flashes.



Preset number

- 5 Press **PRESET +/-** repeatedly to select the desired preset number.
- 6 Press **ENTER**.
- 7 Repeat steps 3 through 6 to preset other stations.

Tip

Press **PLAY MODE/TUNING MODE** on the unit to stop scanning.

Manual tuning preset

You can manually tune in and store the radio frequency of the desired stations.

- 1 Press **TUNER/BAND** on the unit repeatedly to select “FM” or “AM”.
- 2 Press **PLAY MODE/TUNING MODE** on the unit repeatedly until “AUTO” and “PRESET” disappear from the display.
- 3 Press **TUNING +/-** repeatedly to tune in the desired station.
- 4 Press **TUNER MEMORY**.
- 5 Press **PRESET +/-** repeatedly to select the desired preset number.
- 6 Press **ENTER**.
- 7 Repeat steps 3 through 6 to preset other stations.

Other Operations

To	Do this
Tune in a station with a weak signal	Follow the procedure described in “Manual tuning preset” (page 12).
Set another station to the existing preset number	After step 4, press PRESET +/- repeatedly to select the preset number you want to store the station.

To improve tuner reception

When tuner reception is poor, set CD player power off by the CD power manage function. CD power is factory set to on.

- 1 Press **FUNCTION** repeatedly to switch the function to CD.
- 2 Press **I/⏻** to turn off the system.
- 3 Press **I/⏻** while holding **■**.
“CD POWER” and “OFF” appear.

To set the CD power on

Repeat the procedure above, and “CD POWER” and “ON” appear.

Notes

- When “CD POWER” and “OFF” are selected, CD access time is increased.
- In the Power Saving Mode, switching the CD power on or off using the CD power manage function is not possible.

Tips

- The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.
- To improve the reception, adjust the supplied antennas or connect an external antenna.

Listening to the radio

You can listen to a radio station either by selecting a preset station, or by manually tuning in the station.

Use buttons on the unit for the operation.

Listening to a preset station

— *Preset Tuning*

Preset radio stations in the tuner’s memory first (see “Presetting radio stations” on page 12).

- 1** Press **TUNER/BAND** repeatedly to select “FM” or “AM”.
- 2** Press **PLAY MODE/TUNING MODE** repeatedly until “PRESET” appears in the display.
- 3** Press **PRESET +/-** on the remote repeatedly to select the desired preset station.

Selecting the desired preset number using the numeric buttons

Press the numeric button(s) on the remote instead of performing step 3.

Listening to non-preset radio station

— *Manual Tuning*

- 1** Press **TUNER/BAND** repeatedly to select “FM” or “AM”.
- 2** Press **PLAY MODE/TUNING MODE** repeatedly until “AUTO” and “PRESET” disappear from the display.
- 3** Press **TUNING +/-** repeatedly to tune in the desired station.

Tips

- To improve broadcast reception, adjust the supplied antennas, or connect a commercially available external antenna.
- When an FM stereo program has static noise, press REPEAT/FM MODE until “MONO” appears. There will be no stereo effect, but the reception will improve.
- Press PLAY MODE/TUNING MODE repeatedly until “AUTO” appears in step 2 above, then press TUNING +/- . The frequency indication changes and scanning stops when the system tunes in a station (Automatic Tuning).
- To record the radio programs, use manual recording (page 17).

Using the Radio Data System (RDS)

What is the Radio Data System?

Radio Data System (RDS) is a broadcasting service that allows radio stations to send additional information along with the regular program signal. RDS is available only on FM stations.*

Note

RDS may not work properly if the station you are tuned in is not transmitting the RDS signal properly or if the signal is weak.

* Not all FM stations provide RDS service, nor do they provide the same types of services. If you are not familiar with the RDS system, check with your local radio stations for details on RDS services in your area.

Receiving RDS broadcasts

Simply select a station from the FM band.

When you tune in a station that provides RDS services, the station name appears in the display.

To check the RDS information

Each time you press DISPLAY on the remote, the display changes cyclically as follows:


Station name* → Frequency → Clock display
→ Bass level → Treble level

* If the RDS broadcast is not properly received, the station name may not appear in the display.

Loading a tape

- 1 Press **▲ PUSH** on the unit.
- 2 Load a tape into the cassette holder.

With the side you want to play/record facing towards you.

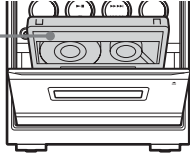

Playing a tape

You can use TYPE I (normal) tape.
Use buttons on the remote for the operation.

- 1 Press **FUNCTION** repeatedly to switch the function to **TAPE**.
- 2 Press **DIRECTION** on the unit repeatedly to select “**↔**” to play one side of a tape, “**↔↔**” to play both sides, or “**↔↔↔**”* to play both sides repeatedly.

* The tape deck stops automatically after repeating the sequence five times.

- 3 Press **▶** (or **TAPE ◀▶** on the unit).
Press **▶** (or **TAPE ◀▶** on the unit) again to play the reverse side.

Other operations

To	Do this
Stop play	Press ■ .
Pause	Press ⏏ . Press again to resume play.
Fast-forward or rewind	Press ⏩/⏪ .
Remove a tape	Press ▲ PUSH on the unit in stop mode.

Recording your favorite CD tracks on a tape

— CD-TAPE Synchro Recording

You can record a whole CD on a tape.

You can use TYPE I (normal) tape.

Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Load a CD you want to record.**
- 3 Press CD SYNC.**
“SYNC”, “REC” and “▶” (or “◀”) appear.
The tape deck stands by for recording and the CD player pauses for playback.
- 4 Press DIRECTION repeatedly to select “↔” to record on one side or “↔” (or “↔↔”) to record on both sides.**
- 5 Press TAPE ◀▶ (or ▶ on the remote) repeatedly to select the recording side.**
If you select both sides recording or front side recording, press TAPE ◀▶ (or ▶ on the remote) until “▶” appears. If you record on the reverse side, press TAPE ◀▶ (or ▶ on the remote) again until “◀” appears.
- 6 Press REC PAUSE/START ●.**
Recording starts.
When the recording is completed, the CD player and the tape deck stop automatically.

To stop recording

Press ■.

To record a disc by specifying track order

You can record only your favorite CD tracks using Program Play. Between steps 2 and 3, perform steps 1 to 5 of “Creating your own program” (page 10).

Tip

If you select both sides recording and the tape reaches the end of the front side part-way through a track, the entire track is recorded again from the beginning of the reverse side.

Recording on a tape manually

— Manual Recording

You can record just the portions you like from a CD on a tape.

You can also record a radio program.

Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Select the desired source to record.**
 - TUNER: To record from this system's tuner.
 - CD: To record from this system's CD player.
 - MD or VIDEO: To record from the optional component connected to the MD (VIDEO) jacks.
- 3 Press REC PAUSE/START ●.**

“▶” appears and the tape deck stands by for recording.
- 4 Press DIRECTION repeatedly to select “▶” to record on one side or “↔” (or “↔”) to record on both sides.**
- 5 Press TAPE ◀▶ (or ▶ on the remote) repeatedly to select the recording side.**

If you select both sides recording or front side recording, press TAPE ◀▶ (or ▶ on the remote) until “▶” appears. If you record on the reverse side, press TAPE ◀▶ (or ▶ on the remote) again until “◀” appears.
- 6 Press REC PAUSE/START ●, then start playing the desired source to record.**

Recording starts.

Other operations

To	Do this
Stop recording	Press ■.
Pause recording	Press REC PAUSE/START ●.

Sound Adjustment

Adjusting the sound

You can adjust the bass and treble to enjoy more powerful sound.

Generating a more dynamic sound (Dynamic Sound Generator)

Press DSG.

To cancel the DSG, press DSG again.

Adjusting the bass and treble

You can adjust the bass and treble.

Use buttons on the remote for the operation.

- 1 Press BASS/TREBLE to select “BASS” or “TREBLE”.**

Each time you press the button, the display changes as follows:
BASS ↔ TREBLE
- 2 Press ◀▶/▶▶ repeatedly to adjust the level while “BASS” or “TREBLE” appears.**

To exit the bass and treble settings

Press any button other than BASS/TREBLE or ◀▶/▶▶. Also, if you do not perform any operations for a few seconds, the display automatically returns to the original display.

Falling asleep to music

— Sleep Timer

You can set the system to turn off after a certain time, so that you can fall asleep to music. Use buttons on the remote for the operation.

Press SLEEP repeatedly.

Each time you press the button, the minute display (the turn-off time) changes cyclically as follows:

AUTO* → 90MIN → 80MIN → ... → 10MIN → OFF

* The system automatically turns off in 240 minutes or after the current CD or tape finishes playing.

Other operations

To	Press
Check the remaining time**	SLEEP once.
Change the time to turn off	SLEEP repeatedly to select the time you want.
Cancel the Sleep Timer function	SLEEP repeatedly until "OFF" appears.

** You cannot check the remaining time if you select "AUTO".

Tip

You can use the Sleep Timer, even if you have not set the clock.

Waking up to music

— Daily Timer

You can wake up to music at a preset time. Make sure you have set the clock (see "Setting the clock" on page 7).

Use buttons on the remote for the operation.

1 Prepare the sound source you want to play.

- CD: Load a disc. To start from a specific track, make a program (see "Creating your own program" on page 10).
- TAPE: Load a tape (see "Playing a tape" on page 15).
- TUNER: Tune in a radio station (see "Listening to the radio" on page 13).

2 Adjust the volume.

3 Press CLOCK/TIMER SET.

4 Press ◀▶/▶▶ repeatedly until "DAILY" appears, then press ENTER. "ON TIME" appears and the hour indication flashes.

5 Set the time to start playing.

Press ◀▶/▶▶ repeatedly to set the hour, then press ENTER.

 
The minute indication flashes.

Press ◀▶/▶▶ repeatedly to set the minute, then press ENTER.

6 Set the time to stop playing following the same procedure as step 5.

7 Press ◀▶/▶▶ repeatedly until the desired sound source appears.

Each time you press the button, the display changes cyclically as follows:



8 Press ENTER.

The start time, the stop time, the sound source, and VOLUME appear in turn, then the original display returns.

9 Press I/⏻ to turn off the system.

Other operations

To	Do this
Cancel the timer/ activate the timer/ check the setting	<ol style="list-style-type: none"> 1 Press CLOCK/TIMER SELECT. 2 Press ◀◀/▶▶ repeatedly until "SELECT" appears, then press ENTER. 3 Press ◀◀/▶▶ repeatedly until "DAILY", "ON" or "OFF" appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel both Daily Timer and Timer Recording	<ol style="list-style-type: none"> 1 Press CLOCK/TIMER SELECT. 2 Press ◀◀/▶▶ repeatedly until "OFF" appears, then press ENTER.

Notes

- The Daily Timer setting or the Timer Recording setting overlaps with part or all of another timer setting.
- If you use the Daily Timer and the Sleep Timer at the same time, the Sleep Timer has priority.
- Do not operate the system from the time the system turns on until the play starts (about 15 seconds before the preset time).
- If the system is on about 15 seconds before the preset time, the Daily Timer will not be activated.
- You cannot use the optional component connected to the MD (VIDEO) jacks as sound sources for the Daily Timer.
- When the Daily Timer is set to "OFF", "SELECT" does not appear. However, "SELECT" does not appear when the Timer Recording is set to "ON".

Timer recording radio programs

To timer record, you must first preset the radio station (see "Presetting radio stations" on page 12) and set the clock (see "Setting the clock" on page 7).

Use buttons on the remote for the operation.

- 1 **Tune in the preset radio station (see "Listening to a preset station" on page 13).**
- 2 **Press CLOCK/TIMER SET.**
- 3 **Press **◀◀/▶▶** repeatedly until "REC" appears, then press ENTER.**
"ON TIME" appears and the hour indication flashes.
- 4 **Set the time to start recording.**
Press **◀◀/▶▶** repeatedly to set the hour, then press ENTER.
The minute indication flashes.
Press **◀◀/▶▶** repeatedly to set the minute, then press ENTER.
- 5 **Set the time to stop recording following the same procedure as step 4.**
Timer Recording settings and the desired station appear, then the original display returns.
- 6 **Load a recordable tape.**
- 7 **Press DIRECTION on the unit repeatedly to select "→" to record on one side or "↔" (or "↔") to record on both sides.**
- 8 **Press ▶ (or TAPE ◀▶ on the unit) repeatedly to select the recording side.**
If you select both sides recording or front side recording, press ▶ (or TAPE ◀▶ on the unit) until "▶" appears. If you record on the reverse side, press ▶ (or TAPE ◀▶ on the unit) again until "◀" appears.
- 9 **Press I/⏻ to turn off the system.**

Other operations

To	Do this
Cancel the timer/ activate the timer/ check the setting	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "SELECT" appears, then press ENTER.3 Press ◀◀/▶▶ repeatedly until "REC", "ON" or "OFF" appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel both Daily Timer and Timer Recording	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "OFF" appears, then press ENTER.

Notes

- The Daily Timer setting or the Timer Recording setting overlaps with part or all of another timer setting.
- If you use the Timer Recording and the Sleep Timer at the same time, the Sleep Timer has priority.
- Do not operate the system from the time the system turns on until the recording starts (about 15 seconds before the preset time).
- If the system is on about 15 seconds before the preset time, the Timer Recording will not be activated.
- The volume is reduced to minimum during recording.
- Note that if the Timer Recording is set at the same time as the Daily Timer sound source is set to tape, the Timer Recording sound may be recorded onto the tape.
- When the Timer Recording is set to "OFF", "SELECT" does not appear. However, "SELECT" does not appear when the Daily Timer is set to "ON".

Display

Turning off the display

— Power Saving Mode

The clock display can be turned off to minimize the amount of power consumed during standby (Power Saving Mode).

Press DISPLAY on the remote repeatedly while the system is off until the clock display disappears.

To cancel Power Saving Mode

Press DISPLAY on the remote while the system is off. Each time you press the button, the display switches as follows:

Clock display* ↔ No display (Power Saving Mode)

* The clock is displayed only if you set the clock.

Tips

- The I/⏻ indicator lights up even in the Power Saving Mode.
- The timer continues to operate in Power Saving Mode.

Note

You cannot perform the following operations in Power Saving Mode.

- setting the clock
- turning on the system by pressing the function buttons
- switching the MD (VIDEO) function
- switching the CD power on or off using the CD power manage function

Viewing information about the disc in the display

You can check the playing time and remaining time of the current track or that of the disc. When a CD-TEXT disc or a disc with MP3 audio tracks is loaded, you can also check the information recorded on disc, such as the titles. When the system detects CD-TEXT discs, the "TEXT" indication appears in the display.

Checking the remaining time and titles (CD/MP3)

Press DISPLAY on the remote repeatedly during playback.

Each time you press the button, the display changes cyclically as follows:
Current track number and elapsed playing time → Current track number and remaining time or " _ _ . _ _ " *¹ → Remaining time of the disc or " _ _ . _ _ " *¹ → Track title (CD-TEXT disc or disc with MP3 audio tracks *² only) → Album name *¹ → Clock display → Bass level → Treble level

*¹ For disc with MP3 audio tracks

*² When you play back a track with an ID3 tag ver. 1 (ver. 1.0 or 1.1), the ID3 tag appears. The ID3 tag displays only the track title information.

Checking the total playing time and titles (CD/MP3)

Press DISPLAY on the remote repeatedly in stop mode.

Each time you press the button, the display changes cyclically as follows:
TOC display *¹ or total number of albums on the disc *² or total track number of the current album *² → Disc title *³ or album name *² → Clock display → Bass level → Treble level

*¹ TOC = Table of Contents; displays current disc number, total number of tracks on the disc, and total playing time of the disc

*² For discs with MP3 audio tracks, album titles may not be displayed depending on the play mode.


*³ For disc with CD-TEXT

Depending on the disc, some CD-TEXT information may not appear.

Optional Components

Hooking up optional components

To enhance your system, you can connect optional components. Refer to the operating instructions provided with each component.

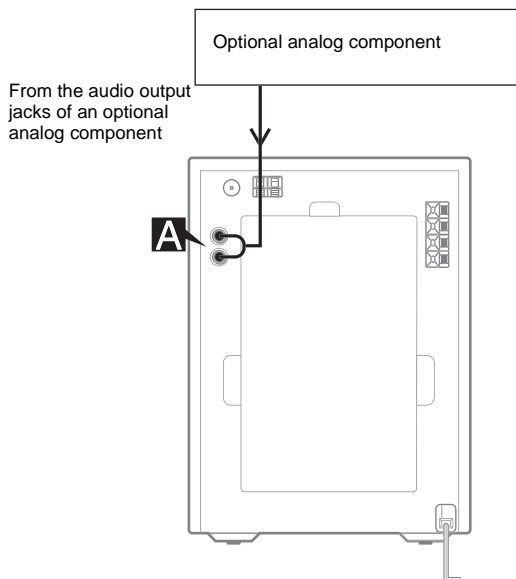

A MD (VIDEO) jacks

Use audio cords (not supplied) to connect an optional analog component (MD deck, etc.) to these jacks. You can then listen to the sound from the component.

Listening to audio from a connected component

- 1 Connect audio cords.
See "Hooking up optional components" on page 22.
- 2 Press FUNCTION on the remote repeatedly (or MD (VIDEO) on the unit) until "MD" or "VIDEO" appears.
Start playing the connected component.

Tip

If you cannot select “VIDEO” by pressing FUNCTION on the remote repeatedly (or MD (VIDEO) on the unit), turn off the system and then press I/⏻ while holding down MD (VIDEO) on the unit. The function will change from “MD” to “VIDEO”, and “VIDEO” will appear in the display. To change back to “MD”, repeat the same procedure. However, you cannot switch the MD (VIDEO) function in Power Saving Mode.

Troubleshooting

Problems and remedies

Should you encounter a problem with your system, do the following:

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

When the I/⏻ indicator flashes

Immediately unplug the power cord and check the following items.

- Are the + and – speaker cords short-circuited?
- Are you using only the prescribed speakers?
- Is anything blocking the ventilation holes on the rear of the system?

After checking the above items and fixing any problems, connect the power cord again and turn on the system. If the indicator still flashes, or if the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.

General

“-- --” appears in the display.

- A power interruption has occurred. Set the clock (page 7) and timer settings (pages 19 and 20) again.

There is no sound.

- Press VOL + on the remote repeatedly (or turn VOLUME on the unit clockwise).
- Make sure the headphones are not connected.
- Check the speaker connections (page 6).

Sound comes from one channel, or unbalanced left and right volume.

- Place the speakers as symmetrically as possible.
- Connect the supplied speakers.

There is severe hum or noise.

- Move the system away from the source of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (commercially available) to the power line.

The timer cannot be set.

- Set the clock again (page 7).

The timer does not function.

- Press CLOCK/TIMER SELECT on the remote to set the timer and light up “DAILY ☺” or “☺ REC” in the display (pages 19 and 20).
- Check the timer setting and set the correct time (pages 19 and 20).
- Cancel the Sleep Timer function (page 18).
- Make sure the clock is correctly set.

The color on the TV screen is irregular.

- Move the speakers farther away from the TV set.

The remote does not function.

- Remove the obstacle.
- Move the remote closer to the system.
- Point the remote at the system’s sensor.
- Replace the batteries (R6/size AA).
- Locate the system away from the fluorescent light.

Speakers

Sound comes from one channel, or the left and right volumes are unbalanced.

- Check the speaker connections and placement.

CD/MP3 player

The disc tray does not open and “LOCKED” appears.

- Contact your Sony dealer or local authorized Sony service facility.

The disc tray does not close.

- Place the disc correctly in the center of the tray.
- Always close the tray by pressing ▲ on the unit. Trying to press the tray closed with your fingers may cause problems with the player.

The disc does not eject.

- You cannot eject the disc during CD Synchro Recording. Press ■ to cancel the CD Synchro Recording, then press ▲ on the unit to eject the disc.
- Consult your nearest Sony dealer.

Play does not start.

- Open the disc tray and check whether a disc is loaded.
- Wipe the disc clean (page 27).
- Replace the disc.
- Place the disc that this system can play (page 4).
- Place the disc correctly in the center of the tray.
- Place the disc in the tray with the label side up.
- Remove the disc and wipe away the moisture on the disc, then leave the system turned on for a few hours until the moisture evaporates.
- Press **▶** on the remote (or CD **▶||** on the unit) to start play.

Disc access takes a long time.

- Set “CD POWER” and “ON” by the CD power manage function (page 12).

The sound skips.

- Wipe the disc clean (page 27).
- Replace the disc.
- Try moving the system to a place without vibration (e.g., on top of a stable stand).
- Try moving the speakers away from the system, or placing them on separate stands. When you listen to a track with bass sounds at high volume, the speaker vibration may cause the sound to skip.

Play does not start from the first track.

- Press PLAY MODE/TUNING MODE on the unit repeatedly until both “PGM” and “SHUF” disappear to return to Normal Play.

MP3 audio track cannot be played back.

- Recording was not performed according to the ISO 9660 level 1 or level 2 format, or Joliet in the expansion format.
- The MP3 audio track does not have the extension “.MP3”.
- The data is not stored in MP3 format.
- Discs containing tracks other than MPEG1, 2 Audio Layer-3 files cannot be played.

MP3 audio tracks take longer to play back than others.

- After the system reads all tracks on the discs, playback may take more time than usual if:
 - the number of albums or tracks on the disc is very large.
 - the album and track organization structure is very complex.

The album title, track title and ID3 tag do not appear correctly.

- Use a disc that conforms with ISO 9660 level 1, level 2, or Joliet in the expansion format.
- The disc ID3 tag is not ver. 1 (ver. 1.0 or 1.1).

Tuner

Severe hum or noise/stations cannot be received.

- Set the proper band and frequency (page 12).
- Connect the antenna properly (page 6).
- Find a place and an orientation that provide good reception, then set up the antenna again. If you cannot obtain good reception, we recommend you connect a commercially available external antenna.
- The supplied FM lead antenna receives signals along its entire length, so make sure you extend it fully.
- Keep the antennas away from the system and other components.
- Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
- Try turning off surrounding electrical equipment.
- Set “CD POWER” and “OFF” by the CD power manage function (page 12).

A stereo FM program cannot be received in stereo.

- Press REPEAT/FM MODE on the unit until “STEREO” appears in the display.

Tape deck

The tape does not record or play, or there is a decrease in sound level.

- The heads are dirty. Clean them (page 28).
- The record/playback heads are magnetised. Demagnetise them (page 28).

The tape does not erase completely.

- The record/playback heads are magnetised. Demagnetise them (page 28).

There is excessive wow or flutter, or the sound drops out.

- The capstans in the tape deck are dirty. Clean them using a cleaning cassette (page 28).

Noise increases or the high frequencies are erased.

- The record/playback heads are magnetised. Demagnetise them (page 28).

The tape does not record.

- No cassette is loaded. Load a cassette.
 - The tab has been removed from the cassette.
Cover the broken tab with adhesive tape (page 28).
 - The tape has wound to the end.
-

Optional components

There is no sound.

- Refer to General item “There is no sound.” (page 24) and check the condition of the system.
 - Connect the component properly (page 22) while checking:
 - if the cords are connected properly.
 - if the cord plugs are firmly inserted all the way.
 - Turn on the connected component.
 - Refer to the operating instructions supplied with the connected component and start playing.
 - Press FUNCTION on the remote repeatedly (or MD (VIDEO) on the unit) until “MD” or “VIDEO” appears (page 22).
-

The sound is distorted.

- Set the volume of the connected component lower.
-

If the system still does not operate properly after performing the above measures, reset the system as follows:

Use buttons on the unit for the operation.

- 1 Disconnect the power cord.
- 2 Reconnect the power cord.
- 3 Press I/⏻ to turn on the system.
- 4 Press ■, PLAY MODE/TUNING MODE and I/⏻ at the same time.

The system is reset to the factory settings. You should set the settings you made, such as the preset stations, clock, and timer.

Messages

One of the following messages may appear or flash in the display during operation.

CD/MP3

NO DISC

There is no disc in the player.

NO STEP

All of the programmed tracks have been erased.

OVER

You have reached the end of the disc while pressing and holding ►► during playback or pause.

STEP FULL

You tried to program 26 or more tracks (steps).

PUSH STOP

You pressed PLAY MODE/TUNING MODE on the unit during playback.

Tuner

COMPLETE

The preset operation ended normally.

Tape

NO TAB

You cannot record the tape because the tab has been removed from the cassette.

NO TAPE

There is no tape in the tape deck.

Timer

OVERLAP

The Daily Timer setting or the Timer Recording setting overlaps with part or all of another timer setting.

SET NG

You cannot select the timer function when the Daily Timer or Timer Recording are not set.

TIME NG

The Daily Timer or Timer Recording start and end times are set to the same time.

Precautions

On operating voltage

Before operating the system, check that the operating voltage of your system is identical with the voltage of your local power supply.

On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet (mains) if it is not to be used for an extended period of time. To disconnect the power cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

On placement

- Do not place the system in an inclined position.
- Do not place the system in locations where it is;
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Subject to vibrations
 - Subject to direct sunlight.
- Use caution when placing the unit or speakers on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

On heat buildup

- Although the system heats up during operation, this is not a malfunction.
- Place the system in a location with adequate ventilation to prevent heat build-up in the system.
- If you continuously use this system at a high volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.
- To prevent a malfunction, do not cover the ventilation hole.

On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player. Should this occur, the system will not operate properly. Remove the disc and leave the system turned on for about an hour until the moisture evaporates.
- When you move the system, take out any disc.

If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

Notes on discs

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- Do not use discs encircled with a protection ring. This may cause a malfunction to the system.
- When using discs that have glue or similar tacky substance on the label side of the disc or that used a special ink when the label was printed, there is a chance that the disc or label may become attached to parts inside this unit. When this occurs, it may not be possible to remove the disc, and may also cause this unit to malfunction. Be sure to check that the label side of the disc is not sticky before using.

The following types of disc should not be used:


 - Rental or used discs with attached seals where the glue extends beyond the seal. The perimeter of the seal on the disc is tacky.
 - Discs that have labels printed using a special ink that feels tacky when touched.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as thinner, benzene or alcohol.

To save a tape permanently

To prevent a tape from being accidentally recorded over, break off the cassette tab from side A or B as illustrated.

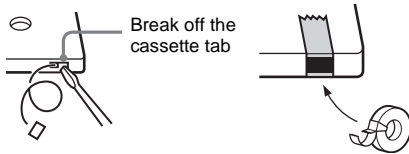

If you later want to reuse the tape for recording, cover the broken tab with adhesive tape.

Before placing a cassette in the tape deck

Take up any slack in the tape. Otherwise, the tape may get entangled in the parts of the tape deck and become damaged.

When using a tape longer than 90 minutes

The tape is very elastic. Do not change the tape operations such as play, stop, and fast-winding frequently. The tape may get entangled in the tape deck.

Cleaning the tape heads

Clean the tape heads after every 10 hours of use. Be sure to clean the tape heads before you start an important recording or after playing an old tape. Use a separately sold dry-type or wet-type cleaning cassette. For details, refer to the instructions of the cleaning cassette.

Demagnetising the tape heads

Demagnetise the tape heads and the metal parts that have contact with the tape after every 20 to 30 hours of use with a separately sold demagnetising cassette. For details, refer to the instructions of the demagnetising cassette.

Specifications

Main unit

Amplifier section

DIN power output (rated): 40 + 40 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
50 + 50 watts (6 ohms at 1 kHz, 10% THD)

Inputs

MD (VIDEO) (phono jacks):

Sensitivity 450/250 mV,
impedance 47 kilohms

Outputs

PHONES:

Accepts headphones with an impedance of 8 ohms or more

SPEAKER:

Accepts impedance of 6 to 16 ohms.

CD player section

Laser

Semiconductor laser
($\lambda=780$ nm)

Emission duration:
continuous

Frequency response

20 Hz – 20 kHz

Wavelength

780 – 790 nm

Tape deck section

Recording system

4-track 2-channel, stereo

Frequency response

50 – 13,000 Hz (± 3 dB),
using Sony TYPE I
cassettes

Wow and flutter

$\pm 0.15\%$ W. Peak (IEC)
 0.1% W. RMS (NAB)
 $\pm 0.2\%$ W. Peak (DIN)

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range 87.5 – 108.0 MHz
(50 kHz step)

Antenna FM lead antenna

Antenna terminals 75 ohms unbalanced

Intermediate frequency 10.7 MHz

AM tuner section

Tuning range 531 – 1,602 kHz
(with the tuning interval
set at 9 kHz)

Antenna AM loop antenna, external
antenna terminal

Intermediate frequency 450 kHz

Speaker

Speaker system 2-way, bass-reflex type

Speaker units

Woofer: 12 cm dia., cone type

Tweeter: 2.5 cm dia., Balanced-
Dome-type

Nominal impedance 6 ohms

Dimensions (w/h/d) Approx. 155 × 250 × 228
mm

Mass Approx. 2.6 kg net per
speaker

General

Power requirements 230 V AC, 50/60 Hz

Power consumption 100 watts
0.3 watts (in Power Saving
Mode)

Dimensions (w/h/d) Approx. 190 × 250 × 340
mm incl. projecting parts
and controls

Mass Approx. 6.2 kg


Supplied accessories: Remote (1)
R6 (size AA) batteries (2)
AM loop antenna (1)
FM lead antenna (1)

Design and specifications are subject to change
without notice.

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons and other parts of the system that are mentioned in the text.

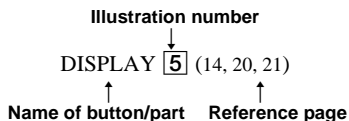

Main unit

ALPHABETICAL ORDER

A - M

- Cassette compartment **[15]**
- CD SYNC **[13]** (16)
- DIRECTION **[9]** (15, 16, 17, 19)
- Disc tray **[4]**
- Display window **[3]**
- DSG **[11]** (17)
- MD (VIDEO) **[17]** (22)


P - Z

- PHONES jack **[16]**
- PLAY MODE/TUNING MODE **[9]** (8, 10, 12, 13, 26)
- Remote sensor **[2]**
- REPEAT/FM MODE **[8]** (10, 14)
- TUNER/BAND **[17]** (12, 13)
- TUNING +/- **[6]** (12, 13)
- VOLUME* **[7]** (18)

BUTTON DESCRIPTIONS

- I/⏻ (power) **[1]** (7, 12, 18, 19, 23, 26)
- ◀◀◀/▶▶▶▶▶ (go back/go forward, rewind/fast forward) **[6]** (7, 9, 10, 15, 17, 18, 19)
- (stop) **[12]** (9, 12, 15, 16, 17, 26)
- REC PAUSE/START ● **[14]** (16, 17)
- CD ▶▶ || (play/pause) **[18]** (8, 10)
- TAPE ◀▶▶▶ (play) **[18]** (15, 16, 17, 19)
- ▲ (CD open/close) **[5]** (8, 9)
- ▲ PUSH (tape open/close) **[10]** (15)

* To adjust the volume, first press this control, and then turn it.

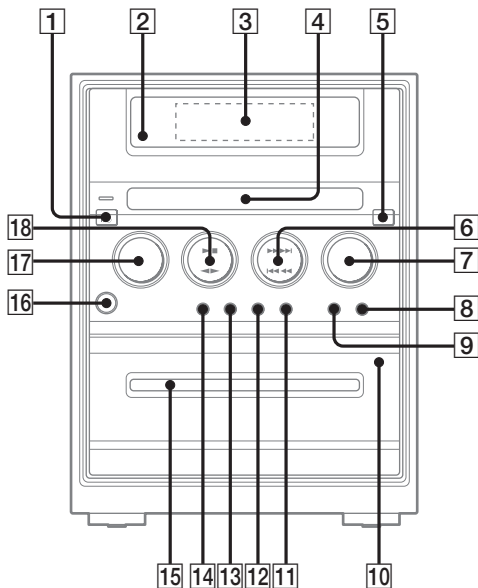

Remote control

ALPHABETICAL ORDER

A - F

- ALBUM +/- **8** (9, 10)
- BASS/TREBLE **11** (17)
- CLEAR **3** (11)
- CLOCK/TIMER SELECT **16** (19, 20)
- CLOCK/TIMER SET **17** (7, 18, 19)
- DISPLAY **5** (14, 20, 21)
- DSG **10** (17)
- ENTER **15** (7, 9, 10, 12, 18, 19)
- FUNCTION **9** (8, 10, 12, 15, 22)

N - Z

- Numeric buttons **2** (9, 11, 13)
- PRESET +/- **6** (12, 13)
- SLEEP **14** (18)
- TUNER MEMORY **13** (12)
- TUNING +/- **7** (12, 13)
- VOL +/- **4** (18)

BUTTON DESCRIPTIONS

- I/⏻ (power) **1** (7, 12, 18, 19, 23, 26)
- ◀◀/▶▶ (rewind/fast forward) **7** (9, 15)
- ◀◀/▶▶ (go back/go forward) **6** (7, 9, 10, 17, 18, 19)
- (stop) **12** (9, 12, 15, 16, 17)
- ⏸ (pause) **12** (9, 15)
- ▶ (play) **12** (8, 10, 15, 16, 17, 19)

