

DAB/FM CLOCK RADIO

Operating Instructions




XDR-C706DBP

DAB DAB+ DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.



* 4 2 5 7 0 2 6 1 3 * (1)

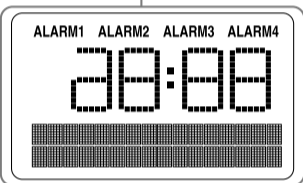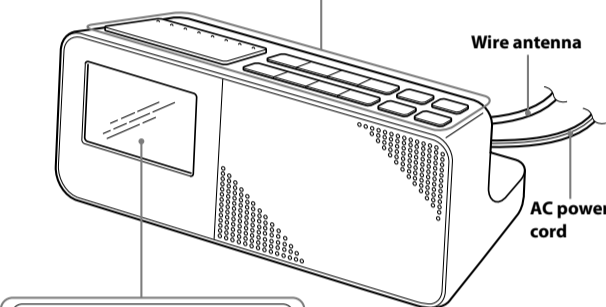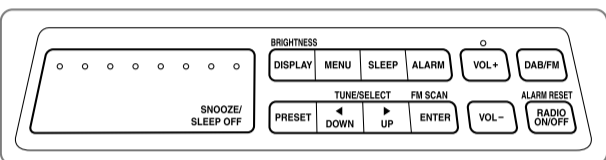©2010 Sony Corporation Printed in China <http://www.sony.net/>

There is a tactile dot beside VOL +.

Display window (24-hour system)

The display differs depending on your country/region.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

The nameplate and important information concerning safety are located on the bottom exterior.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

Features

- DAB (Band-III)/FM 2-band digital clock radio
- Large clock display and 16 × 2 lines character dot display for text information
- Brightness control
- 4 alarms with various alarm mode; weekdays, weekends, daily and once
- 20 memory presets (10 DAB, 10 FM)
- Current time and Summer time adjustment synchronized with DAB data
- Sleep timer

Initial setting for the clock radio

When the first time after purchase, do the following.

- 1 Plug in the unit. "Setting clock..." appears in the display, and DAB data adjust the clock as it is received. When finished, the current time appears in the display.



- 2 Press **RADIO ON/OFF-ALARM RESET** to turn on the radio. The unit will automatically scan and create a list of receivable DAB broadcasts.




Notes

- If the clock is not set within 3 minutes, the following message appears in the display (see "Setting the clock").
Model for United Kingdom and Australia: "AM 12:03 clock not set..."
Model for other countries/regions: "0:03 clock not set..."
- If no broadcasts are found by the DAB scan, "No stations available" appears in the display.

Setting the clock

Do the following if DAB broadcast is not available (depending on area). The time setting mode by DAB becomes invalid.

- 1 Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the "Set clock," and then press **ENTER**. The hour indication will be displayed as follows.

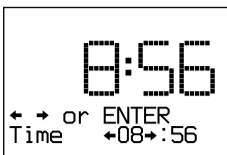

- 2 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to set the hour, and then press **ENTER**.
- 3 Repeat step 2 to set the minute, year, month and day. After setting the time, the clock starts from 0 seconds.


Notes

- If you do not operate within 7 seconds while setting the clock, the clock setting mode will be cancelled.
- Setup time for this operation is adjusted automatically when the customer operates the set while receiving DAB service.

To change the clock display

You can choose the clock display 12-hour system and 24-hour system.

- 1 Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to show the "Clock display" in the display, and then press **ENTER**.
- 2 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the desired clock display, and then press **ENTER**. The clock display changes by turns (12-hour system: "AM 12:00" = midnight, 24-hour system: "0:00" = midnight).

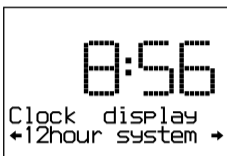

Time adjustment about Summer time

This unit's time adjustment will be done only when receiving DAB service. Receive DAB service for at least one minute to renew the time into Summer time.

Setting the brightness of the display

Press and hold **DISPLAY•BRIGHTNESS** for few seconds to change the brightness. Repeat this step, to select high, middle or low for the display according to your preferences.

Improving the reception

DAB Band-III/FM:

Extend the wire antenna fully to increase reception sensitivity.

Operating the radio

The unit can receive DAB services and FM stations.

 
- 1 Press **RADIO ON/OFF-ALARM RESET** to turn on the radio. When the unit is turned on again, the last band you listened to is received.
- 2 Press **DAB/FM** repeatedly to select the desired band. Each press changes the band as follows:
- 3 Press the **UP(▶)/DOWN(◀)•TUNE/SELECT** to tune to the desired service or station. If you are selecting DAB, press **ENTER**.
- 4 Adjust the volume using **VOL +/-**.

Note in FM usage

The frequency step is set to 0.05 MHz on FM.

Notes in DAB usage

- If there are no services, you can choose only MANUAL mode.
- "Station not available" appears when the ensemble for the selected service cannot be received.
- DAB broadcasts with poor quality reception may be selected when Auto scan is performed. In this case, perform Manual tune, which may improve reception.
- If DAB services are invalid, or radio reception is poor, "?" is displayed in front of the selected service.



About the SC (Secondary Component)

If the selected primary component has a secondary component, ">>>" appears in the display.



Press **UP(▶)/DOWN(◀)•TUNE/SELECT** and **ENTER** to receive the desired secondary component. "<<<" appears while the secondary component is received.

Note

When the selected secondary component is finished, the unit returns automatically to the primary component.

Presetting your favourite services or stations

You can preset 10 services in DAB and 10 stations in FM.

Presetting services or stations

- 1 Follow steps 1 to 3 in "Operating the radio" and manually tune in to the broadcast you wish to preset.
- 2 Press **PRESET**.
- 3 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the favourite number to preset, then press and hold **PRESET**. "Preset saved" appears for 7 seconds in the display and the service or station is stored. (DAB services are stored with a service label.)

Notes

- To preset another service or station, repeat these steps.
- To change the preset service or station, tune in to the desired service or station and repeat steps 2 and 3. The new service or station will replace the previous service or station.
- When the service or station is not registered, "Empty preset" appears in the display.
- If you do not operate within 7 seconds during the above steps, the current mode will be cancelled.

Tuning in to a preset service or station

- 1 Press **PRESET**.
- 2 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the desired preset station and then press **ENTER**.

Notes

- When the service or station is not registered, "Empty preset" appears in the display.
- If you do not operate within 7 seconds during the above steps, the current mode will be cancelled.

Scan tuning (for FM)

The unit will automatically scan FM station.

- 1 Press **RADIO ON/OFF-ALARM RESET** to turn on the radio.
- 2 Press **DAB/FM** to select the FM band.
- 3 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to choose the direction, and then press **ENTER•FM SCAN**.
UP(▶): Scans to the higher frequency.
DOWN(◀): Scans to the lower frequency.
Scanning starts from the frequency being tuned in. When a station is received, scanning stops.
- 4 If necessary, press **UP(▶)/DOWN(◀)•TUNE/SELECT** to tune in to the station more precisely.
- 5 Adjust the volume using **VOL +/-**.

Setting the alarm

This unit allows you to set four alarm programmes (ALARM 1-4).

The alarm time can be set for every programme and the alarm sound is selectable from radio or buzzer.

The alarm will come on at the same time everyday. Before setting the alarm, make sure to set the clock (see "Setting the Clock").

To set the alarm time

- 1 Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select "Alarm settings," and then press **ENTER**.
- 2 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the desired alarm (1 - 4) and then press **ENTER**. When the alarm is not set up, "Not in use" appears in the display.
- 3 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the alarm mode (DAB, FM and buzzer) and then press **ENTER**. "Set alarm" appears in the display. If you select DAB or FM, "Set volume" appears in the display. In this case, repeat this step and adjust the volume.
- 4 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select "ON," and then press **ENTER**. The alarm time appears in the bottom of the display, and the arrow appears in both sides of the hour indicator.
- 5 Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to set the hour, and then press **ENTER**. The arrow appears in both sides of the minute indicator.
- 6 Repeat step 5 to set the minute and the alarm mode. The alarm mode as follows:
"Weekdays": Every Monday to Friday
"Weekends": Every Saturday and Sunday
"Daily": Everyday from Sunday to Saturday
"Once": Once only
If you select "Once" repeat step 5 to set the year, month and day.
- 7 Press **ENTER**. The setting is complete.

Tip

You can set the alarm using **ALARM** button on the unit. Press **ALARM** and follow after steps 2.

Notes


- The default alarm time for radio and buzzer is the current time of the clock.
- If you quit during the alarm setting, after about 7 seconds the previous display will return.
- If a second alarm sounds during a first (or the snooze function is active), the second alarm takes priority.
- If the alarm sounds at the same time (or the snooze function is active), the large alarm number takes priority.
- When Summer time begins, it is necessary to adjust the current time by manually (see "Time adjustment about Summer time").
- While setting the alarm or the alarm is active, "ALARM (1-4)" will flash.

To set the alarm on/off

- 1 Follow steps 1 to 4 in "To set the alarm time." "Set alarm" appears in the display.
- 2 Press **UP(▶)/DOWN(◀)•TUNE SELECT** to set the alarm "ON" or "OFF," and then press **ENTER**. "ON": "ALARM (1-4)" appears in the display when the alarm setting is complete. "OFF": "ALARM (1-4)" turn off from the display.



- 3 Follow after step 5 in "To set the alarm time." The setting is complete.

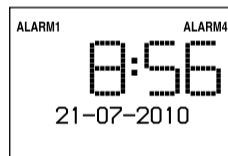

To doze for a few more minutes

Press **SNOOZE/SLEEP OFF**.

The radio or buzzer turns off, but will automatically come on again after about 5 minutes. (While the snooze function is active, the selected alarm setting and "Snooze" flash in the display.)

To stop the alarm

Press **RADIO ON/OFF-ALARM RESET** to turn off the alarm. The alarm will come on again at the same time the next day.

 
Setting the Sleep Timer

You can enjoy falling asleep to the radio using the built-in sleep timer that turns off the radio automatically after a preset duration.

- 1 Press **SLEEP** while the unit is turned on. "Sleep" appears in the display.



- 2 Press **SLEEP** to set the sleep timer duration. Each time you press **SLEEP**, the duration changes as follows:



The unit automatically turns off when the duration time is passed.

Press **ENTER** or 7 seconds after you have finished setting the duration setting and released **SLEEP**, "Sleep activated" appears in the display and then the sleep timer starts. The unit will play for the duration you set, and then shut off.

To change the Sleep Timer setting

Repeat step 2 to select the desired sleep timer setting even after the sleep timer has been activated.

To deactivate the Sleep Timer

- Press **SNOOZE/SLEEP OFF**, the unit will turn off.
- Press **SLEEP** to set the sleep timer "Off," only the sleep timer will be cancelled (the radio keeps on).

Other useful functions for DAB


Changing the display

To change the display mode, press **DISPLAY•BRIGHTNESS** during DAB reception.

The selected display mode remains even if you turn the unit off and on again, or change the band.

The display can be up to 16 characters long.

Each time you press **DISPLAY•BRIGHTNESS**, the bottom in a display changes as follows:

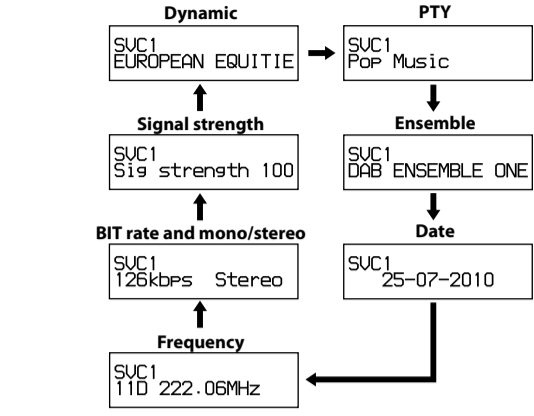

Depending on the broadcasting station, the characters in dynamic labels may not be displayed properly.

Station order

This function enables you to choose how the stations are arranged when selecting a station.

There are 3 modes available Alphanumeric, Active stations and Trim stations.

- Alphanumeric(default):
 - To select a stored service in alphabetical order.
- Active stations:
 - When this setting is switched on, receivable stations are displayed, followed by those not currently being received.
- Trim stations:
 - When this setting is switched on the unit will delete the stations that are not currently being received.

- Follow steps **1** and **2** in “Operating the radio” and select DAB.
- Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select “Station order,” and then press **ENTER**.
- Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the desired mode, and then press **ENTER**.

Manual tune

This function allows you to tune and add the various DAB Band-III channels to your station list.

This function can be used to assist the positioning of the antenna or the unit to obtain the optimum reception for a specific channel / frequency.

- Follow steps **1** and **2** in “Operating the radio” and select DAB.
- Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select “Manual tune,” and then press **ENTER**.
- Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the desired DAB channel, and then press **ENTER**.
 - The signal strength bars will go up and down showing the changing signal strength as you adjust the reception.
- Press **ENTER**.
 - A new DAB channel is added to the station list.

 
DRC Value (DYNAMIC RANGE CONTROL)

DRC can make quieter sounds easier to hear when the unit is used in a noisy environment.

When DAB broadcasts in dynamic range compression, you can adjust the dynamic range by this unit.

- Follow steps **1** and **2** in “Operating the radio” and select DAB.
- Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select “DRC value” and then press **ENTER**.
- Press **UP(▶)/DOWN(◀)•TUNE/SELECT** to select the DRC level.

The DRC level changes as follows:



- Press **ENTER**.

Notes

- DRC is effective only in dynamic range compression broadcast.
- When you adjusted the DRC level, volume can be heard more loudly.

Autoscan full

These function allows you to automatically scan and create a list of receivable DAB broadcasts.

- Follow steps **1** and **2** in “Operating the radio” and select DAB.
- Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select “Autoscan full,” and then press **ENTER**.
 - “Scanning..” appears in the display, scan and create a list of receivable DAB broadcasts.

Autoscan takes about 30 - 90 seconds. When finished, the unit receives a stored service in alphabetical order (see “Station order”).

PTY (Programme Type)

This function indicates services in programme type, such as NEWS, SPORTS of the PTY list, transmitted in the DAB.

If the received service or station does not transmit the programme type, “[No PTY]” appears.

Programme type	Display
No programme type	[No PTY]
News	News
Current Affairs	Current affairs
Information	Information
Sport	Sport
Education	Education
Drama	Drama
Culture	Arts
Science	Science
Varied	Talk
Pop Music	Pop Music
Rock Music	Rock Music
Easy Listening Music	Easy Listening
Light Classical	Light Classical
Serious Classical	Classical Music
Other Music	Other Music
Weather/meteorology	Weather
Finance/Business	Finance
Children’s programmes	Children’s
Social Affairs	Factual
Religion	Religion
Phone In	Phone In
Travel	Travel
Leisure	Leisure
Jazz Music	Jazz and Blues
Country Music	Country Music
National Music	National Music
Oldies Music	Oldies Music
Folk Music	Folk Music
Documentary	Documentary

Other useful functions

To display the software version

Press **MENU** and **UP(▶)/DOWN(◀)•TUNE/SELECT** to select “Sw version.” The current software version of the unit appears in the display.

To reset the unit

When the radio fails to function properly, follow as:

- Press and hold **MENU** and **ENTER** at the same time for a few seconds.
 - “Press ENTER to confirm reset...” appears in the display.
- Press **ENTER**.
 - The clock settings, the services and stations you have preset, etc., will revert to the factory preset.

Precautions

- Operate the unit only on the power sources specified in “Specifications.”
- Use the unit within a temperature range of 0°C to 40°C (32°F to 104°F). If it is used in temperatures higher than this range, numbers may appear in the display which have nothing to do with the frequency being received. If it is used in temperatures lower than this range, the numbers displayed may change very slowly. (These irregularities will disappear and there will be no damage to the unit when the unit is used in the recommended temperature range.)
- Do not leave the unit in a location near a heat source such as a radiator or airduct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, blanket, etc.) or near materials (a curtain) that might block the ventilation holes.
- Never touch the wire of the external antenna during a thunderstorm. Furthermore, immediately disconnect the AC power cord from the radio.
- Since a strong magnet is used for the speakers, keep away personal credit cards using magnetic coding or spring-wound watches from the unit to prevent possible damage from the magnet.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative

consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made the following checks, consult your nearest Sony dealer.

Display is dim, or no indication is displayed.

- The unit is being used in extremely high or low temperatures or in a place with excessive moisture.

Very weak or interrupted sound, or unsatisfactory reception.

- If you are in a building, listen near a window.

A station or service cannot be received when a PRESET recalls.

- The station or service has not been preset.
- Another station or service is preset. Preset the station or service again.

The preset services and stations may be initialized, if a maintenance service is performed.

Please note down of your settings in case you want to preset them again.

Specifications

Time display

Model for United Kingdom and Australia: 12-hour system (default)

Model for other countries/regions: 24-hour system (default)

Band	Frequency	Channel step
DAB (Band-III)	174.928 MHz - 239.200 MHz	
FM	87.5 MHz - 108 MHz	0.05 MHz

DAB (Band-III) frequency table						(MHz)
No.	Channel	Frequency	No.	Channel	Frequency	
1	5A	174.928	20	9D	208.064	
2	5B	176.640	21	10A	209.936	
3	5C	178.352	22	10B	211.648	
4	5D	180.064	23	10C	213.360	
5	6A	181.936	24	10D	215.072	
6	6B	183.648	25	11A	216.928	
7	6C	185.360	26	11B	218.640	
8	6D	187.072	27	11C	220.352	
9	7A	188.928	28	11D	222.064	
10	7B	190.640	29	12A	223.936	
11	7C	192.352	30	12B	225.648	
12	7D	194.064	31	12C	227.360	
13	8A	195.936	32	12D	229.072	
14	8B	197.648	33	13A	230.784	
15	8C	199.360	34	13B	232.496	
16	8D	201.072	35	13C	234.208	
17	9A	202.928	36	13D	235.776	
18	9B	204.640	37	13E	237.488	
19	9C	206.352	38	13F	239.200	

Speaker:

Approx. 6.6 cm dia. 4 Ω

Power output:

0.4 W (at 10 % harmonic distortion)

Power requirements:

230 V AC, 50 Hz

Dimensions:

Approx. 192.5 mm × 92.6 mm × 87.7 mm (w/h/d) incl. projecting parts and controls

Mass:

Approx. 455 g

Design and specifications are subject to change without notice.