




CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Guida all'avvio / Guía de inicio rápido / Snelstartgids / Startvejledning / Uppstartguide / Käynnistysopas / Guia de Início Rápido / Οδηγός εκκίνησης / Başlangıç Kılavuzu / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Instrukcja uruchamiania / Руководство по началу работы / Посібник із налаштування / Іске қосу нұсқаулығы

1


A

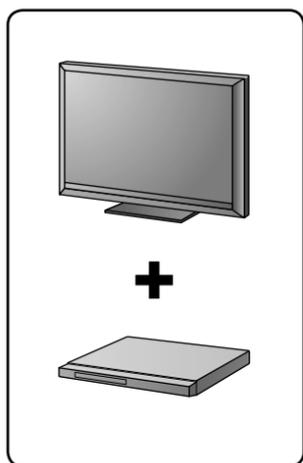


■ SCART

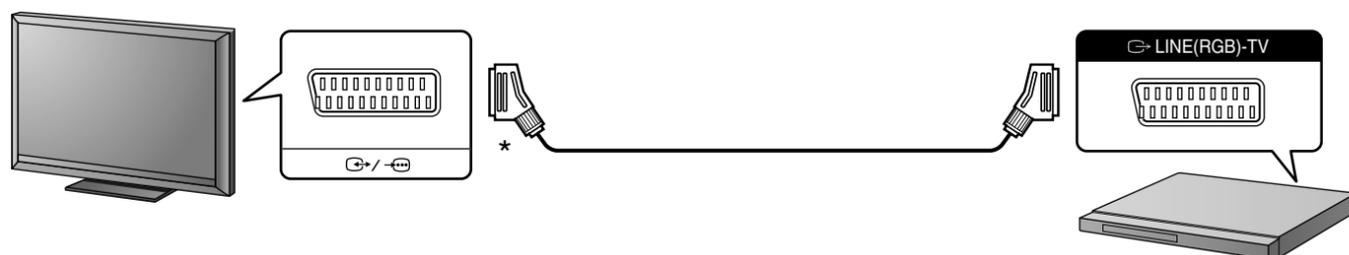


B

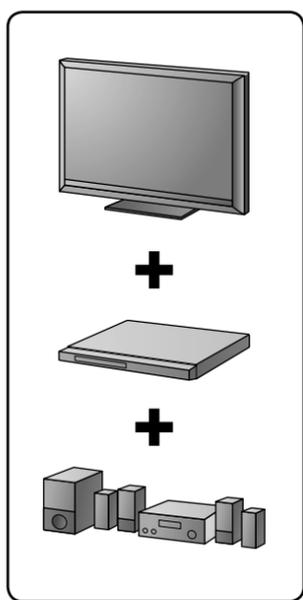

■ COAXIAL

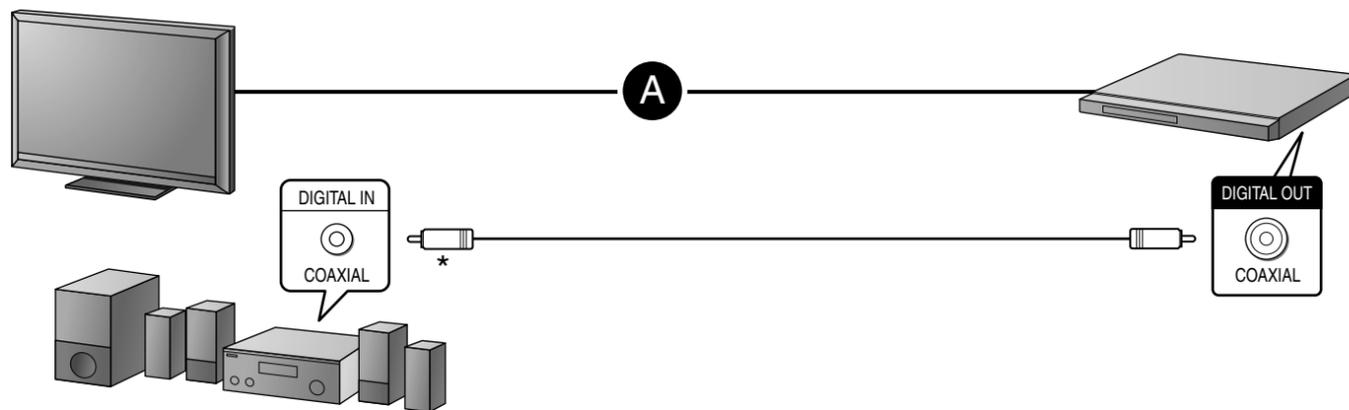

■ AUDIO

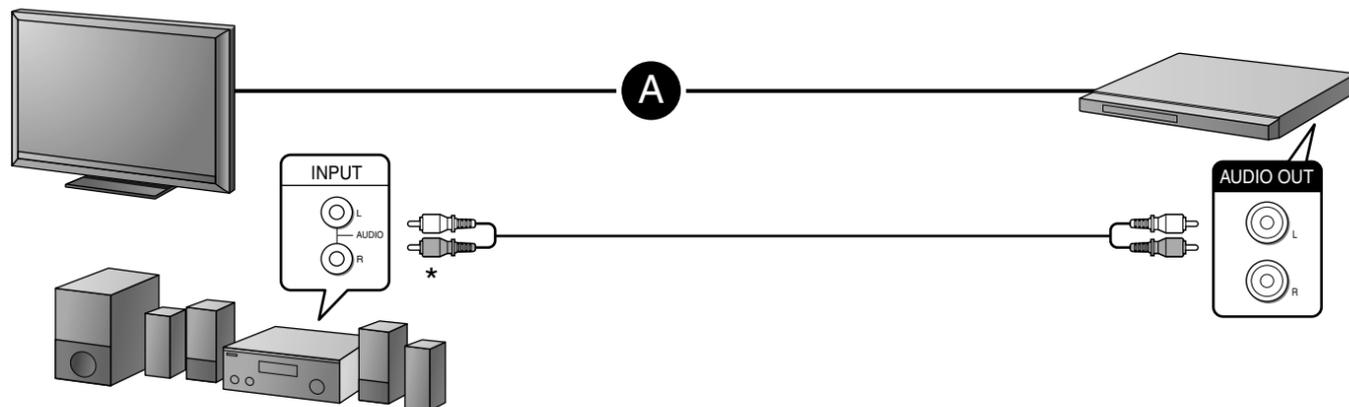


* Not supplied / Non fourni / Nicht mitgeliefert / Non in dotazione / No suministrado / Niet bijgeleverd / Medfølger ikke / Medfølger ej / Ei sisälly vakiovarusteisiin / Não fornecido / Δεν παρέχεται / Birlikte verilmez / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Nie należy do wyposażenia / Не прилагается / Не поставляется / Берілмеген


I / ⏻ : on/standby / marche/veille / Ein/Bereitschaft / accensione/attesa / encendido/en espera / aan/wachtstand / tændt/standby / på/standby / virta/valmiustila / ligado/em espera / σε λειτουργία/σε αναμονή / açık/beklemede / zapnuto/pohotovost / be/készlet / pornit/veghe / właczono/oczekiwanie / вкл./ожидание / увімкнено/ очікування / қосулы/күту

2



1

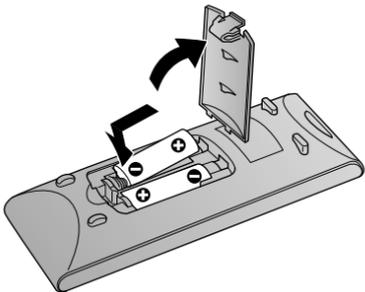

2

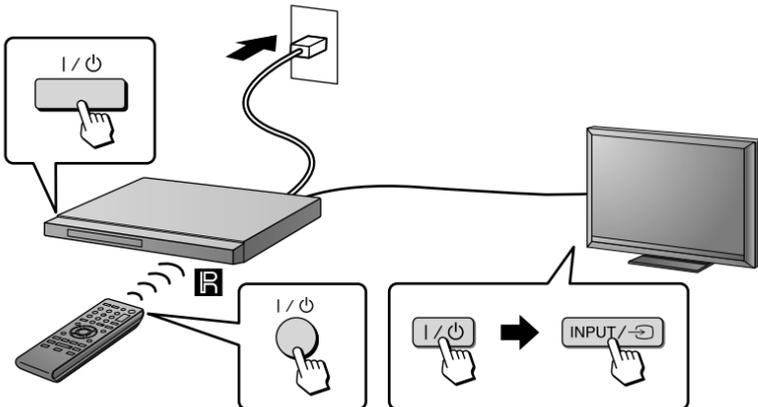


3

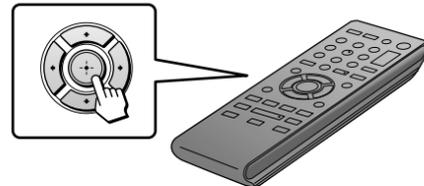
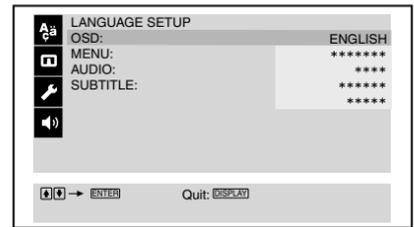


3

1

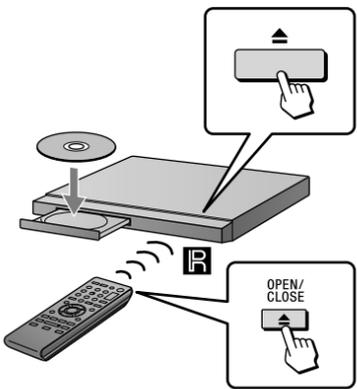

2

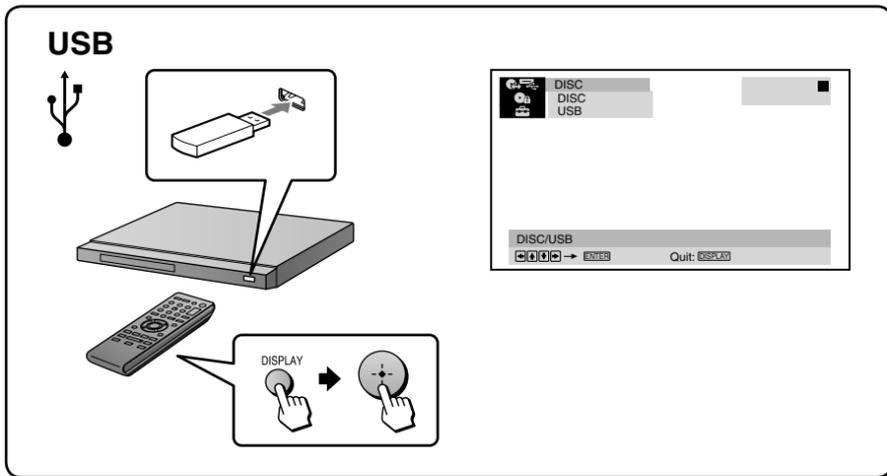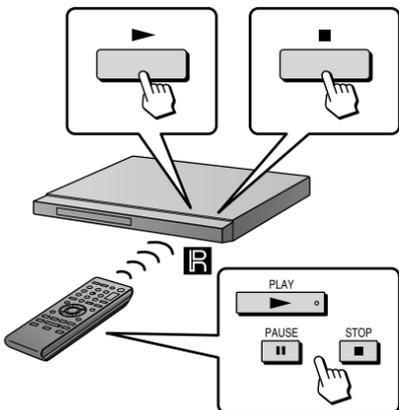

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

DISPLAY

At the bottom of the diagram, there are two playback progress bars. The left one shows a playhead moving across a bar with icons for stop, previous, play/pause, next, and fast forward. The right one shows a playhead at the start of a bar with icons for stop, previous, play/pause, next, and fast forward.