

Micro HI-FI Component System

■GB Operating Instructions



©2012 Sony Corporation Printed in China

CMT-V75BTiP

http://www.sony.net/



WARNING

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.


The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

The nameplate is located on the bottom exterior of the unit.

Excessive sound pressure from earphones and headphones can cause hearing loss.

CAUTION

The use of optical instruments with this product will increase eye hazard.

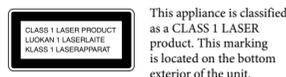

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

For customers in Europe and Australia

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the

shop where you purchased the product. Applicable accessory: Remote commander



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 meters.

Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>

Norway

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Alesund, Svalbard.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Music discs encoded with copyright protection technologies


This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

License and Trademark Notice

- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- All other trademarks and registered trademarks are of their respective holders. In this manual, ™ and ® marks are not specified.


Location of Controls

Unit (Top)

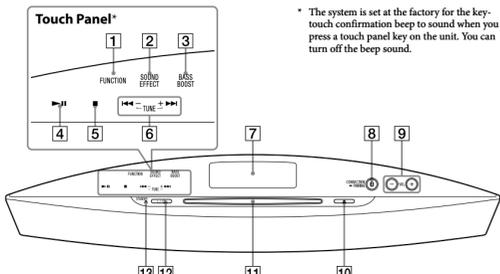

- 7 Display
- 11 Disc slot

Unit (Front)

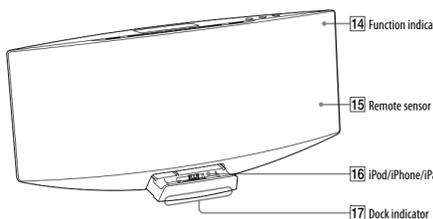


About the function indicator 14

The function indicator lights in different colors according to the function. You can tell the current function by the color of the indicator. The indicator color of each function is same color as that of the corresponding FUNCTION button on the remote.


Function	Button on the remote	Indicator color
DAB	DAB	Pink
FM	FM	Sky blue
AUDIO IN	AUDIO IN	Amber
CD	CD	Yellow
iPod	iPod	White
BT AUDIO (Bluetooth)	BLUETOOTH	Blue

Remote

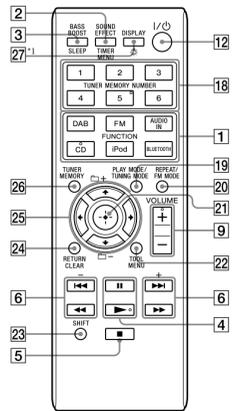

- 1 27 (Illumination) button Turn ON/OFF the dock indicator 17.
- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.
- The function indicated by pink on the remote can be activated using SHIFT 23. If you want to operate the function indicated by pink, press and hold SHIFT 23 and press the button of the function indicated by pink. If you press the button without holding the SHIFT 23 pressed the system activates the function indicated by white.

Getting Started

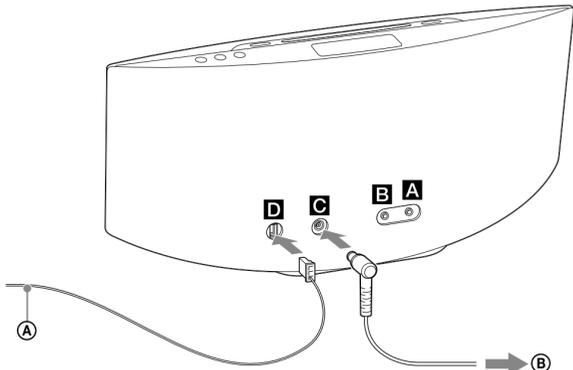

- A DAB/FM lead antenna (Extend it horizontally.)
- B To AC Adapter

A (phones) jack

Connect the headphones.

B AUDIO IN jack

Connect an optional audio component.

C Power (DC IN 19.5 V)


- 1 Connect the power cord to the AC adapter.
- 2 Connect the AC adapter to the unit, and then plug the power cord in to a wall outlet.

D DAB/FM antennas


Find a location and an orientation that provide good reception, and then set up the antennas. Keep the antennas away from the power cord to avoid picking up noise.

To use the iPod/iPhone/iPad

- 1 Open the dock by pushing the center of the dock.

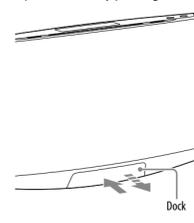

- 2 Place the iPod/iPhone/iPad.

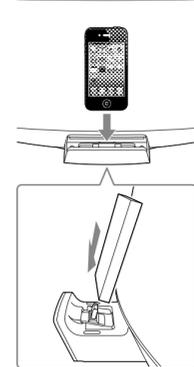


Note
Be careful not to drop the unit when disconnecting an iPod/iPhone/iPad from the iPod/iPhone/iPad connector.

Operations

Playing a CD/MP3 disc

- 1 Select the CD function.
Press CD FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in yellow.
- 2 Insert a disc.
Insert a disc in the disc slot with the label side facing forward.

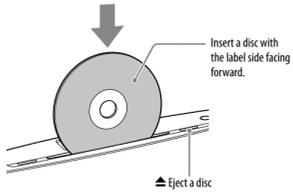

Playback starts automatically after "READING" disappear.

When you changing from another function to the CD function while a disc is already inserted in the disc slot, press 4 on the remote or press 4 on the unit to start playback.

Notes

- When you turn on the system, the disc will not be pulled into the disc slot until "NO DISC" appears in the display. Do not attempt to push in the disc until "NO DISC" appears.
- If you cannot insert the disc into the disc slot even when "NO DISC" appears in the display, there may already be a disc in the slot. Press and hold down 10 to eject such a disc forcibly. If even the system does not then eject the disc, contact your nearest Sony dealer.
- If you cannot eject the disc and "LOCKED" appears in the display, contact your nearest Sony dealer.
- Do not insert a disc with non-standard shapes (e.g., heart, square, star). The disc may fall into the system and cause irreparable damage.
- When pressing 10 on the unit and then reinserting the disc that appears in the disc slot, do not simply push in the disc. Remove the disc from the disc slot and then reinsert it.
- Do not turn off the system with a disc halfway inserted in the disc slot. Doing so may cause the disc to fall.
- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.
- Do not insert an 8 cm disc with an adapter. Doing so may cause the system to malfunction.

Other operations

To	Press
Pause playback	11 4 (or) 11 4 on the unit). To resume play, press the button again.
Stop playback	15 5.
Select a folder on an MP3 disc	10 +/- 25.
Select a track or file	11 4 (or) 11 4 6 (or) 11 4 6 on the unit) during playback, and release the button at the desired point.
Find a point in a track or file	Hold down 11 4 (or) 11 4 6 (or) 11 4 6 on the unit) during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 20 repeatedly until "C" or "C1" appears.
Eject a disc	10 10 on the unit.

To change the play mode

Press TUNING MODE 19 repeatedly while the player is stopped. You can select Normal Play mode ("FLDR" for all MP3 files in the folder on the disc), Shuffle Play mode ("SHUF" or "FLDR SHUF" for folder shuffle), or Program Play mode ("PGM").
* When playing a CD-DA (audio) disc, FLDR or FLDR SHUF Play performs the same operation as Normal or SHUF Play.

Notes on Repeat Play

- "C" indicates that all tracks or files will be repeated until you stop playback.
- "C1" indicates that a single track or file will be repeated until you stop playback.

Notes on Shuffle Play mode

- When Shuffle Play mode is set to "SHUF", the system shuffle-plays all tracks or files on the disc. When Shuffle Play mode is set to "FLDR SHUF", the system shuffle-plays all tracks or files in selected folder.
- When you turn off the system, the selected Shuffle Play mode ("SHUF" or "FLDR SHUF") is cleared and the play mode returns to Normal or FLDR Play mode.

Notes on playing MP3 discs

- Do not save other types of tracks or files, or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- The system can only play MP3 files that have a file extension of ".mp3".
- Even when file name has the ".mp3" file extension, if the actual file differs, playing this file may generate a loud noise which could damage the system may malfunction.
- The maximum number of:
 - 9999 folders (including the root folder)
 - 999 MP3 files
 - 250 MP3 files in a single folder
 - 8 folder levels (in the tree structure of files)
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.
- This include folders that have no MP3 or other files. The number of folders that the system can recognize may be less than actual number of folders, depending on the folder structure.

Creating your own program (Program Play)

- 1 Select the CD function.
Press CD FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in yellow.
- 2 Select the play mode.
Press PLAY MODE 19 repeatedly until "PGM" appears while the player is stopped.
- 3 Select a folder (MP3 disc only).
Press +/- 25 repeatedly to select the desired folder. If you want to program all files in the folder, press 21.
- 4 Select the desired track or file number.
Press 11 4 (or) 11 4 6 repeatedly until the desired track or file number appears.



- 5 Program the selected track or file.
Press 21 to enter the selected track or file. "... " appears when the total playing time exceeds 100 minutes for an CD or when you program an MP3 files.
- 6 Repeat steps 3 through 5 to program additional tracks or files, up to a total of 25 tracks or files.
- 7 To play your program of tracks or files, press 4 (or) 11 4 on the unit).

The program remains available until you remove the disc from the disc slot 11 or unplug the power cord. To play the same program again, press 4 (or) 11 4 on the unit).

To cancel Program Play

Press PLAY MODE 19 repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program

Press and hold SHIFT 23 and CLEAR 24 while the player is stopped.

Listening to the radio

Tuning in a FM station

- 1 Select the FM function.
Press FM FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in sky blue.
- 2 Perform tuning.

For automatic scanning

Press TUNING MODE 19 repeatedly until "AUTO" appears, and then press +/- 6. Scanning stops automatically when a station is tuned in, and "STEREO" (for stereo programs only) light up in the display.

If the scanning does not stop, press 5 to stop scanning, then perform manual tuning (below). When you tune in a station that provides RDS services, information such as the service name or station name is provided by broadcasts.

For manual tuning

Press TUNING MODE 19 repeatedly until "MANUAL" appears, and then press +/- 6 repeatedly to tune in the desired station.

Running the DAB Automatic Scan manually

Before you can tune in DAB/DAB+ stations, you must perform a DAB Initial Scan. When you have moved to another area, also perform the DAB Initial Scan manually to update the DAB/DAB+ service information.

- 1 Select the DAB function.
Press DAB FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in pink.
- 2 Press TOOL MENU 22 to start the DAB Automatic Scan.
"INITIAL SCAN" appear.
- 3 Press 21 to perform scanning.
Scanning begins. The scanning progress is indicated by asterisks (*****). Depending on the DAB/DAB+ services available in your area, scanning may take a few minutes.



When scanning is complete, a list of available services is created.

Notes

- If your country or region does not support DAB/DAB+ broadcast, "NO SERV" appears.
- This procedure clears all previously stored presets.
- Before unplugging the DAB/FM antenna, make sure the system is turned off to preserve your own DAB/DAB+ settings.

Tuning in a DAB/DAB+ station

Before tuning in DAB/DAB+ stations, make sure that the DAB Initial Scan has been performed.

- 1 Select the DAB function.
Press DAB FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in pink.
- 2 Perform tuning.
Press TUNING MODE 19 repeatedly until "AUTO" appears, and then press +/- 6 to select a station.
When you tune in a station that provides RDS services, information such as the service name or station name is provided by broadcasts.

Notes on DAB/DAB+ stations

- Before tuning in a DAB/DAB+ station, it may take a few seconds before you hear any sound.
- Primary service is automatically received when secondary service ends.
- This tuner does not support data services.

Tip

To reduce static noise on a weak FM stereo station, press FM MODE 20 repeatedly until "MONO" appears to turn off stereo reception.

Presetting radio stations

- 1 Tune in the desired station.
- 2 Press TUNER MEMORY 26 to select the tuner memory mode.
- 3 Press +/- 6 repeatedly to select the desired preset number.
If another station is already assigned to the selected preset number, the station is replaced by the new station.
- 4 Press 21 to register the station.
- 5 Repeat steps 1 through 4 to register other stations.
You can preset up to 20 DAB/DAB+ and 20 FM stations.

Notes on presetting DAB/DAB+ stations

- You can preset a DAB/DAB+ service only when it can be received.
- If you select an unregistered preset number, "NO PRESET" appears in the display.

To tune in to a preset radio station

If you registered a radio station to a preset number 1 to 6, the radio station will be tuned in by just pressing the TUNER MEMORY NUMBER (1 to 6) 18 when the system function is set to FM or DAB.

If you registered a radio station to a preset number 7 or higher, press TUNING MODE 19 repeatedly until "PRESET" appears then press +/- 6 repeatedly to select the desired preset number.

Playing the iPod/iPhone/iPad

- 1 Select the iPod function.
Press iPod FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator lights in white.
- 2 Place the iPod/iPhone/iPad.
- 3 Start playback.
Press 4 on the remote or press 11 4 on the unit.

To control the iPod/iPhone/iPad

To	Press
Pause playback	11 4 15 5.
Select a track or chapter of audiobook/podcast	11 4 (or) 11 4 6. To fast-forward or fast-rewind, hold down the button.
Find a point in a track or chapter of audiobook/podcast	Hold down 11 4 (or) 11 4 6 during playback, and release the button at the desired point.
Choose the selected item	21.
Scroll up/down the iPod menus	4/25.
Return to the previous menu or select a menu	TOOL MENU 22/RETURN 24.

To use the system as a battery charger

You can use the system as a battery charger for an iPod/iPhone/iPad whether the system is on or off. To see whether charging is operating or not, check the battery icon of the iPod/iPhone/iPad display. Check the "iPod/iPhone/iPad section" of the "Specifications" for a list of iPod/iPhone/iPad models compatible with this system.

To stop charging an iPod/iPhone/iPad

Remove the iPod/iPhone/iPad.

Note on charging an iPod/iPhone/iPad

If you press DISPLAY 27 while charging when the system is off, the system stops charging an iPod/iPhone/iPad. To restart charging of an iPod/iPhone/iPad, reconnect the iPod/iPhone/iPad when the display mode is Power Saving mode.


Notes

- The performance of the system may vary, depending on the specifications of your iPod/iPhone/iPad.
- When placing or removing the iPod/iPhone/iPad, handle the iPod/iPhone/iPad in the same angle as that of the iPod/iPhone/iPad connector on the unit and do not twist or sway the iPod/iPhone/iPad to prevent connector damage.
- Do not carry the system with an iPod/iPhone/iPad set on the connector. Doing so may cause a malfunction.

- When placing or removing the iPod/iPhone/iPad, brace the system with one hand and take care not to press the controls of the iPod/iPhone/iPad by mistake.
- To change the volume level, use VOLUME +/- 9. The volume level does not change if you adjust it on the iPod/iPhone/iPad.
- To use an iPod/iPhone/iPad, refer to the user's guide of your iPod/iPhone/iPad.
- Sony cannot accept responsibility in the event that data recorded on iPod/iPhone/iPad is lost or damaged when using an iPod/iPhone/iPad with this system.

Using the Bluetooth function

You can listen to music from your Bluetooth mobile phone or Bluetooth device over a wireless connection.

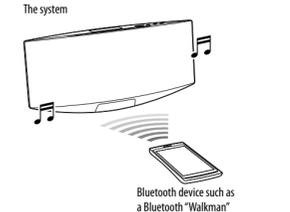

This system supports the Bluetooth A2DP and AVRCP profiles. For details on Bluetooth wireless technology, see "Bluetooth wireless technology"

Check the website below for the latest information about compatible devices. <http://support.sony-europe.com/>

About the indicator for Bluetooth

The function indicator lights or flashes in blue to allow checking the Bluetooth status.

System status	Indication status
The system is in Bluetooth Standby (when the system is on)	Flashes slowly in blue.
During Bluetooth pairing	Flashes quickly in blue. The system is attempting to connect with a Bluetooth device
The system has established in connection with a Bluetooth device	Lit in blue.

Pairing this system with a Bluetooth device

Pairing is an operation where Bluetooth devices register with each other beforehand. Use the procedure below to pair the system with your Bluetooth device. Once a pairing operation is performed, it does not need to be performed again. If pairing is already completed, proceed to "Playing music from a Bluetooth device."

- 1 Place the Bluetooth device to be connected to this system within 1 meter of the system.
- 2 Select the BLUETOOTH function.
Press BLUETOOTH FUNCTION 1 on the remote or press FUNCTION 1 on the unit repeatedly.
The function indicator flashes slowly in blue and "BT AUDIO" appears in the display.
If already connected with a Bluetooth device that has been connected with this system in the past by automatic connection, press 8 (Bluetooth) 8 on the unit to cancel the connected Bluetooth device. "BT AUDIO" appears.
- 3 Press and hold 8 (Bluetooth) 8 on the unit for 2 seconds or longer.
The function indicator lights quickly in blue and "PAIRING" flashes. The system is in Pairing mode.
- 4 Operate the Bluetooth device and perform the pairing operation.
For details on operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.

When searching for this system with the Bluetooth device, a list of the devices found may appear on the Bluetooth device display, depending on the type of Bluetooth device.
This system appears as "CMT-V75BTiP (S)".
When establishing a connection with this system, select the audio profile (A2DP, AVRCP) at the Bluetooth device. If the Bluetooth device does not support the AVRCP profile, you cannot perform playback or other operations with the system.

To erase all the pairing registration information

1 Select the BLUETOOTH function.

Press BLUETOOTH FUNCTION ↵ on the remote or press FUNCTION ↵ on the unit repeatedly.

The function indicator flashes slowly in blue and “BT AUDIO” appears in the display.

When the system is connecting with a Bluetooth device, the Bluetooth device name that is set with the Bluetooth device appears.

Press ⓪ (Bluetooth) ↵ to cancel the connected Bluetooth device. “BT AUDIO” appears.

2 Press and hold SHIFT ↔ and CLEAR ↵. “DELETE” flashes.

3 Press ⓪ ↵.

“COMPLETE” appears and all the pairing information is erased.

Notes

- If you erase the pairing information, you cannot make a Bluetooth connection unless pairing is performed. In order to connect with a Bluetooth device after performing this operation, you must enter the passkey again.
- If you erase the pairing information, the Bluetooth Standby mode setting is set to off.

Playing music from a Bluetooth device

You can operate a Bluetooth device by connecting the system and a Bluetooth device using AVRCP.

Check the following before playing music:

—The Bluetooth function of the Bluetooth device is enabled.

—Pairing has been completed.

1 Select the BLUETOOTH function.

Press BLUETOOTH FUNCTION ↵ on the remote or press FUNCTION ↵ on the unit repeatedly.

The function indicator flashes slowly in blue and “BT AUDIO” appears in the display.

2 Establish connection with the Bluetooth device.

For details on operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.

Once the connection is established, “LINKED” appears then the Bluetooth device name that is set with the Bluetooth device appears.

If already connected with a Bluetooth device that has been connected with this system in the past, you may be connected automatically without operating the Bluetooth device.

3 Start playback.

Press ▶ 4 (or ▶ ▶ 4) on the unit).

Depending on the Bluetooth device, you may have to press ▶ 4 twice.

Depending on the Bluetooth device, you may have to start up the AV software of the Bluetooth device beforehand.

4 Adjust the volume.

Press VOLUME +/− 9.

Other operations

To	Press
Pause playback	⏸ 4 ¹⁾ (or ▶ ▶ 4 ¹⁾ on the unit).
Stop playback	■ 5 .
Select a folder	□ +/− 25 .
Select a file	◀ ◀ ▶ ▶ 6 .
Find a point in a file	Hold down ◀ ▶ 6 (or ◀ ▶ 6) on the unit).

1) Depending on the Bluetooth device, you may have to press ▶ 4 (or ▶ ▶ 4) on the unit) twice.

Note

These operations may not be available for certain Bluetooth devices. In addition, the actual operations may differ depending on the connected Bluetooth device.

To check the address of a connected Bluetooth device

Press DISPLAY ↵ while the Bluetooth device name that is set with the Bluetooth device is displayed.

The Bluetooth device address appears in two installments on the system display for 8 seconds.

To cancel the connection with a Bluetooth device

Press ⓪ (Bluetooth) on the unit until “UNLINKED” appears.

Depending on the Bluetooth device, the connection with the Bluetooth device may be cancelled automatically if you stop playback.

Setting/Canceling Bluetooth Standby mode

Bluetooth Standby mode can be entered when the system goes into Wait mode for the Bluetooth connection, even when the system is turned off. You cannot set Bluetooth Standby mode if pairing has been not completed or the pairing information is erased.

1 Select the BLUETOOTH function.

Press BLUETOOTH FUNCTION ↵ on the remote or press FUNCTION ↵ on the unit repeatedly.

The function indicator flashes in blue.

If already connected with Bluetooth device that has been connected with this system in the past by automatic connection, press ⓪ (Bluetooth) ↵ to cancel the connected Bluetooth device. “BT AUDIO” appears.

2 Press TOOL MENU ↵.

“BT STBY” appears.

If the system has no pairing information, “NOT USED” flashes.

3 Press ⓪ ↵.

“ON” or “OFF” appears.

4 Select “ON” or “OFF”.

Press ◀ ▶ 6 repeatedly.

5 Turn off the system.

Press ⏻ 1 ↵.

When it is set to on, you can listen to music from the system that if it is turned on by operating the Bluetooth connection on the Bluetooth device.

Note
If you erase the pairing information, Bluetooth Standby mode will set to off.

Using optional audio components

1 Prepare the sound source.

Connect additional audio component to the AUDIO IN jack ↵ on the unit using an audio analog cord (not supplied).

2 Turn down the volume.

Press VOLUME − 9.

3 Select the AUDIO IN function.

Press AUDIO IN FUNCTION ↵ on the remote or press FUNCTION ↵ on the unit repeatedly. The function indicator lights in amber.

4 Start playback.

Start playback of the connected component and adjust the volume.

Note

The system may enter Standby mode automatically if the volume level of the connected component is too low. Adjust the component's volume accordingly. See “To turn off the Automatic Standby function.”

To	Press
Adjust the volume	VOLUME +/− 9 .
Generate a more dynamic sound	BASS BOOST 3 .
Set the sound effect	SOUND EFFECT 2 repeatedly until desired sound effect is displayed.

Changing the display

To	Press
Change information on the display ¹⁾	DISPLAY ↵ repeatedly when the system is on.
Change display mode (see below)	DISPLAY ↵ repeatedly when the mode is off. ²⁾

¹⁾For example, you can view CD/MP3 disc information, such as:

CD-DA disc	
—remaining playing time of a track during playback	
—total remaining playing time	
MP3 disc	
—track or file name (“ ♫ ”)	
—artist name (“ ♫ ”)	
—album name (“ ♫ ”)	
You can also view DAB/DAB+ station information such as the service name, channel label, preset number, frequency, DLS (Dynamic Label Segment), or ensemble label.	

²⁾The STANDBY indicator ⓪ on the unit lights up when the system is off.

The system offers the following display modes.

Display mode	When the system is off ¹⁾
Power Saving mode ²⁾	The display is turned off to conserve power. The timer and clock continue to operate.
Clock ³⁾	The clock is displayed.

¹⁾The STANDBY indicator ⓪ on the unit lights up when the system is off.

²⁾You cannot set the clock in Power Saving mode.

³⁾The clock display automatically turns to Power Saving mode after 8 seconds.

Notes on the display information

- Characters that cannot be displayed appear as “_”.
- The following are not displayed:
 - total playing time for an MP3 disc.
 - total remaining playing time for an MP3 disc.
 - remaining playing time for an MP3 file.
- The following are not displayed correctly:
 - elapsed playing time of an MP3 file encoded using VBR (variable bit rate).
 - folder and file names that do not follow either the ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
 - total playing time for a CD-DA disc (except when PGM mode is selected and the player is stopped).
 - remaining playing time for a track of CD-DA disc.
 - remaining playing time for a CD-DA disc (only when Normal Play mode is selected during playback).
 - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used (ID3 version 2 tag information display has priority when both ID3 version 1 and version 2 tags are used for a single MP3 file).

—up to 64 characters for an ID3 tag, where characters allowed are uppercase letters (A to Z), numbers (0 to 9), and symbols (“ \$ % ‘ ’ * + , - . / < > @ [\] ^ _ { | } ~ ”).

Notes on the DAB/DAB+ display information
The following is also displayed:

- up to 8 characters of service name, up to 128 characters of DLS (Dynamic Label Segment) and up to 16 characters of ensemble label.
- a value between 0 and 100 indicating the signal quality is displayed.

To	Press
Adjust the volume	VOLUME +/− 9 .
Generate a more dynamic sound	BASS BOOST 3 .
Set the sound effect	SOUND EFFECT 2 repeatedly until desired sound effect is displayed.

Using the timers

The system offers 2 timer functions. If you use both timers, the Sleep Timer has priority.

Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set.

Press and hold SHIFT ↔ and press SLEEP 3 repeatedly.

With each press of SLEEP 3 with SHIFT ↔ held pressed, the setting time is decreased by 10 minutes, from a maximum of 90 minutes to minimum of 10 minutes. To cancel the Sleep Timer, select “OFF”.

Play Timer:

You can wake up to CD, FM reception, DAB/DAB+ reception, or iPod/iPhone/iPad at a preset time. Make sure you have set the clock.

1 Prepare the sound source.

Prepare the sound source, and then press VOLUME +/− 9 to adjust the volume.

To start from a specific CD track, audio file, and radio station create your own program.

2 Select the timer set mode.

Press and hold SHIFT ↔ and TIMER MENU 2.

3 Select the play timer.

Press ♣ ♣ 25 repeatedly to select “PLAY SET,” then press ⓪ ↵.

4 Set the time to start playback.

Press ♣ ♣ 25 repeatedly to set the hour, then press ⓪ ↵. Use the procedure above to set the minutes.

5 Use the same procedure as in step 4 to set the time to stop playback.

6 Select the sound source.

Press ♣ ♣ 25 repeatedly until the desired sound source appears, then press ⓪ ↵.

7 Turn off the system.

Press ⏻ 1 ↵. The system automatically turns on before the preset time.

If the system is on at the preset time, the Play Timer will not play. Do not operate the system from the time the system turns on until the playback starts.

If the sound source is set to an FM station for a timer, the system automatically turns on 15 seconds before the preset time. If the sound source is set to CD, the system automatically turns on 90 seconds before the preset time. If the sound source is set to iPod/iPhone/iPad, the system automatically turns on 30 seconds before the preset time.

To check the setting

1 Press and hold SHIFT ↔ and TIMER MENU 2.

2 Press ♣ ♣ 25 repeatedly to select “SELECT,” and then press ⓪ ↵.

3 Press ♣ ♣ 25 repeatedly to select “PLAY SEL,” and then press ⓪ ↵.

To cancel the timer

Repeat the same procedure as above until “OFF” appears in step 3, and then press ⓪ ↵.

To change the setting

Start over from step 1.

Notes

•When the sound source for a Play Timer is set to an FM station tuned from a preset radio station, the radio station tuning for the Play Timer is fixed at what you set for it. Even if you change the radio station after setting the Play Timer, the radio station setting for the Play Timer will not change.

•When the sound source for a Play Timer is set to an FM station that you set using auto tuning or manual tuning, if you change the radio station after setting the Play Timer, the radio station setting for the Play Timer also will be changed.

Notes for the iPod/iPhone/iPad user

- Make sure the iPod/iPhone/iPad is not playing when using the Play Timer.
- The Play Timer may not be activated depending on the status of the connected iPod/iPhone/iPad.

Tip

The Play Timer setting remains as long as the setting is not cancelled manually.

Troubleshooting

- Make sure the power cord is firmly connected.
- Find your problem in the checklist below, and take the indicated corrective action.

If the issue persists, contact your nearest Sony dealer.

If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following items.

- Is anything blocking the ventilation holes of the system?
- Is the iPod/iPhone/iPad connector ⓪ short-circuited?

After the STANDBY indicator ⓪ stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

To	Press
Adjust the volume	VOLUME +/− 9 .
Generate a more dynamic sound	BASS BOOST 3 .
Set the sound effect	SOUND EFFECT 2 repeatedly until desired sound effect is displayed.

General

The system does not turn on.

- Is the power cord plugged in correctly?

The system has entered Standby mode unexpectedly.

- This is not a malfunction. The system enters Standby mode automatically in about 30 minutes when there is no operation or audio signal output. Set “To turn off the Automatic Standby function.”

The clock setting or the Play Timer operation has been cancelled unexpectedly.

- If about a minute elapses with no operation, the clock setting or Play Timer setting is cancelled automatically. Perform the operation again from the beginning.

There is no sound.

- Press VOLUME + 9 to turn up the volume.
- Make sure the headphone is not connected to the ⓪ (phones) jack 4.
- Make sure additional audio components are connected correctly.
- Make sure the function is set to AUDIO IN.
- Is anything blocking the ventilation holes of the system?
- The specified station may have temporarily stopped broadcast.

Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (not supplied) to the power cord.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor ⓪ on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's sensor ⓪.
- Move the remote closer to the system ⓪.

The STANDBY indicator ⓪ remains lit after unplugging the power cord.

- The STANDBY indicator ⓪ may not turn off immediately after unplugging the power cord. The indicator will turn off after about 40 seconds. This is not a malfunction.

To	Press
Adjust the volume	VOLUME +/− 9 .
Generate a more dynamic sound	BASS BOOST 3 .
Set the sound effect	SOUND EFFECT 2 repeatedly until desired sound effect is displayed.

The disc cannot be inserted.

- Check that the system is turned on.
- Do not insert a disc into the disc slot until “NO DISC” appears in the display.
- a disc that has not been finalized (a disc to which data can be added).

The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).

Play does not start from the first track.

- Return to normal play by pressing PLAY MODE ⓪ repeatedly until both “PGM” and “SHU” disappear.

Starting playback takes more time than usual.

- The following discs can increase the time it takes to start playback:
 - a disc recorded with a complicated tree structure.
 - a disc that has many folders.

Erroneous display.

- The data stored in the CD-DA, MP3 disc may have been corrupted, perform the transferring again.
- The character code that can be displayed by this system are as follows:
 - Upper cases (A to Z).
 - Numbers (0 to 9).
 - Symbols (< > * +, [] \ _).
 - Other characters appear as “_”.

iPod/iPhone/iPad

There is no sound.

- Make sure the iPod/iPhone/iPad is connected securely.
- Make sure the iPod/iPhone/iPad is playing music.
- Make sure the iPod/iPhone/iPad is updated with the latest software. If not, update the iPod/iPhone/iPad before using with the system.
- Adjust the volume.

The sound is distorted.

- Make sure the iPod/iPhone/iPad is connected securely.
- Turn down the volume.
- Set the “EQ” setting of the iPod/iPhone/iPad to “Off” or “Flat.”

The iPod/iPhone/iPad does not function.

- Shut down any other iOS applications running on the iPod/iPhone/iPad. For details, refer to the operation manual supplied with the iPod/iPhone/iPad.
- Make sure the iPod/iPhone/iPad is connected securely.
- Make sure the iPod/iPhone/iPad is updated with the latest software. If not, update the iPod/iPhone/iPad before using with the system.
- Because the operation of the system and the iPod/iPhone/iPad are different, you may not operate the iPod/iPhone/iPad using buttons on the remote or unit. In this case, use the control buttons on the iPod/iPhone/iPad.

The iPod/iPhone/iPad cannot be charged.

- Make sure the iPod/iPhone/iPad is connected securely.
- If you press DISPLAY ↵ while charging when the system is off, the system stops charging an iPod/iPhone/iPad. To restart charging of an iPod/iPhone/iPad, reconnect the iPod/iPhone/iPad when the display mode is Power Saving mode.

The ring volume of the iPhone does not change.

- Adjust the ring volume on the iPhone.

Bluetooth device

Pairing cannot be done.

- Move the Bluetooth device closer to the system.
- Pairing may not be possible if other Bluetooth devices are present around the system. In this case, turn off the other Bluetooth devices.

- Enter the same pass code/ that was entered at the Bluetooth device correctly.

Connection is not possible.

- The Bluetooth device you attempted to connect does not support the A2DP profile, and cannot be connected with the system.
- Enable the Bluetooth function of the Bluetooth device.
- Establish a connection from the Bluetooth device.
- The pairing registration information has been erased. Perform the pairing operation again.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.
- Erase the pairing registration information of a Bluetooth device and perform the pairing operation again.

The sound skips or fluctuates, or the connection is lost.

- The system and the Bluetooth device are too far apart.
 - If there are obstacles between the system and your Bluetooth device, remove or avoid the obstacles.
 - If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device, or a microwave oven nearby, move them away.
- </