
AV Center


Installation/Connections

©2012 Sony Corporation Printed in Thailand

XAV-701BT/XAV-741

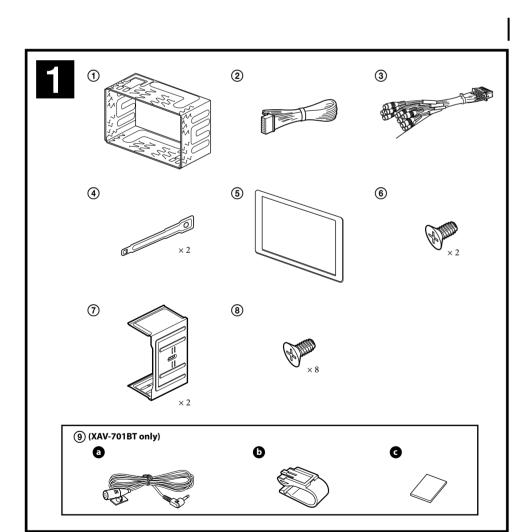



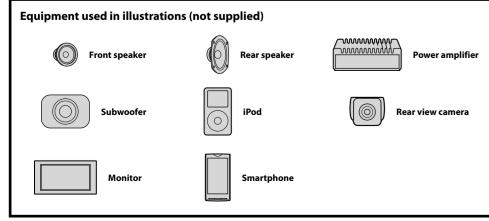

Cautions

* not supplied

B

2 A

REAR OUT

Z×Z L/R

- Run all ground (earth) leads to a common ground (earth) point.
 This unit is designed for negative ground (earth) 12 V
- DC operation only.

 Do not disassemble or modify the unit.
- Do not install in locations which interfere with airbag
- operation.

 Do not get the leads under a screw, or caught in moving
- parts (e.g. seat railing).

 Before making connections, turn the car ignition off to avoid short circuits.
- Connect the yellow and red power supply leads only after all other leads have been connected.

 Be sure to insulate any loose unconnected leads with
- electrical tape for safety. Do not press on the LCD when installing the unit.
 Install the unit with the monitor facing straight forward;
- do not install it at a slanted angle.
- Notes on the power supply lead (yellow)

 When connecting this unit in combination with other stereo components, the amperage rating of the car circuit to which the unit is connected must be higher
- than the sum of each component's fuse amperage rating.

 If no car circuits are rated high enough, connect the unit


Parts list 1

- \bullet The numbers in the list correspond to those in the
- instructions.

 The bracket ① is attached to the unit before shipping. Before mounting the unit, use the release keys ④ to remove the bracket ① from the unit. For details, see "Removing the bracket (⑥)" on the reverse side of the • Keep the release keys ④ for future use as they are
- also necessary if you remove the unit from your
- The screws **6** and frames **7** are attached to the unit before shipping. For details, see "Adjusting the frames (7)" on the reverse side.

 • For XAV-701BT only: Assemble the parts of the
- microphone (a) before use. For details, see "Installing the microphone (XAV-701BT only) (5)" on the reverse

Handle the bracket 1 carefully to avoid injuring your

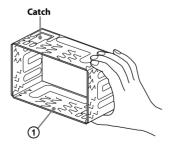

Refore installing, make sure that the catches on both sides of the bracket are bent inwards 3.5 mm (%25 in). If the catches are straight or bent outwards, the unit will not be installed securely and may spring out.

Connection example 2

Notes (2-A) • Be sure to connect the ground (earth) lead before connecting the

• The alarm will only sound if the built-in amplifier is used.

Note (2-B) ise multiple auxiliary devices simultaneously, even if they are

Connection diagram 3

FRONT AUDIO OUT

REAR AUDIO OUT

- 1 To a common ground (earth) point
- First connect the black ground (earth) lead, then cand red power supply leads.
- 2 To the power antenna (aerial) control lead or the power supply lead of the antenna (aerial) booster
- (aerial) or antenna (aerial) booster, or with a manually-operated telescopic antenna (aerial).

 If your car has a built-in FM/AM antenna (aerial) in the rear/side
- To AMP REMOTE IN of an optional power
- **amplifier**This connection is only for amplifiers. Connecting any other system may damage the unit.
- To a car's illumination signal
- 4 To the +12 V power terminal which is energized when the ignition switch is set to the accessory
- If there is no accessory position, connect to the +12 V power (battery) terminal which is energized at all times.
 Be sure to first connect the black ground (earth) lead to a common
- ground (earth) point.
 If your car has a built-in FM/AM antenna (aerial) in the rear/side glass, see "Notes on the control and power supply leads."
- **6** To the +12 V power terminal which is energized at all times
 Be sure to first connect the black ground (earth) lead to a common
- To the parking brake switch cord
- (A) To an auxiliary device such as a portable media player, game console, etc. (not supplied)
- ® To the +12 V power terminal of the car's rear lamp
- lead (only when connecting the rear view camera)

Notes on the control and power supply leads • REM OUT lead (blue/white striped) supplies +12 V DC when you turn on

- the unit.

 If your car has built-in FM/AM antenna (aerial) in the rear/side glass, connect REM OUT lead (blue/white striped) or the accessory power supply lead (red) to the power terminal of the existing antenna (aerial)
- booster. For details, consult your dealer. A power antenna (aerial) without a relay box cannot be used with this

Memory hold connection When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection

Before connecting the speakers, turn the unit off.


Use speakers with an impedance of 4 to 8 ohms, and with adequate


- Do not connect the ground (earth) lead of this unit to the negative (-)


 Do not connect the speaker swith those of the left speakers.


 Do not connect the ground (earth) lead of this unit to the negative (-)
- terminal of a speaker.


 Do not attempt to connect the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 To avoid a malfunction, do not use the built-in speaker leads installed in
- your car if they feature a common negative (-) lead for the right and left
- speakers.
 Do not connect the unit's speaker leads to each other.
- Notes on connection
- If "Output connection failure." appears in the display, make sure the speaker and amplifier are connected correctly.
 To use the monitor for the rear seats, connect the parking brake switch
- cord to the ground (earth).

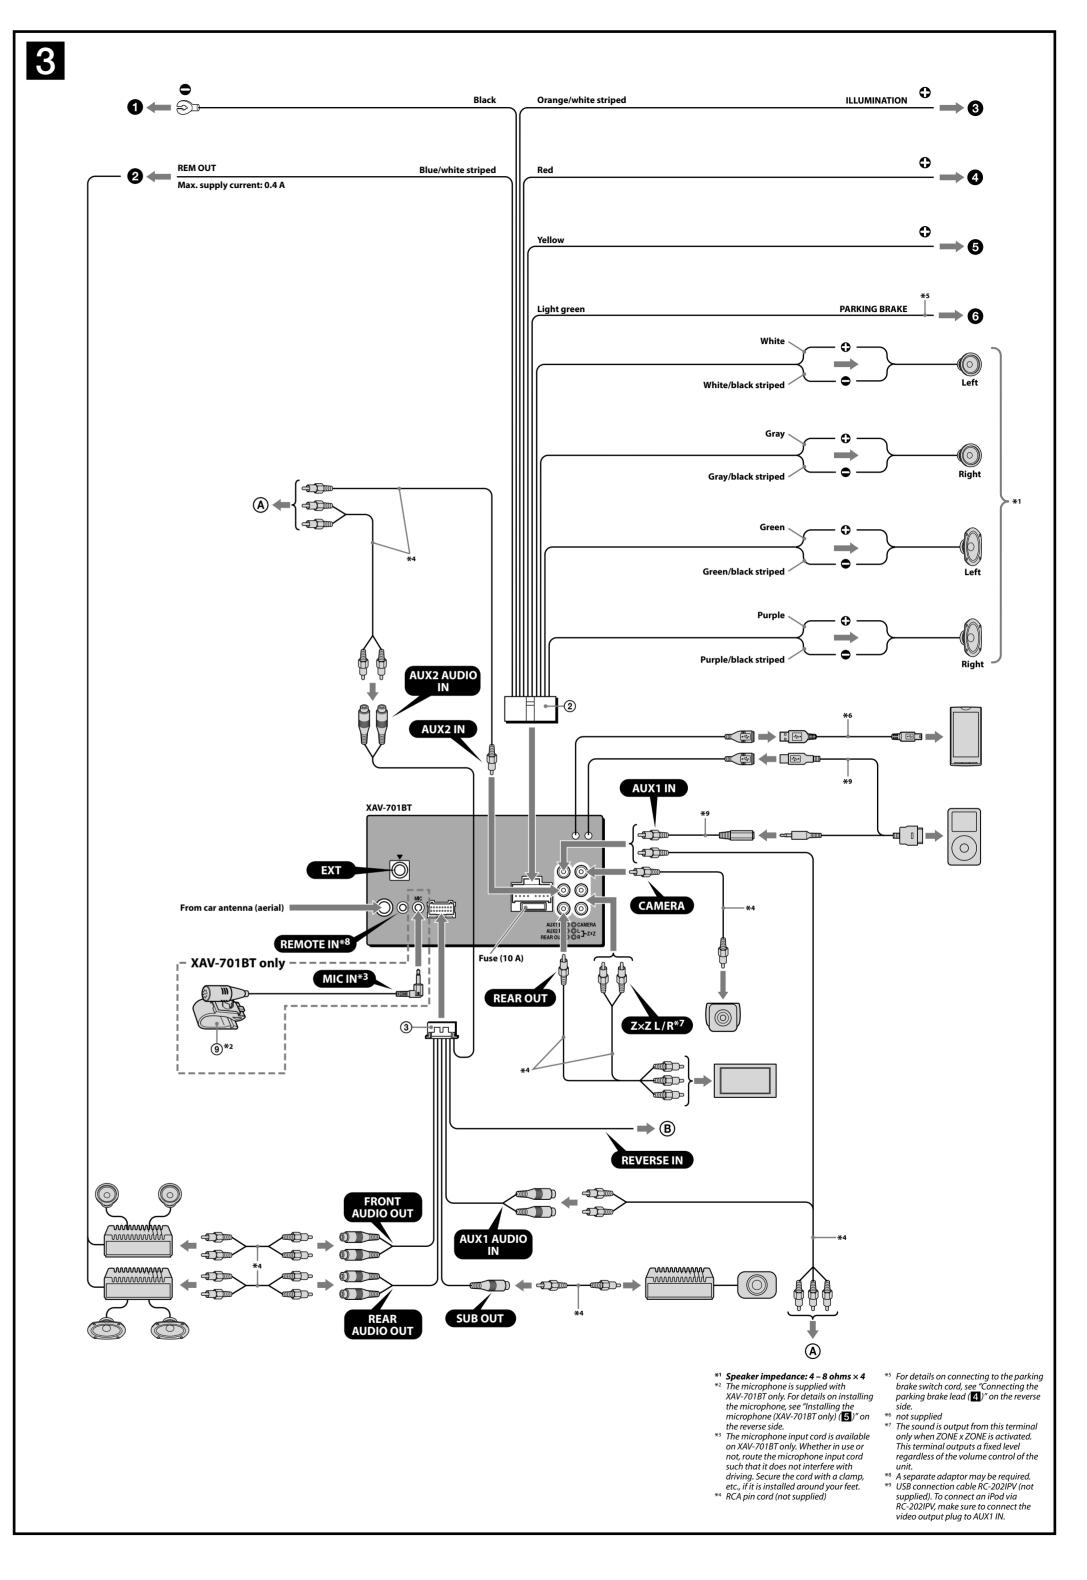


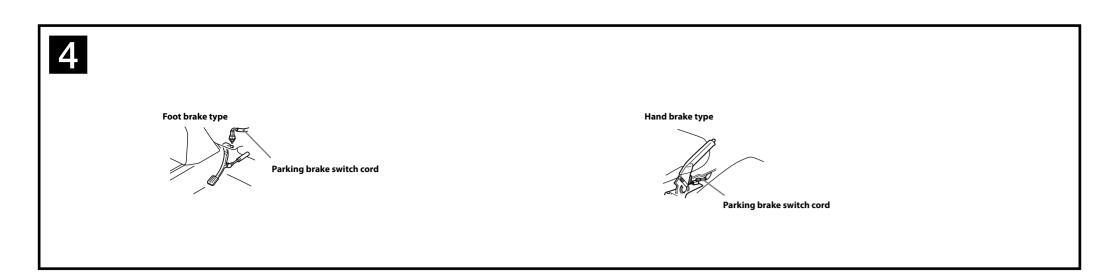

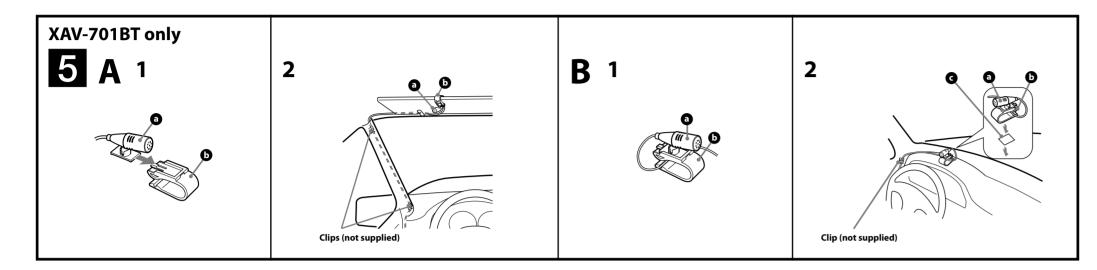

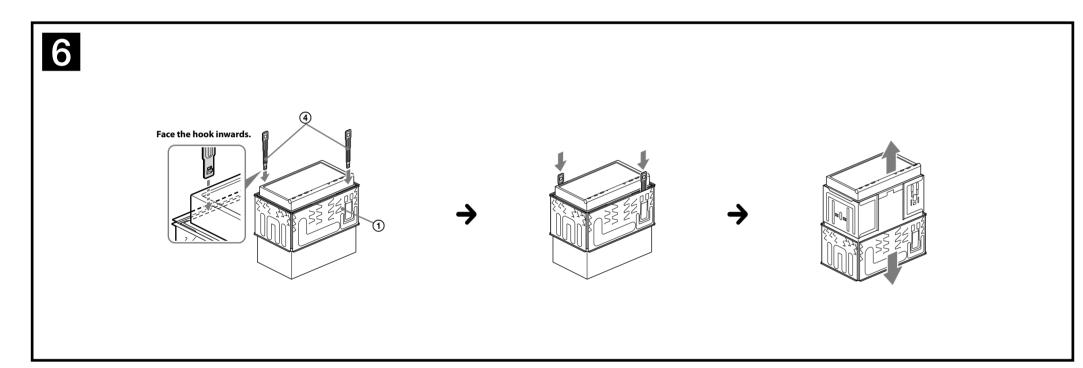

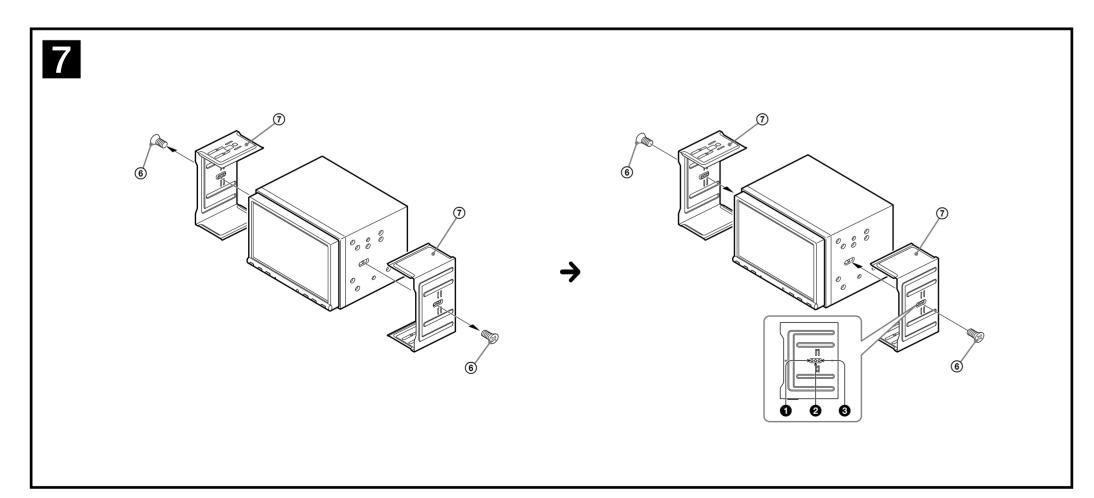

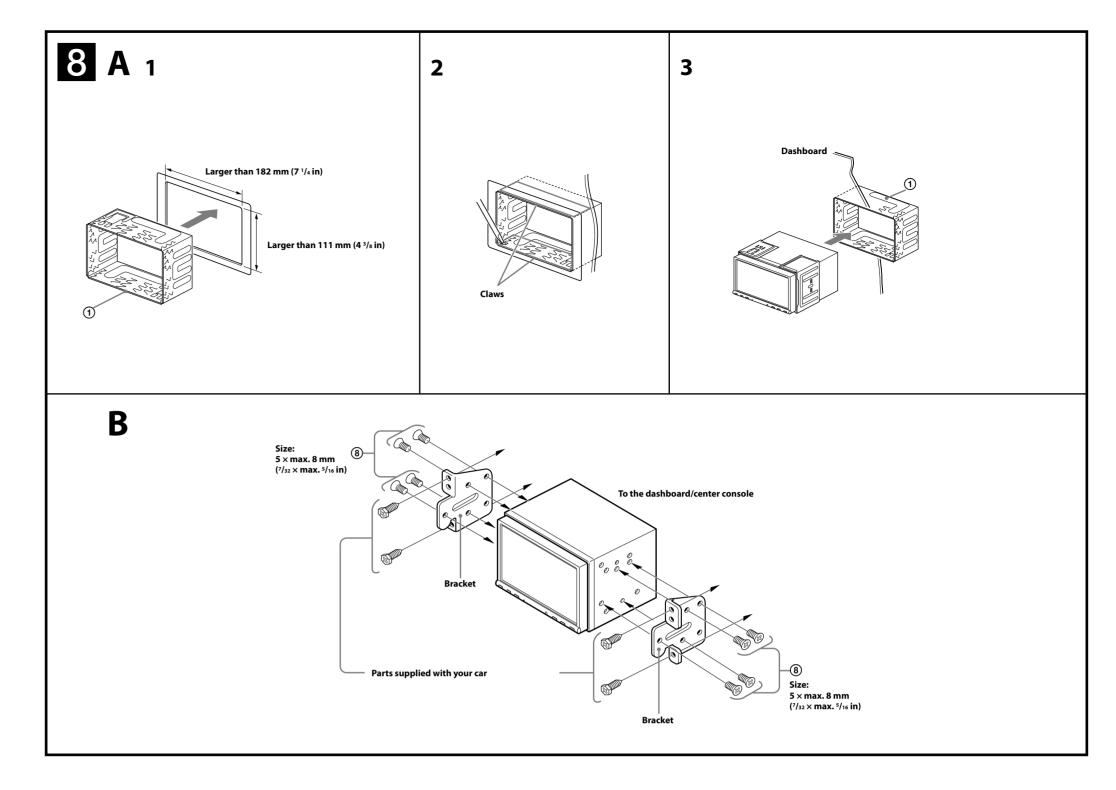

Precautions

- Choose the installation location carefully so that the unit
- will not interfere with normal driving operations. Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.
- To open/close the front panel smoothly, insert/eject a disc easily, and especially to drive safely, a certain distance between the front panel and the shift lever is necessary. The necessary distance differs, depending on

the shift lever position of your car. Before installing the unit, choose the installation location carefully so that you can drive safely. 87 mm (3 1/2 in)



Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Connecting the parking brake lead 4

Be sure to connect the parking brake lead (light green) of the power supply connection cable ② to the parking brake switch cord. The mounting position of the parking brake switch cord depends on your car. Consult your car dealer or your nearest Sony dealer for further details.

Installing the microphone (XAV-701BT only) 5

To capture your voice during handsfree calling, you need to install the microphone (9).

- Keep the microphone away from extremely high
- temperatures and humidity.

 It is extremely dangerous if the cord becomes wound
- around the steering column or gearstick. Be sure to keep it and other parts from obstructing your driving.

 If airbags or any other shock-absorbing equipment is in your car, contact the store where you purchased this unit, or the car dealer, before installation.

5-A Installing on the sun visor

- Install the microphone ② on the clip ⑤. 2 Install the clip (5) on the sun visor.
- 3 Install clips (not supplied) and adjust the length and position of the cord so that it does not obstruct your driving.

5 -B Installing on the dashboard

- Install the microphone on the clip on, then place the cord along the groove of the clip on.
 Attach the clip on the dashboard with the
- double-sided tape **3**. 3 Install a clip (not supplied) and adjust the length and position of the cord so that it does not obstruct your driving.

- Notes

 Before attaching the double-sided tape ③, clean the surface of the dashboard with a dry cloth.

 Adjust the microphone angle to the proper position.

 The microphone ④ can be installed without using the clip ⑤. In this case, directly attach the microphone to the dashboard with the double-sided tape ⑤. Keep the unused clip ⑥ for future use.


Removing the bracket 6

Before installing the unit, remove the bracket 1from the unit.

- 1 Insert both release keys ④ together between the unit and the bracket ① until they click.
- 2 Pull down the bracket (1), then pull up the unit t separate them.

Adjusting the frames 7

You can adjust the projecting part of the unit when the

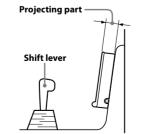

- 1 Remove the screws 6 from both sides of the unit.
- 2 Choose a screw hole from **1**, **2** or **3** on each Choose a screw note now.
 frame ①.
 If you secure the frames ① with the screw holes ① (default position), it will maximize the projecting part of the unit. On the other hand, screw holes ② will minimize the projecting part.
 Reattach the frames ① with the selected screw holes with the removed screws ⑥.

Notes
• Choose the same screw hole position on both frames.
• If you intend to secure the frames with screw holes ❷ or ❸, make sure that there is enough space in the dashboard of your car for the unit.

Mounting the unit 8


8-A Mounting the unit with the supplied

- 1 Position the supplied bracket ① inside the dashboard.
- 2 Bend the claws outward for a tight fit. 3 Mount the unit onto the supplied bracket ①.

8 -B Mounting the unit in a Japanese car

You may be able to install this unit in some makes of Japanese cars without the supplied bracket. If you cannot, consult your Sony dealer.

When mounting this unit to the preinstalled brackets of your car, use the supplied screws (a) in the appropriate screw holes, based on your car: T for TOYOTA, M for MITSUBISHI and N for NISSAN.

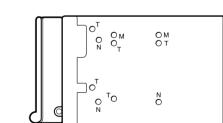

- Notes
 To avoid a malfunction, install only with the supplied screws (8).
 Do not apply excessive force to the buttons of the unit.
 Do not press on the LCD.
 Before mounting, make sure there is nothing on the top of the unit.

Warning if your car's ignition has no ACC position

Be sure to set the Auto Off function. For details, refer to the supplied "Operating Instructions."
The unit will shut off completely and automatically in the set time when no source is selected, which prevents battery drainage.
If you do not set the Auto Off function, press and hold

SOURCE/OFF) until the display disappears each time you turn the ignition off.

Reset button

When the installation and connections are completed, be

