 


Read this first

Quick Setup Guide

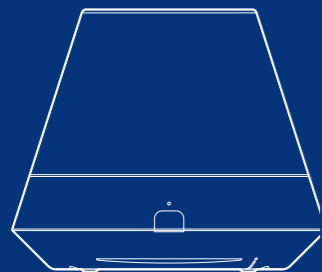

Using this network speaker on your home network

 
Set up the speaker as shown below.

1 Turning the speaker on

2 Connecting the speaker (network settings)

1 Turning the speaker on

- 1 Connect the AC power cord to the AC adaptor.
- 2 Plug the connector of the AC adaptor into the DC IN terminal on the unit.

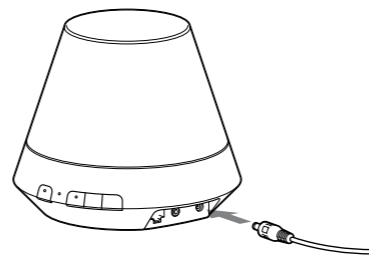

- 3 Plug the AC power cord to a wall outlet (the mains).
The speaker turns on. Check that the I/O (ON/Standby) indicator changes from flashing in green to lit in green.

Note

- If the I/O (ON/Standby) indicator lights in red or amber, press the I/O (ON/Standby) button.
- Before operation of step 2 of the network settings, write down the SSID (Wireless Network Name) and Security Key (if applicable) of your wireless network.

SSID (Wireless Network Name) _____

 
Security Key (WEP or WPA key) _____

2 Connecting the speaker (network settings)

Select the suitable method **A** or **B** and start to make the network settings.

A Setting the network using a supplied CD-ROM (For Windows PC)

- 1 Load the supplied CD-ROM into the CD-ROM drive of your PC.
- 2 Follow the instructions that appear on the display.

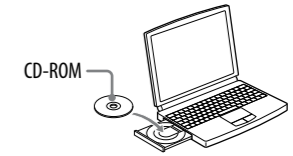

B Setting the network using the iPhone/iPad/iPod touch (AccessPointScan)

 
Note

- Before starting this procedure, be aware that your Wi-Fi network will not be protected until the setting is complete. After the setting is complete, your Wi-Fi network will be protected again when you set wireless LAN security.


- 1 Turn the speaker on. See the step 1.
- 2 Tap [Settings] on the screen of your iPhone/iPad/iPod touch.
- 3 Tap [Wi-Fi].
- 4 Tap [Sony_Wireless_Audio_Setup] on the network list.

Note

- If you have set this already, perform all-reset for the unit.
- Do not connect the LAN cable.

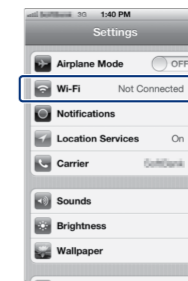

 - 5 Access the [Sony Network Device Setting] screen. Start the browser (Safari) and input the following URL into the browser's address bar.
- 6 Select the desired language when the [Language Setup] screen appears.
- 7 Select [Network Settings] from the menu.



- 8 Select the SSID of the wireless LAN router/access point, then input the Security Key (if applicable).
- 9 Select [Apply].
- 10 Click [OK] in the displayed window. The unit restarts automatically, then the LINK indicator lights up green when the connection is established.



Enjoying Audio contents

■ PARTY STREAMING

Refer to the attached leaflet "Enjoying PARTY STREAMING".

■ Listening to audio content on your PC using the DLNA

Refer to the supplied Operating Instructions. Sony provides the controller application "Network Audio Remote" for free. For details, refer to the following URL: <http://www.esupport.sony.com/>

■ AirPlay

Refer to the supplied Operating Instructions.

■ MusicService

It will be supported by an update service for free (around summer of 2012). For details, refer to the following URL: <http://www.esupport.sony.com/>