

Enjoying PARTY STREAMING

BDV-N890W + SA-NS310 Quick Start Guide

©2012 Sony Corporation Printed in China

Listening to music played back with a BDV-N890W on an SA-NS310 (PARTY STREAMING function)


You can play the same music at the same time with a BDV-N890W and an SA-NS310, using the PARTY STREAMING function, if they are both connected to your home network.

Content in the BDV-N890W in  [Music], "FM", and "AUDIO" functions can be used with the PARTY STREAMING function.

This leaflet mentions how to play music on the BDV-N890W (PARTY host) and to play music that is sent from the BDV-N890W to an SA-NS310 (PARTY guest).

For details on connection of each component with your home network, refer to the operating instructions for that component.

PARTY host (BDV-N890W)

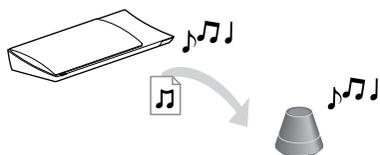

PARTY guest (SA-NS310)

1 Set the network of the BDV-N890W Blu-ray Disc™/ DVD Home Theatre System.

Refer to the Operating Instructions of the BDV-N890W.

2 Set the network of the SA-NS310 Network Speaker.

Refer to the "Quick Setup Guide" in the package of the SA-NS310.

3 How to enjoy the same music with the BDV-N890W on the SA-NS310

1 Play music on the BDV-N890W to start the PARTY.

Select a track in  [Music], a radio station in  [Radio], or  [AUDIO] in  [Input], press OPTIONS, then select [Start PARTY] from the options menu to start. Or press OPTIONS during playback, then select [Start PARTY].

2 Join the PARTY with the SA-NS310.

Press PARTY.

The unit joins the PARTY as a PARTY guest. The PARTY STREAMING indicator lights in amber.

To finish the PARTY

To close the PARTY from the PARTY host (BDV-N890W)

Press OPTIONS, then select [Close PARTY] from the options menu.

To leave the PARTY by the PARTY guest (SA-NS310)

Press PARTY.

The PARTY STREAMING indicator goes off.

For details, refer to the "Playing via a Network – Playing the same music in different rooms (PARTY STREAMING)" in the Operating Instructions of the BDV-N890W.

