

Quick Start Guide

Thank you for your purchase. This Quick Start Guide is designed to easily get you set up so you can start enjoying the benefits of the device.

Read this Quick Start Guide when using this unit with a smartphone or tablet.

When using this unit with a computer, download "Quick Start Guide for Computer users" from the following web site.
<http://www.sony.net/pws/>

WG-C10 Series

© 2013 Sony Corporation Printed in China

Setting Procedure

Step1: Charging this Unit

Step2: Installing the App


Step3: Connecting by Wireless LAN for the First Time

Step4: Security Set-up


Step5: Reconnecting to the Wireless LAN

Examples of Use


1 Wi-Fi Storage

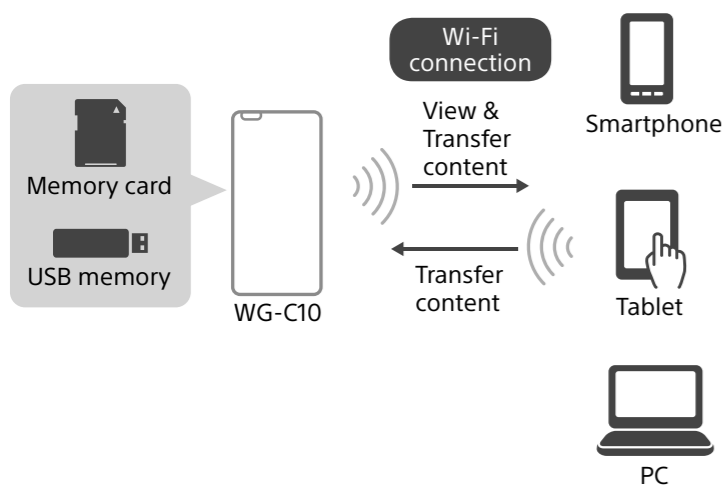



2 Battery Charger

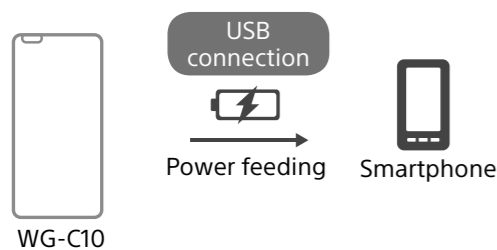

3 USB Card Reader

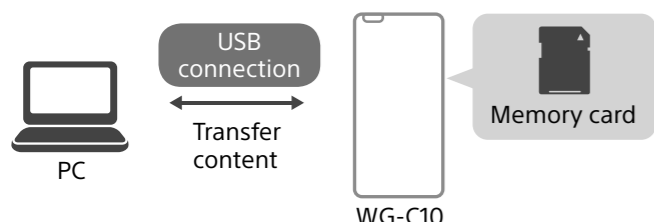

Identifying the Parts

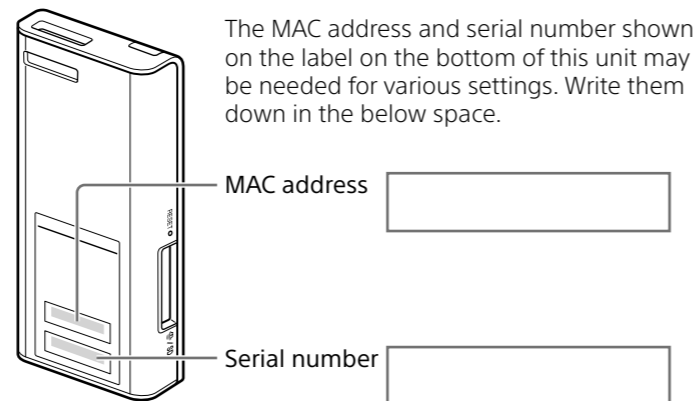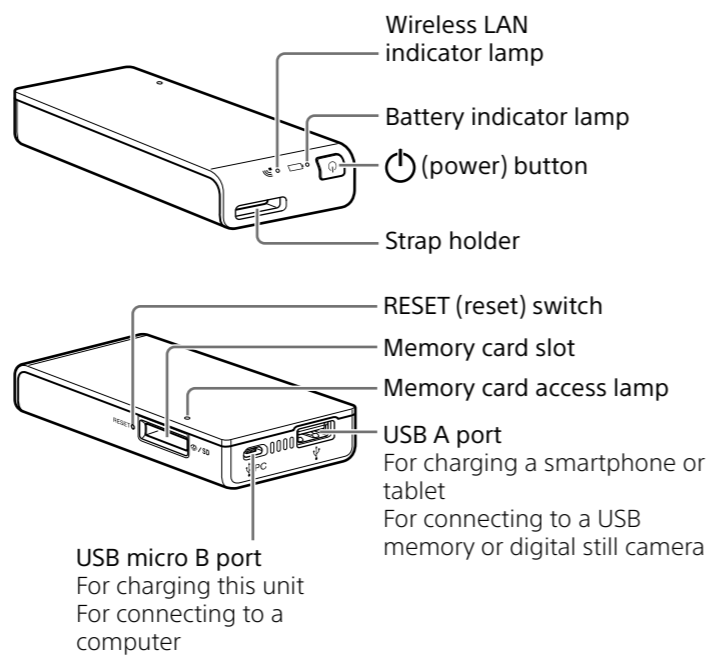

Expressions in this Guide

WG-C10 → This unit
 Smartphone/tablet → Device

Lamp Indicator of this Unit

Battery indicator lamp Charging indicator

Lamp condition	Status
Amber	Charging underway
Amber -> off	Charging is complete

Remaining battery level indicator in use

Lamp condition	Status
Green, blinking slowly	Battery level is high
Green, blinking	Battery level is medium
Red, blinking rapidly	Battery level is low
Off	Battery runs out or power-off

Wireless LAN indicator lamp

Lamp condition	Status
Green	Wireless LAN is starting up
Green, blinking	Wireless LAN is on
Off	Power-off

Memory card access lamp

Lamp condition	Status
Amber, blinking	Accessing memory card


Step1: Charging this Unit

This unit has a built-in rechargeable battery pack. Charge this unit before use.

Charge this unit from a computer or with a USB AC adaptor (sold separately).

When charging from a computer

Connect this unit to your computer with the USB cable (supplied).

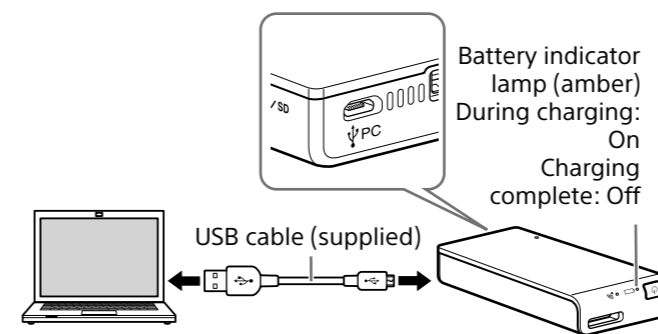

Approximate charging time: Approx. 8 hours

Charging underway:

- Wireless LAN function cannot be used.
- You can do up to Step2.

When charging with a USB AC adaptor (sold separately)*

Connect the USB cable (supplied) to this unit and the USB AC adaptor (sold separately or the one supplied with your device), and connect the USB AC adaptor to the wall outlet (wall socket).

Approximate charging time: Approx. 3.5 hours (When using AC-UD10)

Approximate charging time varies depending on the USB AC adaptor (sold separately) used.

Charging underway:

- Can read and write data to a memory card via a wireless LAN.
- USB devices connected to this unit cannot be used.
- You can do from Step2 onward.

* A USB AC adaptor is not supplied with this unit.

For more information about USB AC adaptors that have been confirmed to work with this unit, see the Help Guide (<http://rd1.sony.net/help/pws/c10/gb/>).

When charging is complete, the battery indicator lamp turns off.

When charging is complete, remove the USB cable.

Step2: Installing the App

To operate this unit, install PWS Manager onto your device.

See the Help Guide (<http://rd1.sony.net/help/pws/c10/gb/>) for compatible operating systems and a list of devices that have been confirmed to work with this unit.

1 Install the app.

Search for PWS Manager in Google Play or the App Store and install it.



Note

The app is free. However, there may be a communication fee for downloading.

Android:

After installing, tap [Complete] and the icon is displayed.

iOS*:

After installing, the icon is displayed.

* iOS is the operating system of iPhone, iPad and iPod touch.

After installing, go Step3 without launching the app.

Step3: Connecting by Wireless LAN for the First Time

Connect this unit to your device by wireless LAN.


Do this setting after installing the PWS Manager app.

Note

When this connection is made, the internet connection of your device is disconnected. To reconnect to the internet, see the Help Guide.

1 Turn on the power.

Press and hold down the (Power) button (for 3 seconds or more).

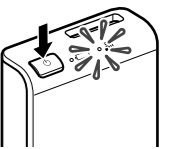

When this unit's start-up is complete, the green wireless LAN indicator lamp stops blinking and remains lit.

2 From the setup menu of your device, turn Wi-Fi on and open the Wi-Fi Networks screen.

Android



iOS



3 Tap this unit's SSID [WG-C10-XXXXXX]* from the list of Wi-Fi networks to connect.

* "xxxxxx" is the last 6 digits of the MAC address.


The MAC address is shown on the back side of this unit.

4 Confirm the connection.

Android



iOS

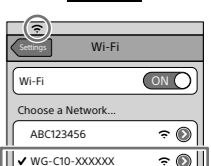

Android:

Connection is completed when "Connected" is displayed under the selected SSID and is displayed at the top of the screen.

iOS:

Connection is completed when there is a tick to the left of the selected SSID and is displayed at the top of the screen.

This unit is now connected to your device by wireless LAN.

Step4: Security Set-up

Important! It is very important that you set up security in order to use a wireless LAN device.

If you do not set up security, other compatible devices within transmission range can connect to this unit.


If this unit's security has already been set, you do not have to set it again from the other device.

When setting this unit, turn its power on.


- 1 Launch the PWS Manager app installed on your device.
- 2 When the app is launched, tap the [Security] button at the bottom right of the screen.

A message is displayed. Tap [OK].

- 3 Select [Security] and select [WPA2].

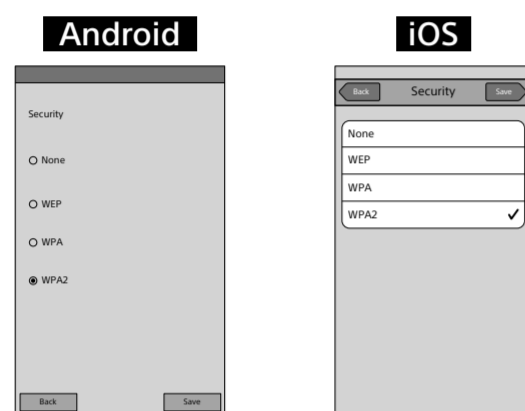

- 4 Enter a personal password of at least 8 numbers or letters and select [OK].

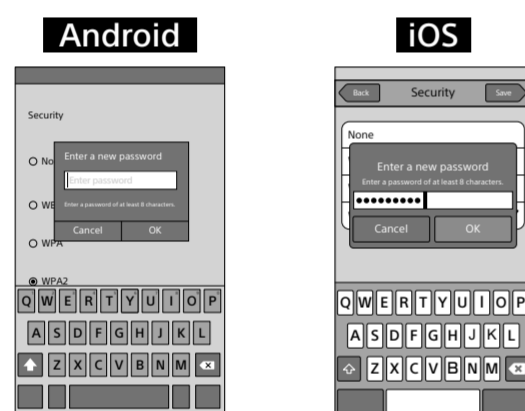

- 5 Reenter your password to confirm it and select [OK].

A message is displayed. Tap [OK].

When you set your password, the wireless LAN connection is disconnected. Go to the next setting in Step5.

Step5: Reconnecting to the Wireless LAN


When setting this unit, turn its power on.

- 1 From the setup menu of your device, turn Wi-Fi on and open the Wi-Fi Networks screen.
- 2 Tap this unit's SSID [WG-C10-XXXXXX]* from the list of Wi-Fi networks to connect.

* "XXXXXX" is the last 6 digits of the MAC address.

- 3 Enter your password.

Enter the password you set in 4 of "Step4: Security Set-up".

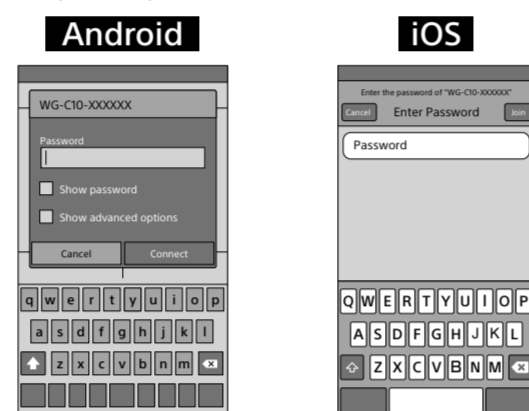

- 4 Confirm the connection.

Check in the same way as in 4 of "Step3: Connecting by Wireless LAN for the First Time". This unit is now connected to your device by wireless LAN.

If an authentication error occurs:
The password may be wrong.

If you forgot your password:
Press and hold down the RESET (reset) button for about 10 seconds to return to the factory default condition. Then set the password again from "Step3: Connecting by Wireless LAN for the First Time".


From next time, you do not need to enter the password when connecting to a device set up for this unit.

How to Use the App PWS Manager

Tap the PWS Manager icon on your device to launch the app.

When launching the app, the following screens appear.

If another screen appears, press [Back] or the [Back] button to go back to the start-up screen.

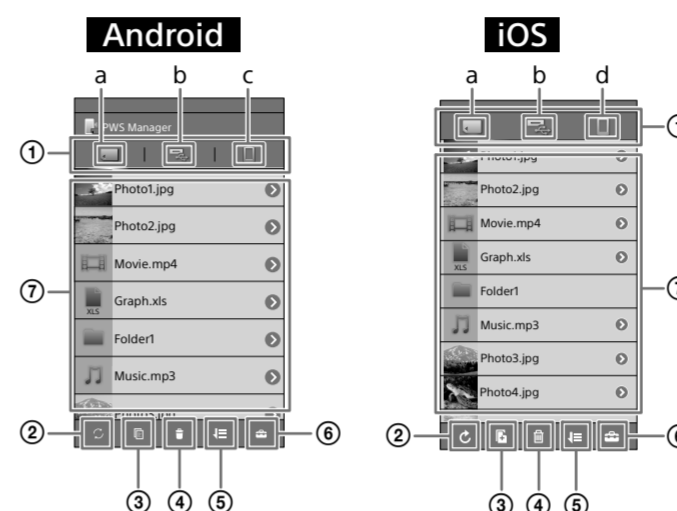

- 1 Device switching button

Tap each button to display the list of files and folders in each device.

a: Data in the memory card inserted into this unit
b: Data in the USB device connected to this unit
c: Data in your device
d: Data in the camera roll

- 2 Data update

- 3 Copy

- 4 Delete

- 5 Sort

- 6 Settings

Move to the screen for setting security, internet connection or firmware update.

- 7 File/Folder list

If no memory card is inserted into this unit, no USB device is connected to this unit, or the memory card inserted into this unit or USB device connected to this unit contain no data, nothing shows on the file/folder list screen.

Note

Removing the memory card or USB device from this unit during transfer content can damage important data. Before removing them, check the access lamp of this unit.

Help Guide

For details of the app's operating method, go to [Settings] → [Help] in the app.

You can also refer to the app's operating method in the following Help Guide
<http://rd1.sony.net/help/pws/c10/gb/>

How to Power Other Devices

- 1 Connect the supplied USB cable* to the device you want to power.

* For connecting an iOS device, use the special cable supplied when you purchased that device.


Before Powering

- Turn on the power to this unit.
- Check that the remaining battery level of this unit is sufficient.

Power supply

- The output of this unit is 500 mA maximum. If the output exceeds 500 mA while power is being supplied, a safety function turns off the power supply.

- 2 Connect the other end of the USB cable to the USB A port of this unit.

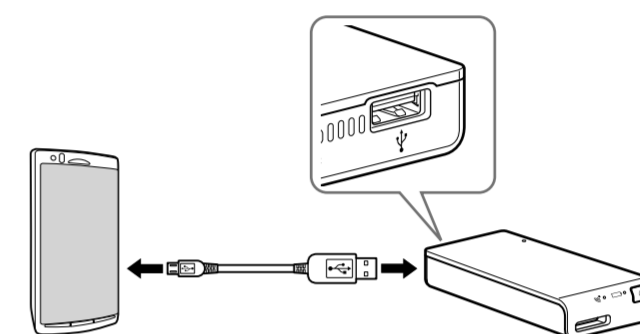


* See the online manual here for a list of devices that support power feeding.
<http://rd1.sony.net/help/pws/c10/gb/>

Turning off the power

- 1 Press down the [power] button (for 3 seconds or more).

Wireless LAN indicator lamp and battery indicator lamp turn off.

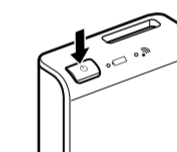

Note

Do not turn off the power of this unit during data transfer.

Trademarks

- Apple, iPhone, iPad, iPod touch and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc.
- Android and Google Play are trademarks of Google Inc.
- Wi-Fi® and Wi-Fi Alliance® are registered marks of the Wi-Fi Alliance.
- WPA™ and WPA2™ are marks of the Wi-Fi Alliance.

Other product names, trade names, service names etc. used in this manual are trademarks or registered trademarks of their respective companies or organizations. The ™ and ® marks are not shown in this document.