

# Home Audio System

## Operating Instructions



©2013 Sony Corporation Printed in China

CMT-S40D

GB

### Playable Discs

DVD	DVD VIDEO DVD-ROM DVD-R*/DVD-RW* DVD+R*/DVD+RW*
CD	CD-DA (Music CD) CD-ROM CD-R*/CD-RW* VIDEO CD

\* If discs have not been correctly finalized, they will not be played back. For more information, refer to the operating instructions supplied with the recording device.

#### Discs that cannot be played

- Blu-ray discs
- HD DVDs
- DVD-RAMs
- DVD Audio discs
- PHOTO CDs
- Super Audio CDs
- Data track of CD-Extras
- Audio material side of DualDiscs
- DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode
- CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content flagged as "Copy once."

#### Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

#### Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

#### Note on playback operations of a DVD

Some playback operations for a DVD may be intentionally restricted by software producers. Since this system plays a DVD according to the disc contents, some playback features may not be available.

#### Note about double-layer DVDs

The playback picture and sound may be momentarily interrupted when the layers switch.

#### Region code (DVD VIDEO only)

Your system has a region code printed on the rear of the unit and will only play a DVD VIDEO (playback only) labeled with an identical region code or



#### Note on multi-session discs

This system can play back continuous sessions on a disc when they are recorded in the same format as the first session. When a session recorded in a different format is encountered, that session and the ones following it cannot be played back. Note that even if the sessions are recorded in the same format, some sessions may not play back.

### WARNING

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

 
As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

### CAUTION


The use of optical instruments with this product will increase eye hazard.

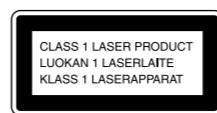

This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

#### Note for customers: the following information is only applicable to equipment sold in countries applying EU directives.


This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

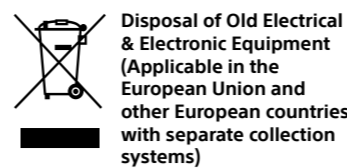

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable accessories: Remote commander

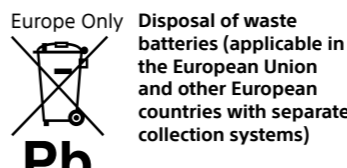

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

### About this manual

- "DVD" may be used as a general term for a DVD VIDEO, DVD-R, DVD-RW, DVD+R or DVD+RW.
- CD-R or CD-RW is sometimes referred to as "DATA CD."
- DVD-R, DVD-RW, DVD+R or DVD+RW is sometimes referred to as "DATA DVD."
- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19


20

21

## Listening to Sound from an Optional Component

You can listen to sound from a component connected to the AUDIO IN jack on the unit using a 3.5 mm stereo audio cord (not supplied).

- Connect the audio output jacks of your component and the AUDIO IN jack of this system using the audio cord.

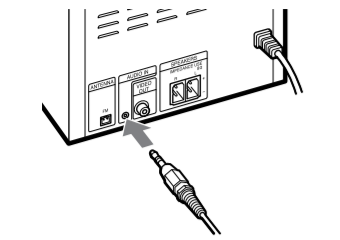

- Press **VOLUME**  $\leftarrow$  **[9]** to turn down the volume.
- Press **FUNCTION** **[3]** repeatedly to select the **AUDIO IN** function.
- Start playback of the connected component and press **VOLUME**  $\rightarrow$   $\leftarrow$  **[9]** to adjust the volume.

17

### To select an equalizer setting

Press **EQ** **[5]** repeatedly during playback until the desired mode appears on the display.

- "FLAT"**: Flat and pure sound mode.
- "ROCK"**: Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock music.
- "POP"**: Ideal for listening to pop music.
- "JAZZ"**: Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
- "CLASSIC"**: Ideal for listening to classical music and watching live concert DVDs.

## Singing Along: Karaoke

You can sing along with the music by connecting microphone (not supplied).

- Connect an optional microphone to the MIC Jack **[10]** on the unit. "MIC ON" appears on the display.
- Press **MIC LEVEL** **[12]**.
- Press  $\rightarrow$   $\leftarrow$  **[6]** to adjust the microphone volume.
- Start playing the music and adjust the volume.

21

 
### [SCREEN] settings

- [TV System]\***  
[PAL]: For a PAL-system TV.  
[NTSC]: For an NTSC-system TV.  
[Auto]: For a TV that is compatible with both PAL and NTSC.


\* The default setting varies depending on the country or region.

- [Screen Saver]**  
[ON]: Turns on the screen saver when in stop, pause, no disc, or eject mode for more than 15 minutes.  
[OFF]: Turns off the screen saver.

- [TV Type]**  
[16:9]: Select this when connecting a wide-screen TV or a TV with a wide mode function.

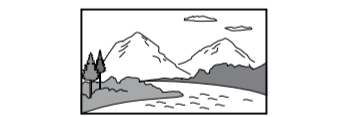

 [4:3LB]: Displays a wide picture with black bands on the top and bottom.

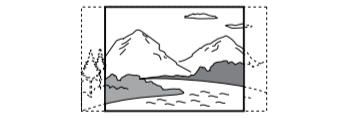

[4:3PS]: Displays a full-height picture on the entire screen, with trimmed sides.

25

### Color irregularity occurs on the TV screen.

The system's speakers contain magnetic parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items.

- Install the speakers at least 0.3 meters away from your TV set.
- If the color irregularity persists, turn off the TV set once, then turn it on after 15 to 30 minutes.
- Reposition the speakers farther away from your TV set.

The **[TV System]** setting does not match your TV.  
Reset the setting (see "[Default]" under "[PREFERENCE] settings").

### Sound

- There is no sound.
- Press **VOLUME**  $\rightarrow$  **[9]** repeatedly to adjust the volume.
- Check the speaker connections.
- The system is in pause status or in slow-motion play mode. Press **[4]** to return to normal playback.

- There is severe hum or noise.
- Move the system away from the source of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (commercially available) on the power cord.

29

## Other Playback Operations

### To change angles (only for DVD VIDEOS)

Press **ANGLE/TUNER MENU** **[18]** during playback to select the desired angle.

### To display subtitles (only for DVD VIDEOS and Xvid video files)

Press **SUBTITLE** **[22]** repeatedly during playback to select the desired subtitle language.

### To change the sound

Press **AUDIO/SLEEP** **[22]** repeatedly during playback to select the desired audio signal format.

When playing a DVD VIDEO with multiple audio formats, you can change the audio format from PCM, Dolby Digital, etc. If the DVD VIDEO is recorded with multilingual tracks, you can also change the audio language.

17

### After you have finished

Adjust the microphone volume to "MIC 0" and disconnect the microphone from the MIC Jack **[10]**.

### To adjust the microphone echo level

- Press **ECHO** **[12]** while singing.
- Press  $\rightarrow$   $\leftarrow$  **[6]** to adjust the echo effect.

### Note

The microphone function is only available when using the DVD/CD and USB functions.

## Listening to the Radio

### To preset radio stations

- Press **FUNCTION** **[3]** repeatedly to select "FM."
- Press and hold **TUNING**  $\rightarrow$   $\leftarrow$  **[6]** for 2 seconds until the frequency begins to change on the display. The system automatically scans the radio frequencies and stops when it finds a clear station. If scanning does not stop, press **[4]** to stop scanning, then perform manual tuning to tune to a desired station. You can perform manual tuning by pressing **TUNING**  $\rightarrow$   $\leftarrow$  **[6]** repeatedly.

When you tune to a station that provides RDS services, the station name appears on the display (European models only).

21

### [LANGUAGE] settings

- [OSD] (On-Screen Display)**  
You can select the display language on the TV screen.
- [Audio]**  
You can select the preferred audio language for DVDs with multiple sound tracks.
- [Subtitle]**  
You can select the language of the subtitles recorded on a DVD VIDEO.
- [Menu]**  
You can select the language for a disc's menu.

- [Karaoke Setup]**  
[ECHO]: Adjusts the echo level.  
[MIC VOL.]: Adjusts the microphone volume level.

You can select the preferred audio language for DVDs with multiple sound tracks.

You can select the language of the subtitles recorded on a DVD VIDEO.

You can select the language for a disc's menu.

### [AUDIO] settings

- [DRC]**  
Adjusts the level of dynamic range for audio output.

Press  $\rightarrow$   $\leftarrow$  **[6]** to select a rating level from **[0 Lock ALL]** to **[8 No Limit]**, then press **[8]**.

25

### There is no microphone sound.

- Press **VOLUME**  $\rightarrow$  **[9]** repeatedly to adjust the speaker volume.
- Press **MIC LEVEL** **[12]**, then press  $\rightarrow$   $\leftarrow$  **[6]** to adjust the microphone volume.
- Make sure the microphone is connected to MIC Jack **[10]** correctly.
- Make sure the microphone is turned on.

### Operation

There is severe hum or noise, or stations cannot be received when tuning to the FM station.

- Connect the antenna properly.
- Try another location and orientation for better antenna reception.
- Keep the antenna away from the speaker cords and the power cord to avoid picking up noise.
- Turn off nearby electrical equipment.
- A disc does not play.
- The region code on the DVD does not match the system.
- Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour.

**A DATA CD or DATA DVD cannot be played.**  
• The DATA CD is not recorded in ISO 9660 Level 1/Level 2.  
• The DATA DVD is not recorded in UDF (Universal Disk Format).

29

### To play a VIDEO CD with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the PBC menu appears for your operation. To use the PBC menu, press and hold **SHIFT** **[19]**, then press the number buttons to select a desired item number.

### To play without using PBC

Press **DVD TOP MENU** **[21]**. When turning off the PBC function, you can select a desired track by entering a track number.

### To magnify the displayed picture

You can zoom in or zoom out of a displayed picture when viewing a DVD VIDEO, a VIDEO CD, an Xvid video or a JPEG image.

### Press ZOOM $\rightarrow$ $\leftarrow$ **[23]** repeatedly to magnify the image.

Each time you press the button, the magnification level changes. You can scroll the displayed picture up, down, left or right at the selected magnification level by pressing  $\rightarrow$   $\leftarrow$   $\rightarrow$   $\leftarrow$  **[6]**.

17

### Press PROGRAM **[24]**.

"P 01" flashes on the display.

- Press **PRESET**  $\rightarrow$   $\leftarrow$  **[6]** (or press and hold **SHIFT** **[19]**, then press the number buttons) to select a preset number.

Press **[8]** **[24]** to store the station.

Repeat steps 2 through 5 to preset other stations. You can preset up to 20 FM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.

### To listen to a preset radio station

- Press **FUNCTION** **[3]** repeatedly to select "FM."
- Press **PRESET**  $\rightarrow$   $\leftarrow$  **[6]** (or press and hold **SHIFT** **[19]**, then press the number buttons) to select a preset number.
- Press **VOLUME**  $\rightarrow$   $\leftarrow$  **[9]** to adjust the volume.

### Tip

When an FM stereo program has static noise, press **AUDIO/SLEEP** **[22]** repeatedly to select "MONO." You will lose the stereo effect, but reception will improve.

21

### [VIDEO] settings

- [Brightness]**  
Adjusts the picture brightness level.
- [Contrast]**  
Adjusts the picture contrast level.
- [Hue]**  
Adjusts the picture hue (color tone) level.
- [Saturation]**  
Adjusts the picture saturation level.
- [Sharpness]**  
Adjusts the sharpness level of the picture outline.

### [PREFERENCE] settings

**[Rating]**  
You can restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes.

If you have set a password, make sure to unlock password protection by entering your password (see "[Password]") before performing reset.

Press  $\rightarrow$   $\leftarrow$  **[6]** to select a rating level from **[0 Lock ALL]** to **[8 No Limit]**, then press **[8]**.

**[Password]**  
You can set a password for [Rating] and [Default] settings to avoid unwanted operation.

Enter a new 4-digit password, and then press **[8]**.  
When you want to change the password, enter your password to unlock the input field, and then enter a new password.

25

### Files on the DATA DVD, DATA CD or USB device cannot be played.

- The system cannot play audio files with DRM (Digital Rights Management) copyright protection or files downloaded from an online music store. If you try to play one of these files, the system plays the next unprotected audio file.
- There is no playable file on the disc or USB device.

**A video file cannot be played.**  
The video file is larger than 720 (width)  $\times$  576 (height) pixels.

**The name of a folder or file is not displayed correctly.**  
The system can only display numbers and letters of the alphabet. Other characters are displayed as "\_".

**A disc does not start playing from the beginning.**  
• The disc is in resume play mode. Pressing **[4]** **[14]** once during playback makes the system resume play mode. When you want to restart playback from the beginning, press **[4]** **[14]** twice, and then press **[4]**.

- Program play or shuffle play mode may have been selected. Stop playback and set the play mode to normal play.
- A disc cannot be ejected and "LOCKED" appears on the display. Contact your Sony dealer or local authorized Sony service facility.

**The system does not work normally.**  
Disconnect the power cord from the wall outlet, then reconnect after several minutes.

29

### To search for a title/chapter/track, etc.

#### ■ When playing a CD

- Press **[DISPLAY]** **[18]** during playback. The pull-down menu appears on the top of the TV screen.
- Press  $\rightarrow$   $\leftarrow$  **[6]** to move the highlight to the track number area.
- Press and hold **SHIFT** **[19]**, then press the number buttons to enter a 2-digit track number ("02" for track 2, for example).
- Press **[8]** to jump to the selected track.

■ When playing an audio file/JPEG image file/video file  
Press and hold **SHIFT** **[19]**, then press the number buttons to enter a 2-digit file number ("02" for file 2, for example).

- Press **[DISPLAY]** **[18]** during playback. The pull-down menu appears on the top of the TV screen.
- Press  $\rightarrow$   $\leftarrow$  **[6]** to move the highlight to the title/chapter number area.
- Press and hold **SHIFT** **[19]**, then press the number buttons to enter a title/chapter number ("02" for title 2, "003" for chapter 3, for example).
- Press **[8]** to jump to the selected title/chapter.

17

## Convenient Functions

### To use the sleep timer

You can set the system to turn off at a preset time so that you can fall asleep listening to music.

Press and hold **SHIFT** **[19]**, then press **AUDIO/SLEEP** **[22]** repeatedly.

Each time you press the button, the minute display (the remaining time) changes by 10 minutes. When selecting "AUTO," the system automatically turns off after the current disc or USB device is stopped, or within 100 minutes.

■ To cancel the sleep timer function  
Press and hold **SHIFT** **[19]**, then press **AUDIO/SLEEP** **[22]** repeatedly until "OFF" appears on the display.

### To cancel the sleep timer function

Press and hold **SHIFT** **[19]**, then press **AUDIO/SLEEP** **[22]** repeatedly until "OFF" appears on the display.

21

### Precautions

#### On placement

- Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place heavy objects on the system.

25

### The USB device does not work properly.

- If you connect an unsupported USB device, the following problems may occur. Check the information on websites for compatible USB devices using the URLs listed under "Compatible USB Devices with This System."
  - The USB device is not recognized. — File or folder names are not displayed on this system.
  - Playback is not possible. — The sound skips. — There is noise. — A distorted sound is output.

**"OVER CURRENT" appears.**  
• A problem has been detected with the level of electrical current from the  $\rightarrow$  (USB) port **[11]**. Turn off the system and remove the USB device from the  $\rightarrow$  (USB) port **[11]**. Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.

• The connected USB device cannot be charged.  
— Make sure the USB device is connected securely.  
— Turn on the system if the system is in standby mode.  
— Try changing the function to the USB function. Some USB devices can be charged only when the system is set to the USB function.

29

### To use the play timer

The play timer can be set with the DVD/CD, USB, AUDIO IN and FM functions.

Make sure you have set the clock before setting the play timer.

- Prepare the sound source.
- Hold down **SHIFT** **[19]**, and then press **ANGLE/TIMER MENU** **[15]**.
- Press **[4]** **[15]** repeatedly to select "PLAY SET," then press **[8]**.
- Set the time to start playback. Press **[4]** **[15]** repeatedly to set the hour, then press **[8]**. Follow the same procedure to set the minutes.
- Follow the same procedure as in step 4 to set the time to stop playback.
- Select the sound source. Press **[4]** **[15]** repeatedly until the desired sound source appears, then press **[8]**.
- Press **I/O** **[1]** to turn off the system.

The system automatically turns on before the preset time. If the system is on at the preset time, the play timer will not be activated. Do not operate the system from the time the system turns on until playback starts.

17

### To check the setting

- Hold down **SHIFT** **[19]**, and then press **ANGLE/TIMER MENU** **[15]**.
- Press **[4]** **[15]** repeatedly to select "SELECT," then press **[8]**.
- Press **[4]** **[15]** repeatedly to select "PLAY SEL," then press **[8]**.

■ To cancel the timer  
Repeat the same procedure as in "To check the setting" until "OFF" appears in step 3, and then press **[8]**.

■ To change the setting  
Start over from step 1 of "To use the play timer."

**Tip**  
The play timer setting remains until the setting is cancelled manually.

21

### On your TV's color

**IMPORTANT NOTICE**  
Caution: If you leave the same image (a still video image, an on-screen display image, etc.) displayed on your TV for an extended period of time, you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

**On moving the system**  
Before moving the system, make sure that there is no disc loaded, and remove the power cord from the wall outlet.

**On handling discs**  
• To keep the disc clean, handle the disc by its edge. Do not touch the surface.  
• Do not attach paper or tape to the disc.

• Do not expose discs to direct sunlight or heat sources such as hot air ducts, or leave them in a car parked in direct sunlight, as the temperature may rise considerably inside the car.

**On cleaning discs, disc/lens cleaners**  
• Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

• Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center outward to the edge.

• Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

25

## Specifications

### Main unit

**Amplifier section**  
Power output (rated):  
20 watts + 20 watts (8 ohms at 1 kHz, 1% THD)

Continuous RMS power output (reference):  
25 watts + 25 watts (8 ohms at 1 kHz, 10% THD)

**Inputs**  
AUDIO IN (3.5 mm stereo mini jack):  
Sensitivity 1 V, impedance 50 kilohms

MIC (monaural mini jack):  
Sensitivity 4 mV, impedance 10 kilohms

**Outputs**  
VIDEO OUT:  
Max. output level 1 Vp-p, unbalanced, sync negative, load impedance 75 ohms

**SPEAKERS:**  
Accepts impedance of 8 ohms

**Disc player section**  
System:  
Compact disc and digital audio and video system

**Laser Diode Properties**  
Emission Duration: Continuous  
Laser Output\*: Less than 1000  $\mu$ W

\* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.

29

### To play in programmed order

Select tracks to play in your desired order (only for CD-DA discs). A maximum of 16 tracks can be programmed.

- Press **PROGRAM** **[24]**. The program menu display appears on the TV screen.
- Press and hold **SHIFT** **[19]**, then press the number buttons to enter a 2-digit track number ("02" for track 2, for example).
- Press **[6]** and repeat the procedure in step 2 to program additional tracks.
- Press  $\rightarrow$   $\leftarrow$  **[6]** to select [PLAY] to start the program play.

■ To cancel program play  
Press **[4]**, then press **[4]**. Playback changes to normal play mode.

■ To delete the program  
Press **PROGRAM** **[24]**. Then, press  $\rightarrow$   $\leftarrow$  **[6]** to select [CLEAR], and then **[8]**.

17

### To change the brightness of the display

The brightness of the display can be selected from 2 levels. The default setting is underlined.

Press **DIMMER** **[14]** repeatedly.

- "DIM OFF": Bright.
- "DIM ON": Dark.

### About automatic standby function

This system is equipped with an automatic standby function. With this function, the system enters standby mode automatically after about 30 minutes if there is no operation or audio signal output.

You can turn the automatic standby function on or off. By default, the automatic standby function is turned on.

Hold down **I/O** **[1]** on the unit while the system is on, until "AUTO STANDBY ON" or "AUTO STANDBY OFF" appears.

21

### Troubleshooting

If you experience any of the following difficulties while using the system, check this troubleshooting guide to try to remedy the problem before requesting repairs. Should the problem persist, consult your nearest Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained.

**If "PROTECT" appears on the display**  
Immediately unplug the power cord, and check the following items after "PROTECT" disappears.

- Are the + and - speaker cords short-circuited?
- Is anything blocking the ventilation holes of the system?

After you have checked these above items and found no problems, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

25

### Mass (excl. speakers):

Approx. 1.4 kg  
Quantity of the main unit: 1 piece

Supplied accessories:  
Remote Commander (1)  
FM lead antenna (1)  
Video cord (1)  
Speaker pads (8)

Design and specifications are subject to change without notice.

- Standby power consumption: 0.5 W
- Halogenated flame retardants are not used in the certain printed wiring boards.

### Licences and Trademarks

- This system incorporates Dolby® Digital.
  - Manufactured under license from Dolby Laboratories.
  - "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DVD" logo is a trademark of DVD Format/Logo Licensing Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.