

---

## Precautions

- Do not continuously use the speaker system beyond the peak power handling capacity.
- Keep recorded tapes, watches, and personal credit cards using magnetic coding away from the speaker system to protect them from damage caused by the magnets in the speakers.
- Please note the following when installing the units; otherwise malfunction and/or deterioration in sound quality may result.
  - Do not touch the diaphragms and/or speaker cones by hand or with tools.
  - Do not put your fingers through the holes of the frame.
  - Do not drop foreign objects in the units.

If you cannot find an appropriate mounting location, consult your car dealer or your nearest Sony dealer before mounting.

# Instructions

## Specifications

Speaker:	Coaxial 3 way: Woofer 16 cm (6 1/2 in) cone type Tweeter 3.5 cm (1 7/16 in) balanced dome type Super Tweeter 0.6 cm (1/4 in) dome type
Short-term Maximum Power*1:	260 W*2
Rated power:	40 W*2
Rated impedance:	4 Ω
Output sound pressure level:	91±2 dB (1 W, 1 m)*2
Effective frequency range:	50 – 24,000 Hz*2
Mass:	Approx. 580 g (1 lb 5 oz) per speaker
Supplied accessories:	Parts for installation

Design and specifications are subject to change without notice.

\*1 "Short-term Maximum Power" may also be referred to as "Peak Power."


\*2 Testing Condition: IEC 60268-5 (2003-05)

## Before mounting


A depth of at least 42 mm (1 11/16 in) is required for flush mounting. Measure the depth of the area where you are to mount the speaker, and ensure that the speaker is not obstructing any other components of the car. Keep the following in mind when choosing a mounting location:

- Make sure that nothing is obstructing around the mounting location of the door (front or rear) or the rear tray where you are to mount the speaker.
- A hole for mounting may already be cut out of the inner panel of the door (front or rear) or the rear tray. In this case, you need to modify the board only.
- If you are to mount this speaker system in the door (front or rear), make sure that the speaker terminals, frame or magnet do not interfere with any inner parts, such as the window mechanism in the door (when you open or close the window), etc.
- Also make sure that the speaker grille does not touch any inner fittings, such as the window cranks, door handles, arm rests, door pockets, lamps or seats etc.
- If you are to mount this speaker system in the rear tray, make sure that the speaker terminals, frame or magnet do not touch any inner parts of the car, such as the torsion bar springs (when you open or close the trunk (boot) lid), etc. Also make sure that the speaker grille does not touch any inner fittings, such as seat belts, head rests, center brake lights, inner covers of the rear wipers, curtains or air purifiers, etc.

- 1** Mark the 4 bolt holes and make them 3.2 mm (1/8 in) in diameter. Unit: mm (in)

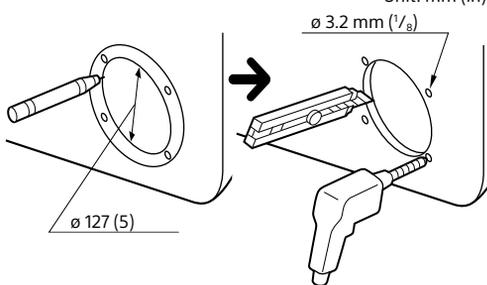

- 2**

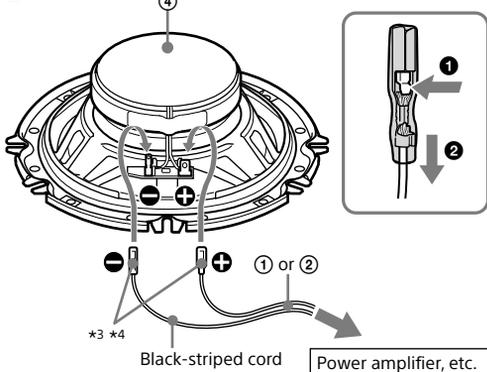

\*3 Note

When releasing ① or ②, push down on the catch firmly and release ① or ② carefully.

If excessive force is used, damage to the speaker or terminal cable may result.

\*4 White cord — Left speaker  
Grey cord — Right speaker

- 3**

