

Wi-Fi Startup Guide

Listening to Music over Your Wi-Fi Network

MHC-V90W




* 4 7 2 8 6 0 4 1 2 * (1)

©2017 Sony Corporation
Printed in Malaysia

First

Prepare the system.

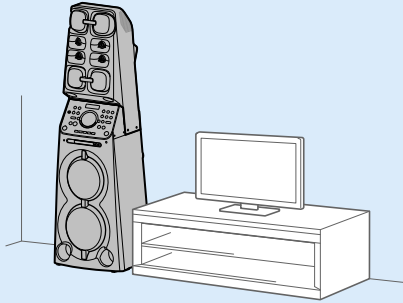

Make sure that the unit is connected to the wall outlet. For details on installation and connection, refer to the Operating Instructions.

Choose an appropriate Wi-Fi connection method, then go to “**1** Connecting the system to your Wi-Fi network” below.

Wi-Fi Protected Setup™ (WPS)

Use a wireless router with a WPS (AOSS) button to configure the Wi-Fi settings of the system with a push of the button.

Smartphone / iPhone

Use a smartphone/iPhone in which “Sony | Music Center” (free app) is installed to configure the Wi-Fi settings of the system.

Go to “**2** Listening to music with the system” overleaf.

Listening to music using “Sony | Music Center”


You can listen to music stored in your smartphone/iPhone with “Sony | Music Center” (free app).

Listening to music using a Chromecast-enabled app

You can listen to music content from the Chromecast-enabled app on your smartphone/iPhone.

Other playback

A Wi-Fi network enables you to easily enjoy music stored in wireless devices in your home

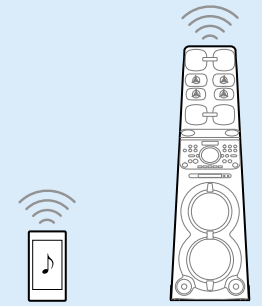

Using a Wi-Fi network, you can play music from online music streaming services, or play the music stored on your computer or smartphone/iPhone, in high quality sound. Also, you can enjoy the music in multiple rooms at the same time.

1 Connecting the system to your Wi-Fi network


Choose one of the procedures below.

Wi-Fi Protected Setup™ (WPS)

Required item: Wireless router with the Wi-Fi Protected Setup™ (WPS) button


1

Press the (power) button to turn on the system. When the system is on, the power indicator lights up in green.

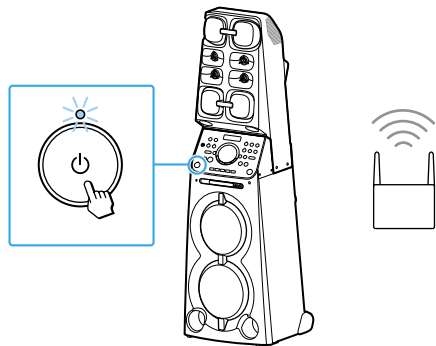


2

Touch and hold - WPS key on the unit until the NETWORK indicator flashes in white.

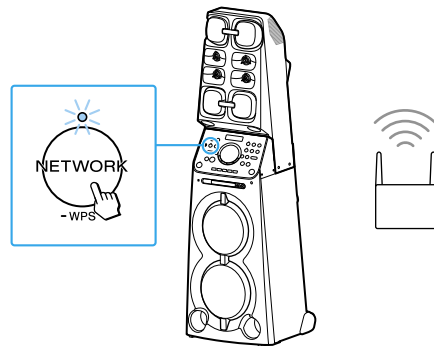

3

Within 90 seconds, press the Wi-Fi Protected Setup™ (WPS) button of the router. When the NETWORK indicator lights up in white, the Wi-Fi network connection is complete.

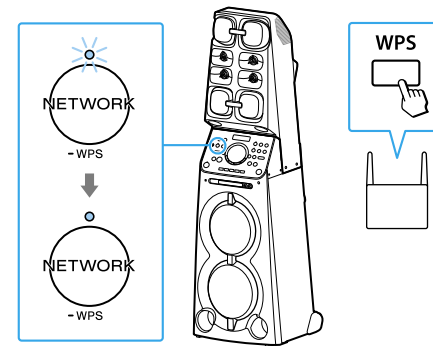

Depending on the wireless router, press and hold the WPS button for a few seconds. For details, refer to the operating instructions of your router.

* The WPS button may be called “AOSS button” depending on the wireless router.

See overleaf to play back ▶

Smartphone / iPhone

Required items: Android smartphone/iPhone and wireless router

Use a smartphone/iPhone in which “Sony | Music Center” is installed to configure Wi-Fi settings of the system. Install “Sony | Music Center” onto your smartphone/iPhone. Follow the application’s on-screen instructions to connect the system to a Wi-Fi network.

Check in advance

- Turn on the BLUETOOTH function on your smartphone/iPhone, then connect it to this system via BLUETOOTH.
- Some wireless routers have multiple SSIDs. Connect the system and your smartphone/iPhone to the same SSID.



Search for “Sony | Music Center” on Google Play™ or the App Store.

See overleaf to play back ▶



See overleaf for “**2** Listening to music with the system”

2 Listening to music with the system

The design and displays of the app may change without notice.

Installing "Sony | Music Center" and selecting the system

If "Sony | Music Center" is already installed, start from step 2.

1

Install "Sony | Music Center" onto your smartphone/iPhone.

Search for "Sony | Music Center" on Google Play™ or the App Store




2

Tap and start up [Music Center] on your smartphone/iPhone.

Follow the on-screen instructions. Some settings that are configured here apply also to Chromecast-enabled apps.

3

When the screen below is displayed, touch [MHC-V90W].

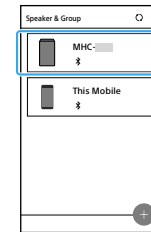


Documents provided



Wi-Fi Startup Guide (this document)

Explains how to listen to music stored in your PC or other device over your Wi-Fi network.

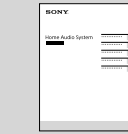

Operating Instructions (separate document)

Explains how to listen to music stored on a disc, USB device, BLUETOOTH device or radio, etc.



Help Guide (web document for a PC/smartphone/iPhone)

Explains details about how to listen to music in your personal computer (PC)/smartphone/iPhone over your wireless/wired network.


http://rd1.sony.net/help/has/mhc-v90w/h_zz/



Listening to music using "Sony | Music Center"

1

Tap [My Library] on the "Sony | Music Center" screen.

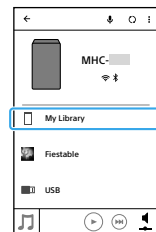

2

Select a song to play. Adjust the volume.


Listening to music using a Chromecast-enabled app

1

Set up Chromecast built-in by using "Sony | Music Center."

If a Chromecast-enabled app is already installed, go to step 2. If you have not set Chromecast built-in, follow the procedure below.

① Touch [Settings] on "Sony | Music Center."

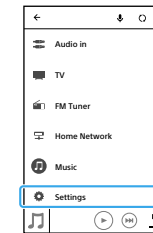

② Touch [Chromecast built-in].

③ Touch [Learn how to Cast].


④ Check how to use the cast service and which apps are available, and then select an app to install it.

2

Start the app, then select a song to play.

① Start the installed app.

② Touch the Cast icon, and then select [MHC-V90W].

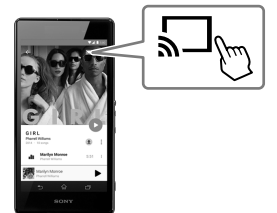


③ Start playback on the app, and adjust the volume.

Other playback

For more information, refer to Help Guide (web document for a PC/smartphone/iPhone)

You can listen to music stored on your Xperia by operating the Music app. You can listen to music stored in your PC with the system by using the software "Sony | Music Center for PC."

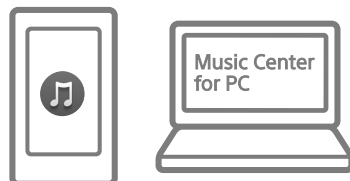

Wireless Multi-room

Enfold your rooms with music by a group of speakers simultaneously.

Visit the URL below about information "Sony | Music Center" compatible devices.

<http://sony.net/nasite/>

