

Wireless Speaker

Operating Instructions

"Sony | Music Center" app

Download App for Android / iPhone



<http://www.sony.net/smcapp/>

Operations that can be performed on the unit with "Sony | Music Center" app.

- Sound quality setting and equalizer adjustment
- Lighting setting (switching the lighting mode)

Help Guide

web document for a PC/smartphone




http://rd1.sony.net/help/speaker/srs-xb501g/h_zz/



SRS-XB501G

Charging the unit


1 Charge the built-in battery for the first time.

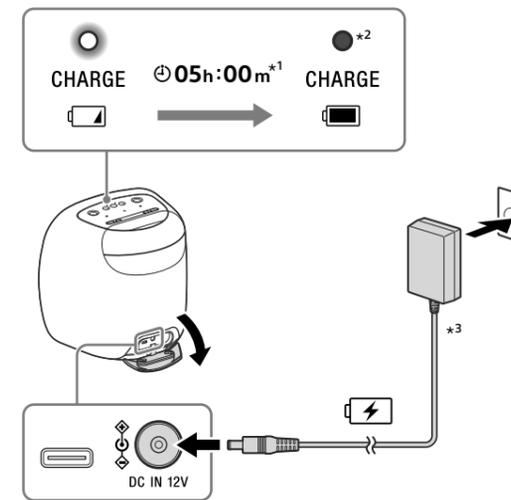

*1 Time that is required to charge the empty built-in battery to its full capacity when the unit turns off.

*2 If the built-in battery is fully charged when you connect the unit to an AC outlet, the CHARGE indicator lights up in orange then turns off after about 1 minute.

2 Close the cap firmly.
The cap plays a very important role in maintenance of the water resistant performance.

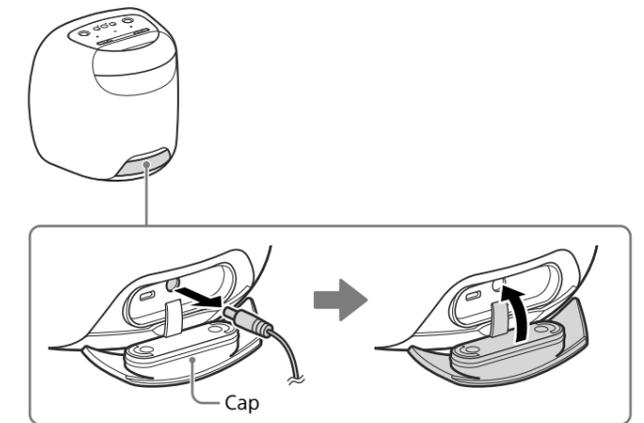


*3 If a AC power cord is supplied, the shape of the plug on the AC adaptor and the connection method differ. According your country or region, connect the AC power cord to the AC adaptor.

Setup

1 Install the Google Home app.
Install the Google Home app on a smartphone/iPhone.


 
<https://www.google.com/cast/setup/>



2 Place the unit as close to a wireless LAN router as possible.

- ① Establish a wireless connection from the smartphone/iPhone to the wireless LAN router.
- ② Take a note of the SSID and the password (encryption key) of the connected wireless LAN router.
Some of the wireless LAN routers have multiple SSIDs. Be sure to take a note of the SSID that you used for establishing the wireless connection from the smartphone/iPhone. For details, refer to the operating instructions supplied with the wireless LAN router.
- ③ On the iPhone*, activate the BLUETOOTH® function.

* The Google Home app uses the BLUETOOTH function to identify the unit.


3 Set up Wi-Fi with app.
Follow the directions in the app to set up your unit for Wi-Fi. Set the unit to the smartphone/iPhone's same Wi-Fi connection.
• Depending on your service, you may have to create an account in advance.



Note
The (BLUETOOTH)/ PAIRING button is disabled before the Wi-Fi setup is complete.

How to use

Talk to your Google Assistant.
You can start conversation simply by saying "Ok Google" or by pressing and holding the (play) button.

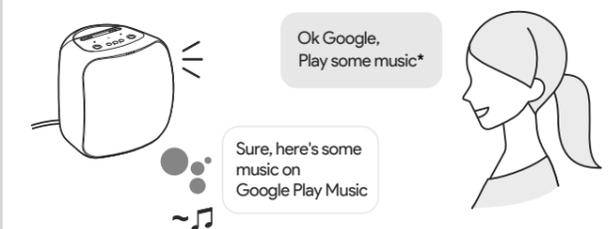


* Visit the following website for the latest voice commands;
assistant.google.com/intl/en_us/ (USA)
assistant.google.com/intl/en_uk/ (United Kingdom)
assistant.google.com/intl/en_ca/ (Canada)
assistant.google.com/intl/en_au/ (Australia)


Volume Operations
Say a voice command to set the volume to your desired level.

You can also use as a BLUETOOTH speaker


- 1** After the Wi-Fi setup is complete, press and hold the (BLUETOOTH)/ - PAIRING button for about 3 seconds. When the unit is placed in pairing mode, the (BLUETOOTH) indicator begins to flash quickly.

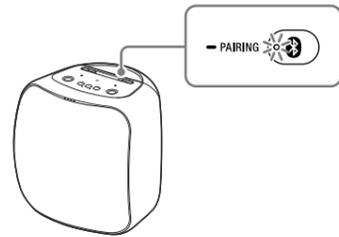



- 2** Establish a BLUETOOTH pairing.
From your smartphone or other device's BLUETOOTH settings, find and select the name of the unit you set up for Wi-Fi.

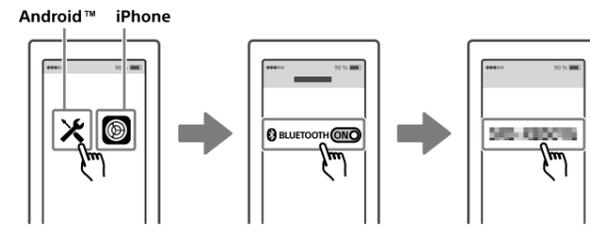



- 3** Start playback.

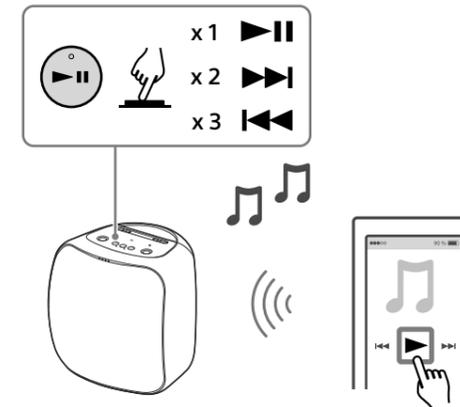

- Adjust the volume.

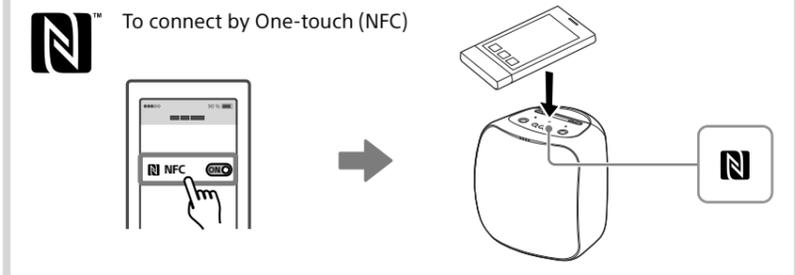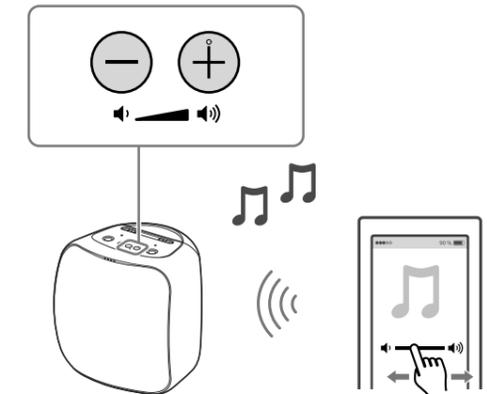

Parts and Controls

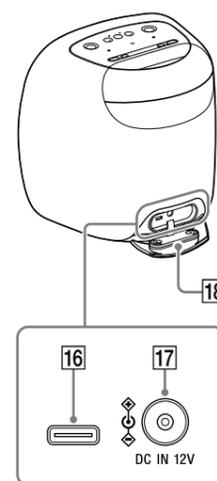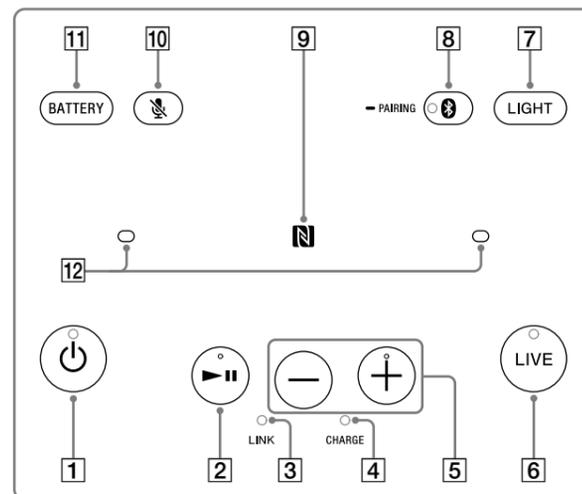

- 1 (power) button with indicator
- 2 (play) button
- 3 LINK indicator
- 4 CHARGE indicator
- 5 (volume) buttons
- 6 LIVE button with indicator
- 7 LIGHT button
Turns on/off the lighting.
- 8 (BLUETOOTH) button with indicator /
- PAIRING button
- 9 N-mark
- 10 (microphone off) button
- 11 BATTERY button
- 12 Built-in microphone
- 13 Status LEDs (for Google Assistant)

- 14 Lighting
- 15 Screw hole for tripod attachment
(on the bottom surface)
- 16 USB Type-C™ connector
- 17 DC IN 12V connector
- 18 Cap


*1 The + (volume) button and the (play) button have a tactile dot that helps you locate the button by touching.

For detailed instructions on using this unit, refer to the Help Guide. It also provides easy-to-understand troubleshooting information.

Lighting

ON/OFF

The lighting function is activated to turn on/off the lighting.

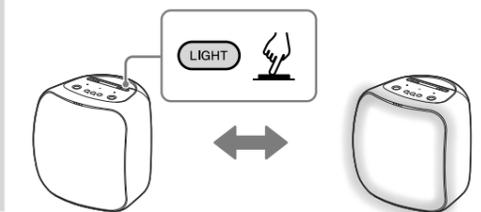

FAQ

Do you want to restart* the unit?

Press and hold the (power) button for about 8 seconds.

* The information including the Google Assistant settings will be retained.

