

1

CA CB CD1 CD2 SN CC *1
IM FB M5L14

1.5 N·m/1,5 N·m
{15 kgf·cm}

2

3

*1 CC SB

4

SN M5L14 SB

5


6

7

↑ x 4 M5L14


*1 僅限受限區域/國家/電視機型號。

8

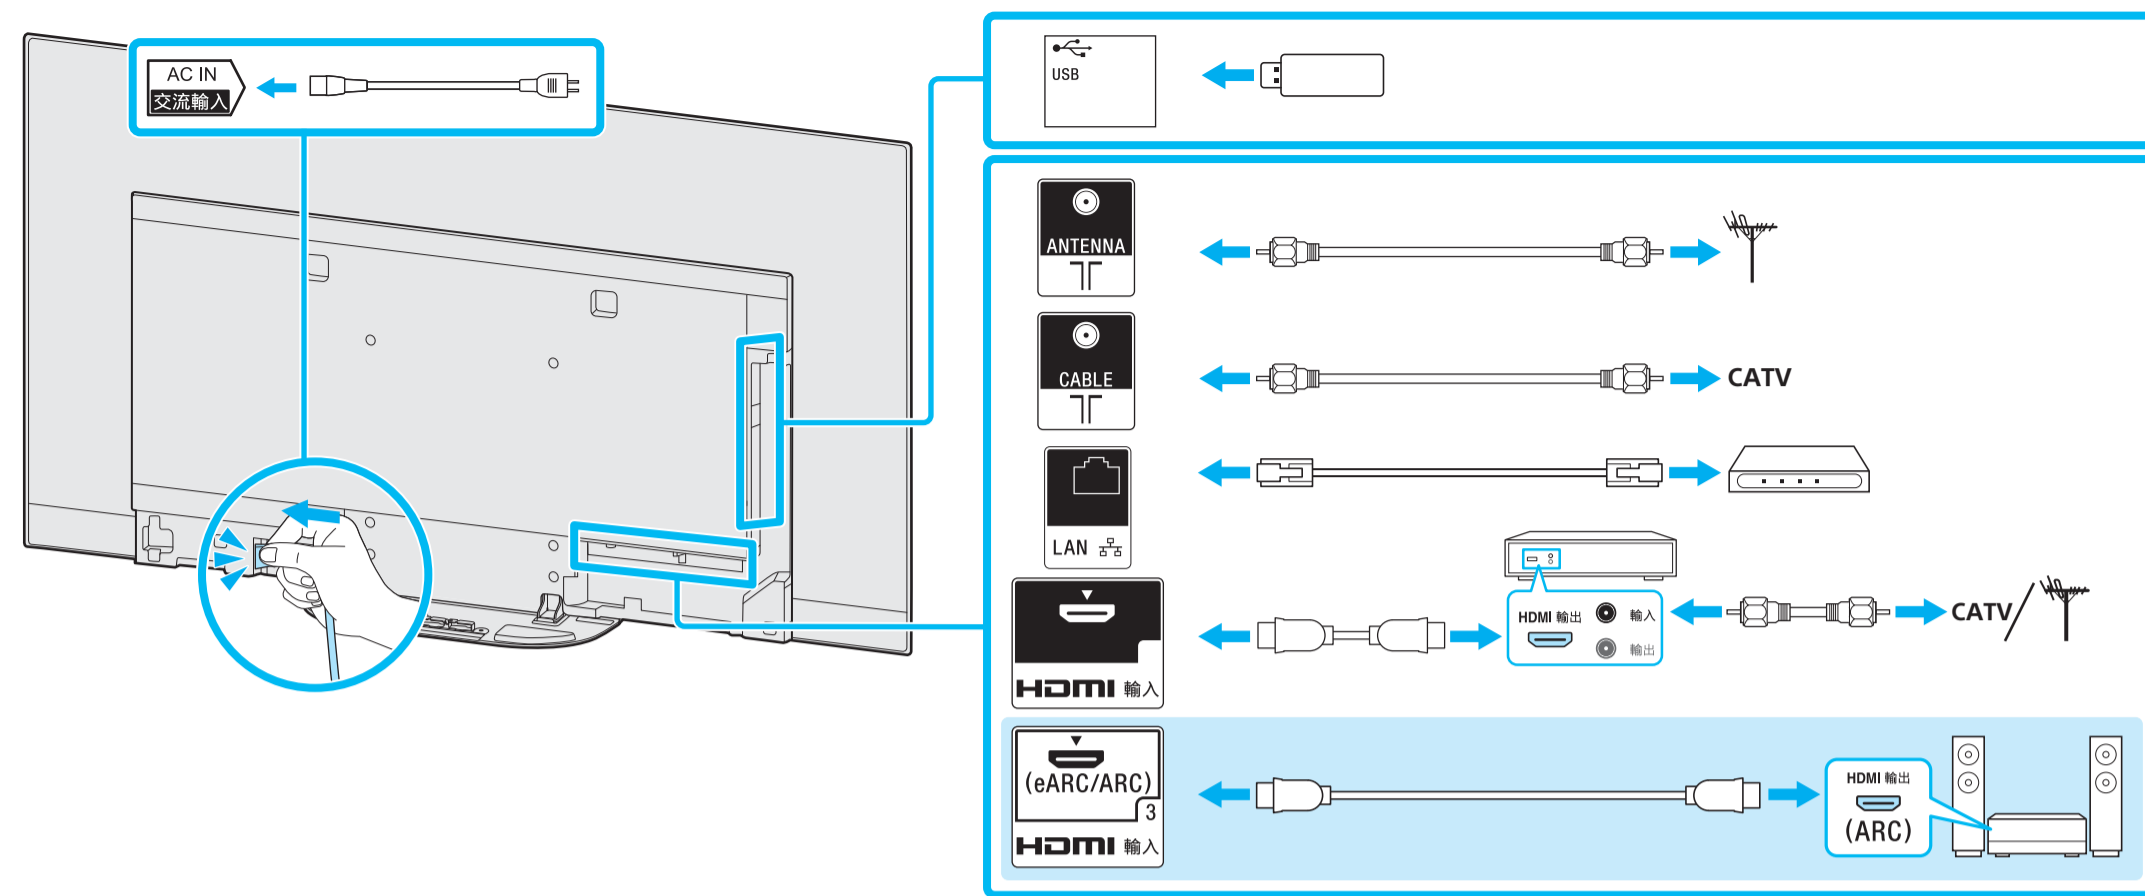


連接 關於額外的連接信息，請參閱參考指南中的“連接圖”。

9

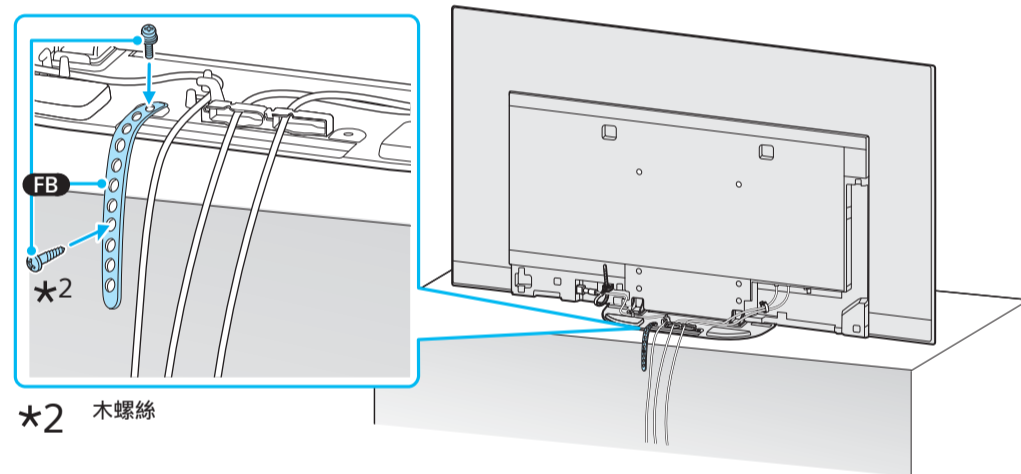


*2 木螺絲


10

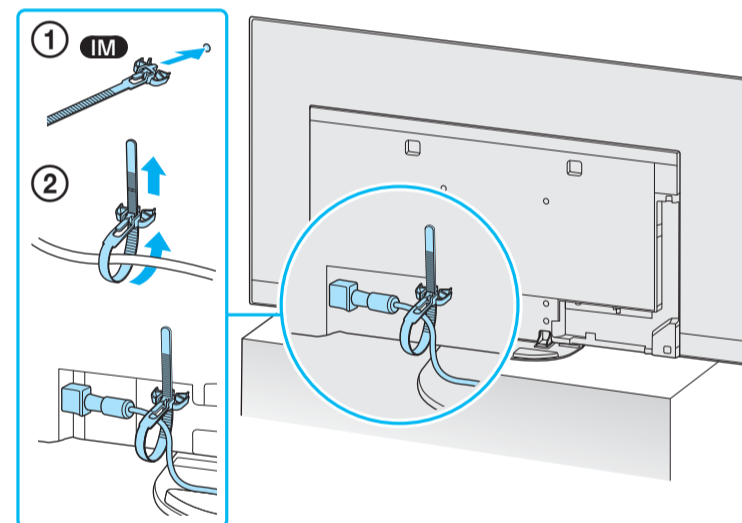


11

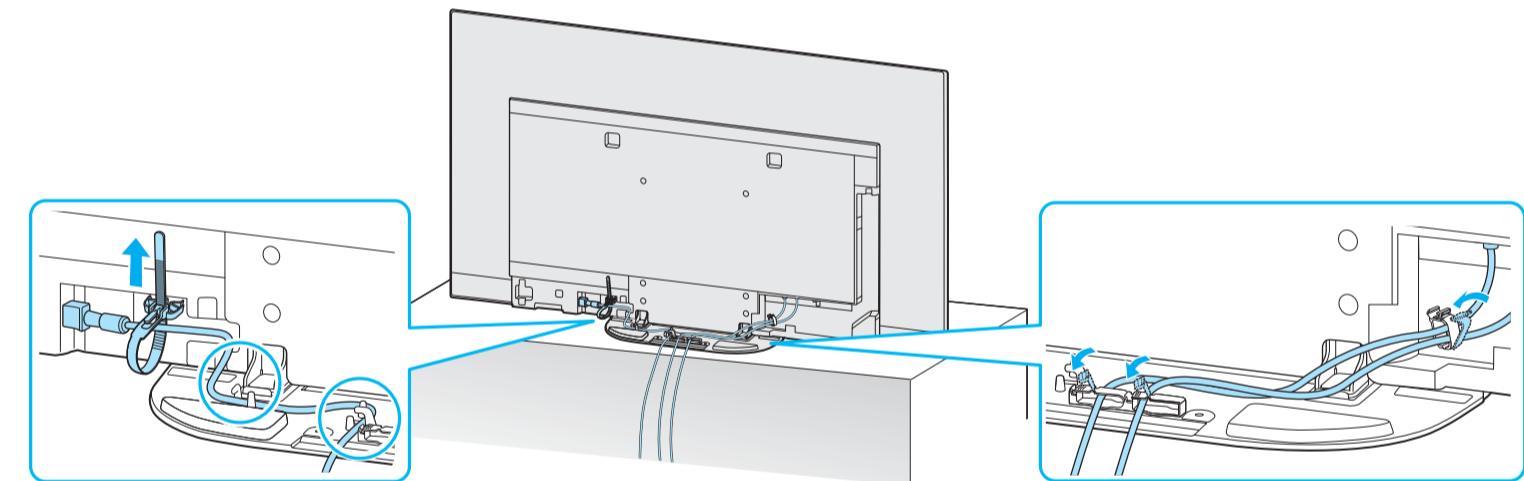


12

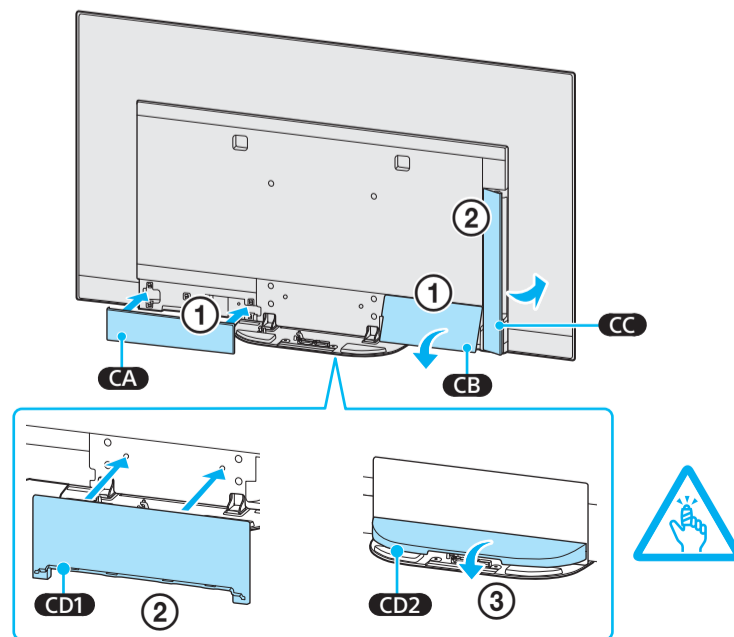


13

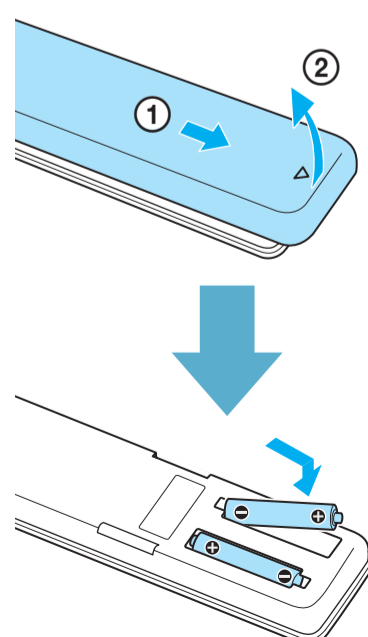

14

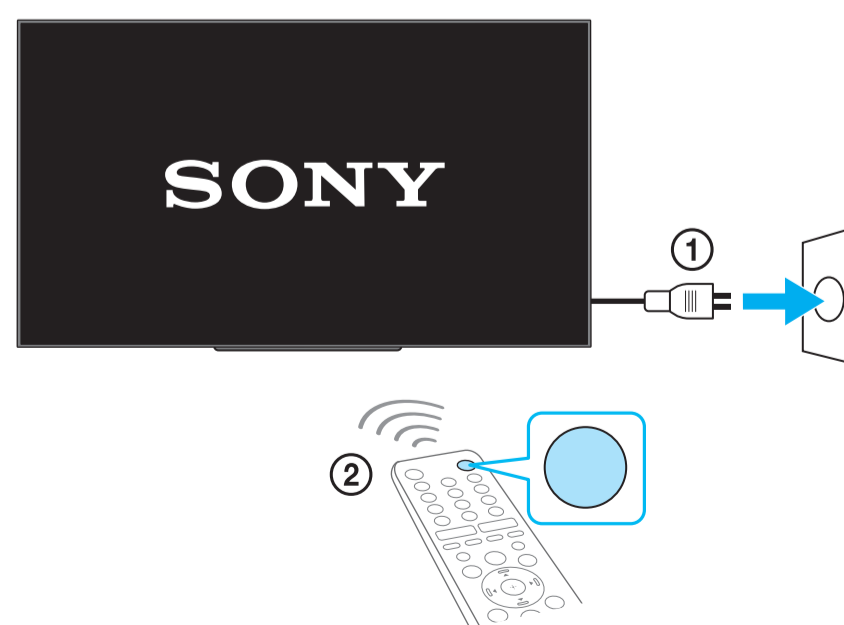

i

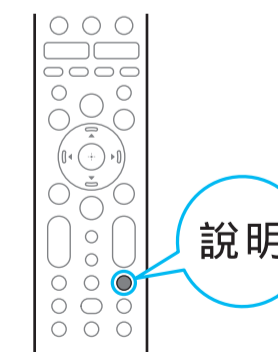

說明



<http://www.sony.net/tv-how-to-videos>

提示