

# Setup Guide



Өнім атауы: Теледидар

5-015-665-31(1)



EE	Seadistusjuhend	SI	Priločnik za pripravo
LV	Uzsākšanas ceļvedis	KZ	Орнату нұсқаулығы
LT	Nustatymo vadovas	SR	Vodič za podešavanje
HR	Vodič za postavljanje	HE	מדריך הגדרה

KD-55XH92xx / 55XH90xx  
KE-55XH92xx / 55XH90xx

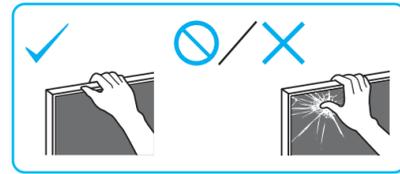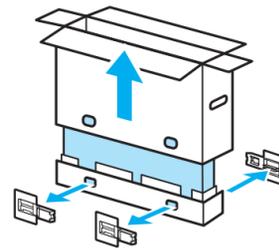

**1**

SB1 IM VS CL SB2

\*1

\*2 1.5 N·m/1.5 N·m {15 kgf·cm}

**2**

\*2

① ②

**3**

x 6

**4**

① ② ③

**5**

①

②

SB1

③

SB2

**6**

\*2

①

SB1

②

③



SB2

\*1 Vt Teatmikku / Skatiet atsaucies ceļvedi / Žr. trūpāji vadovā. / Pogledajte Referentni vodič / Glejte referenčni priločnik / Анықтама нұсқаулығын қараңыз / Pogledajte Referentni vodič / עיין במדריך העיון

\*2 Ainult teatud piirkondades/riikides/telerimudelitel. / Tikai dažos reģionos/valstīs/dažiem televizoru modeļiem. / Tik kai kuriuose regionuose/šalyse/TV modeliuose. / Odnosi se samo na određene regije/zemlje/modele TV-a. / Samo za određena područja/države/modele televizorja. / Тек шектелген аймақта/енде/ТД үлгісі. / Samo za ograničeni region/zemlju/TV model. / באזורים/במדינות/בדגמי טלוויזיה מסוימים בלבד.



7

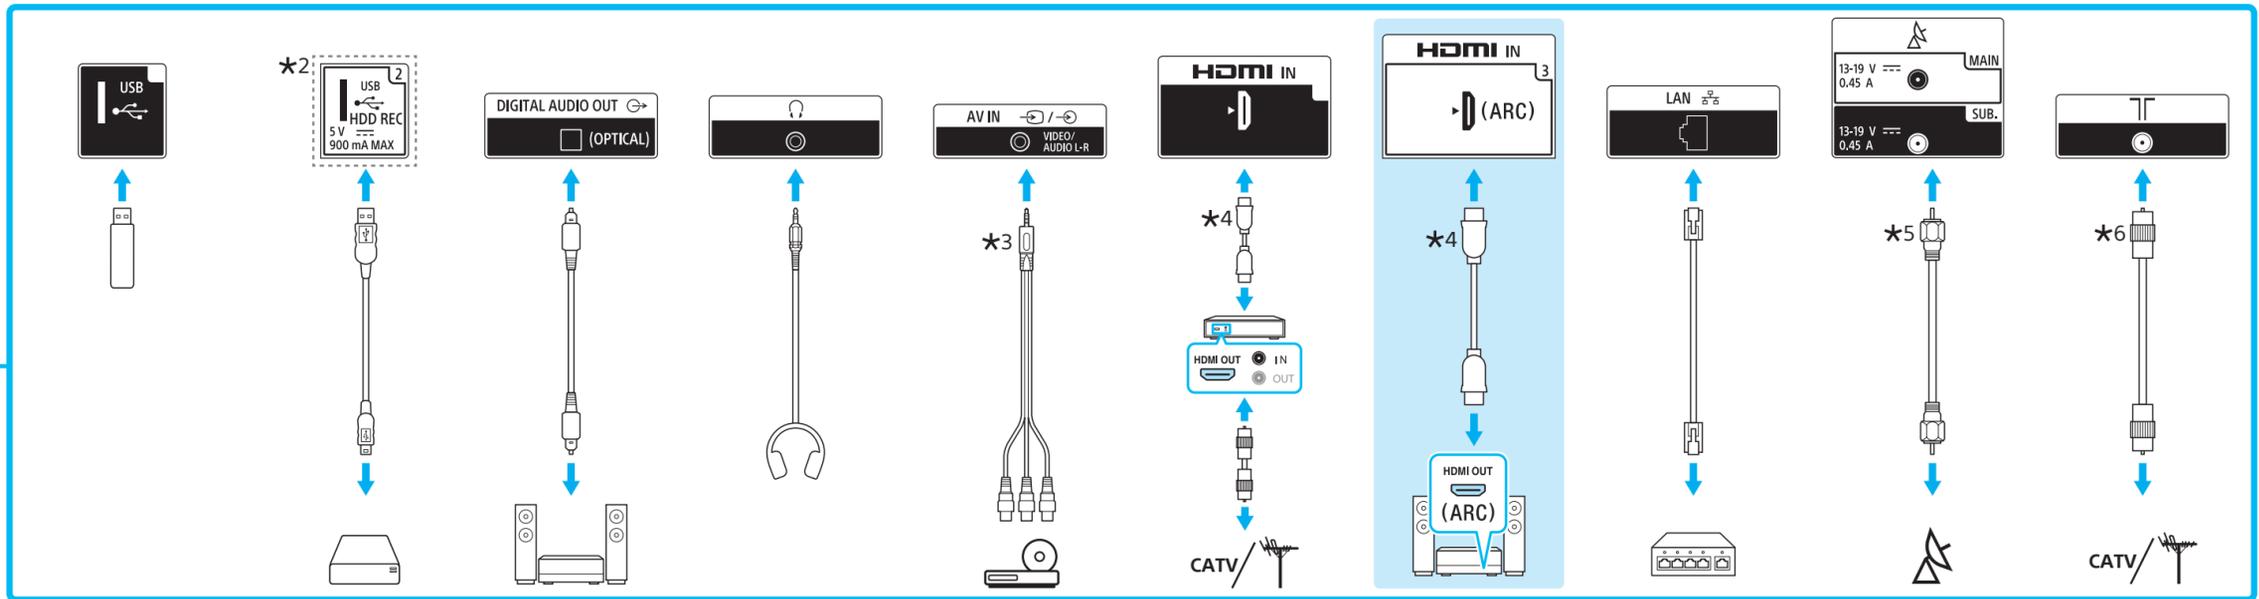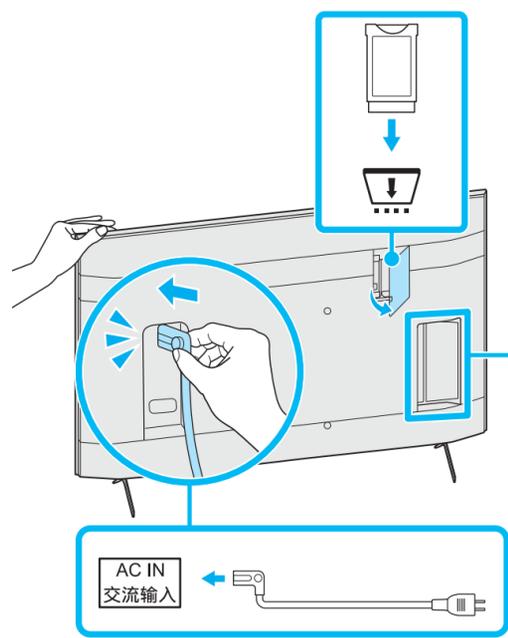

\*3 3.5/3.5 (mm) 1 2 3 4  
 1:L  
 2:Video / Vaizdo medžiaga / Бейне / וידאו  
 3:GND  
 4:R


\*4 < 21 (mm) < 12 (mm)

\*5 < 7 (mm) < 1.5/1.5 (mm)


\*6 < 14 (mm)

(mm) / (MM) / (מ"מ)



8

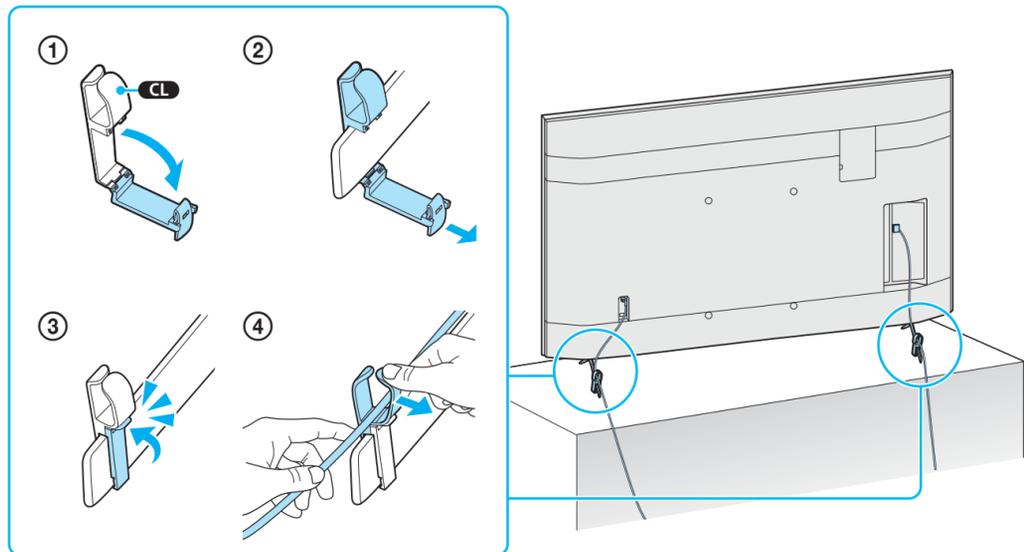

9

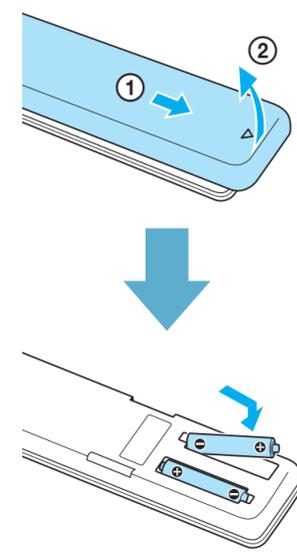

10

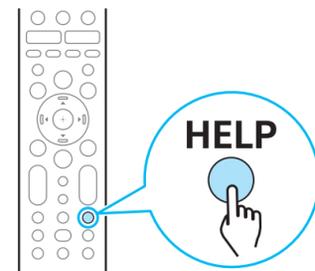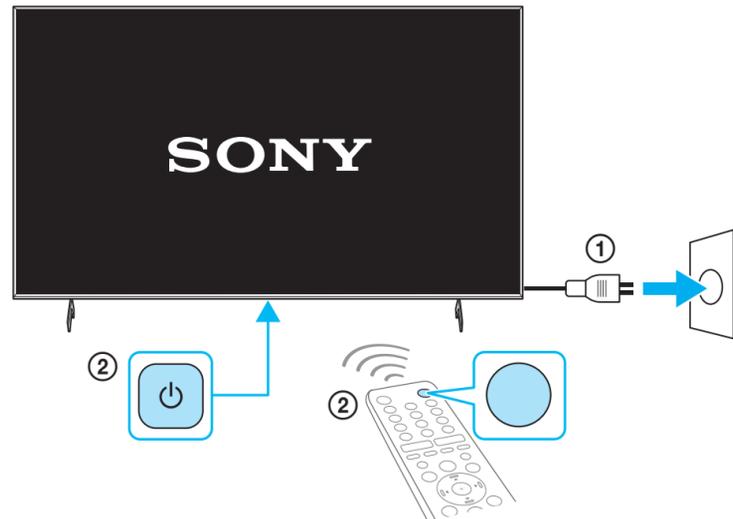

<http://www.sony.net/tv-how-to-videos>

Nāpunāited / Padomi / Patarimai / Savjeti /  
 Pomoc / Анықтама / Pomoc / עזרה

Spikker / Palīdzība / Žinynas / Pomoc /  
 Pomoc / Анықтама / Pomoc / עזרה