



# Setup Guide

Өнім атауы: Теледидар

5-037-694-31(1)



EE	Seadistusjuhend	SI	Priložnik za pripravo
LV	Uzsākšanas ceļvedis	KZ	Орнату нұсқаулығы
LT	Nustatymo vadovas	SR	Vodič za podešavanje
HR	Vodič za postavljanje	HE	מדריך הדרה

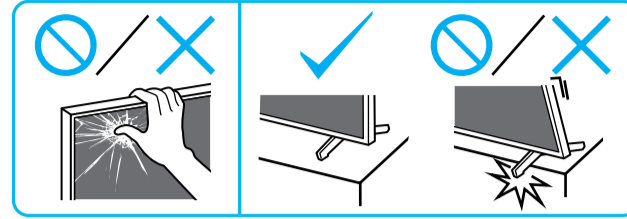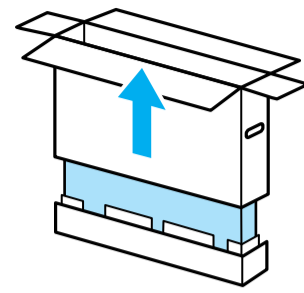


**1**

\*2

\*1

75  
65  
55

\*2 1.5 N·m/1.5 N·m (15 kgf·cm)

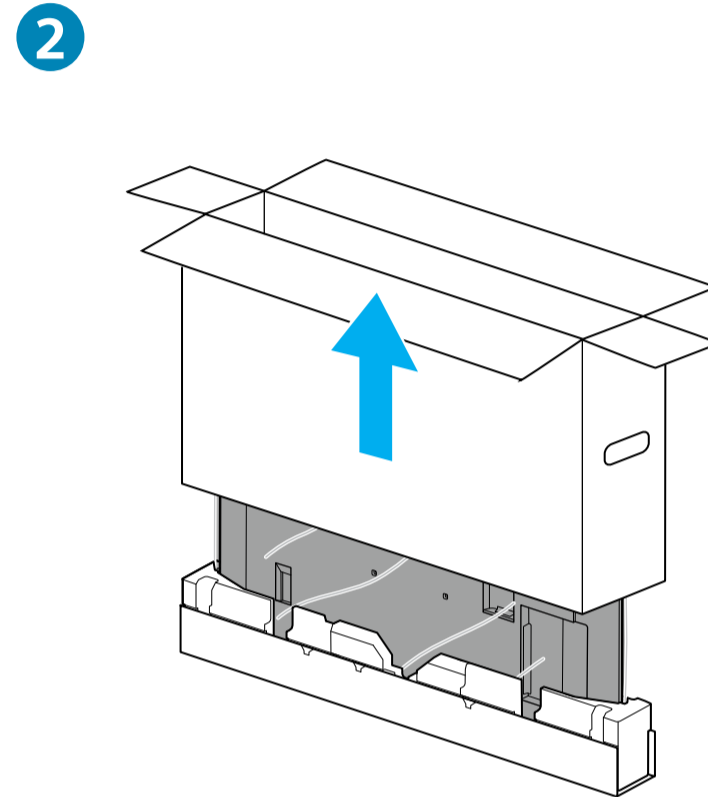

**3**

\*2

①

②\*2

**4**

75 ① ②

65 ① ②

55

SB2

SB1

\*2

① 75

65 55

②

SB1

① ②


SB2

\*1 Vt Teatmikku / Skatiet atsauces ceļvedi / Žr. trūpaņņ vadovā. / Pogledajte Referentni vodič / Glejte referenčni priročnik / Анықтама нұсқаулығын қараңыз / Pogledajte Referentni vodič / עיין במדריך העיון


\*2 Ainult teatud piirkondade/riikide/mudelite jaoks. / Tikai dažiem reģioniem/valstīm/modeliem. / Tik kai kuriuose regionuose / šalyse / modeliuose. / Samo za određenu regiju/zemlju/model. / Samo za omejene regije/države/modele. / Тек шектеулі аймақтарда/елдерде/үлгілерде. / Samo za ograničen region/zemlju/model. / רק באזורים במדינות/בדגמים מסוימים




5

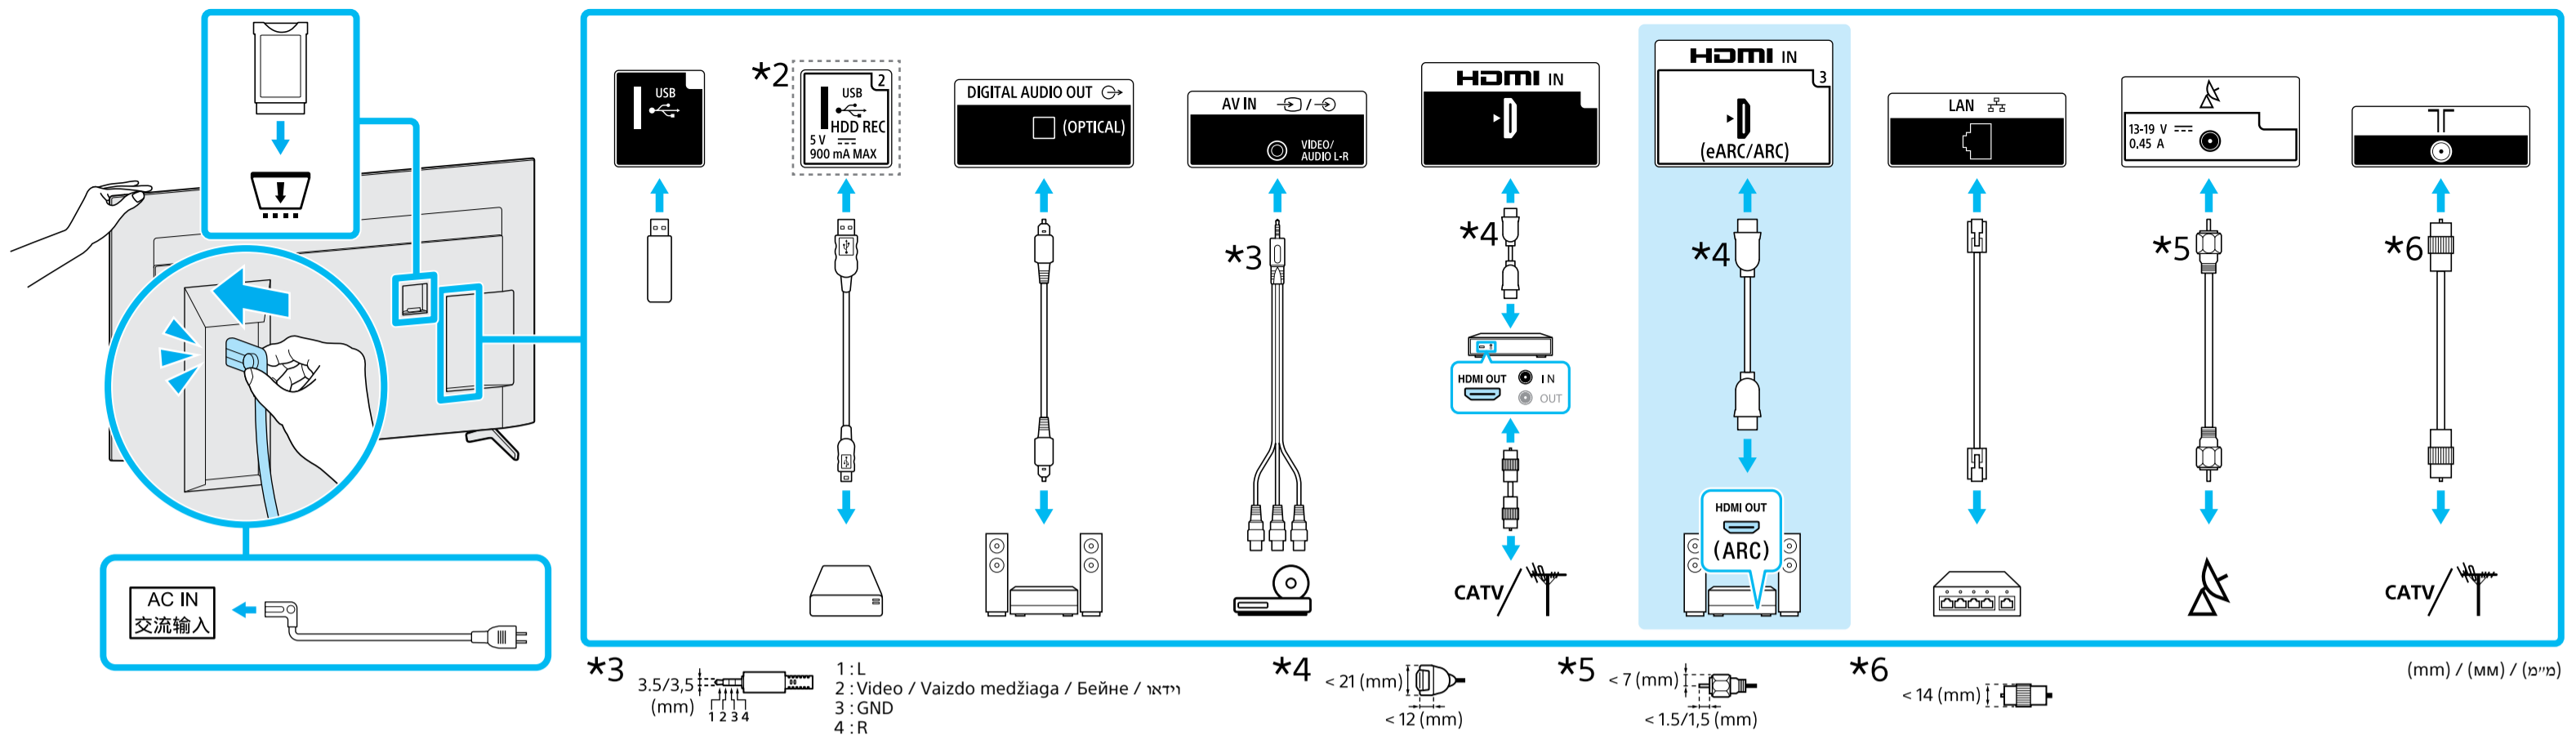





6

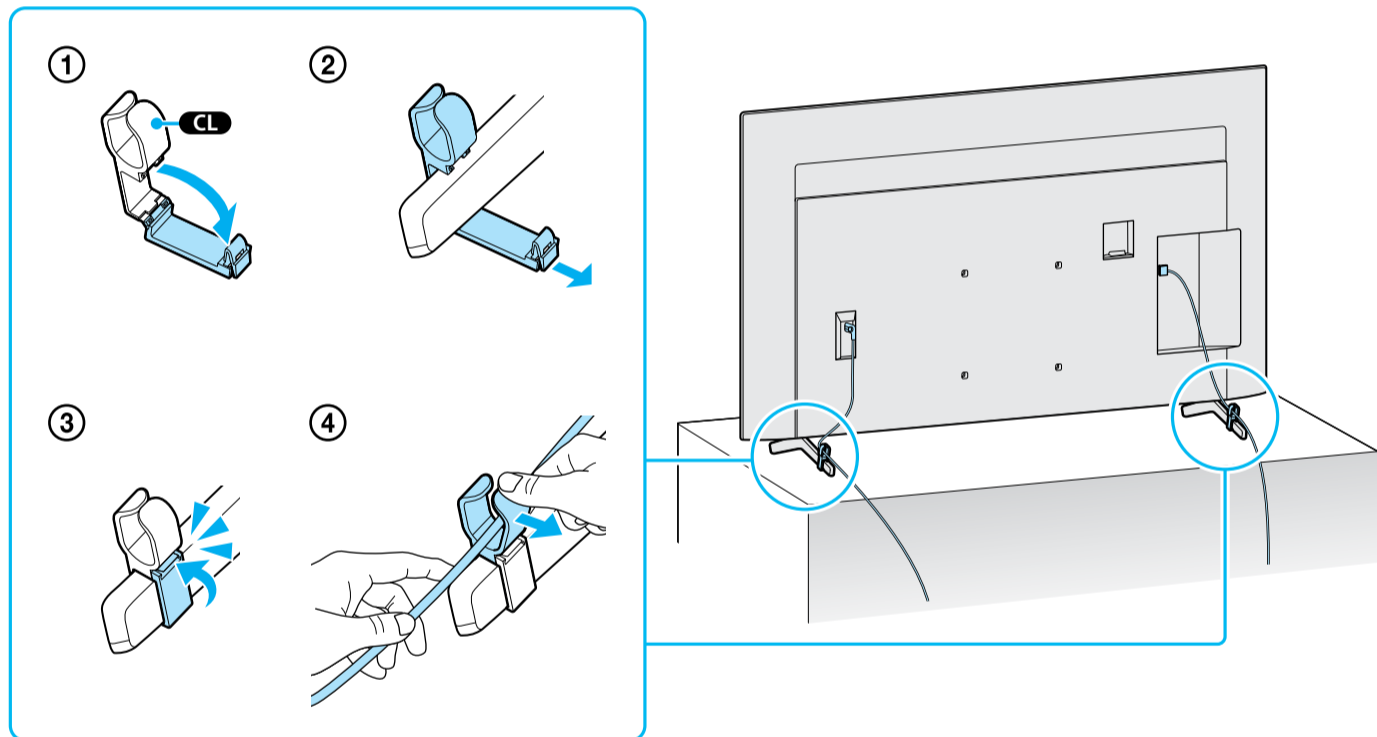

7

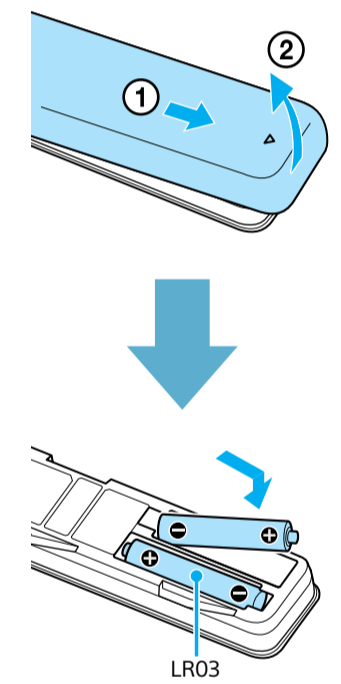

8

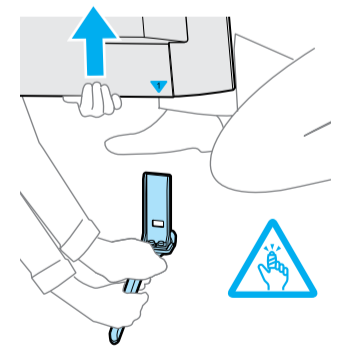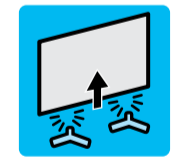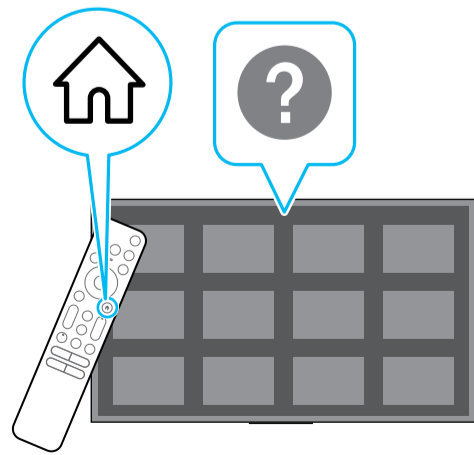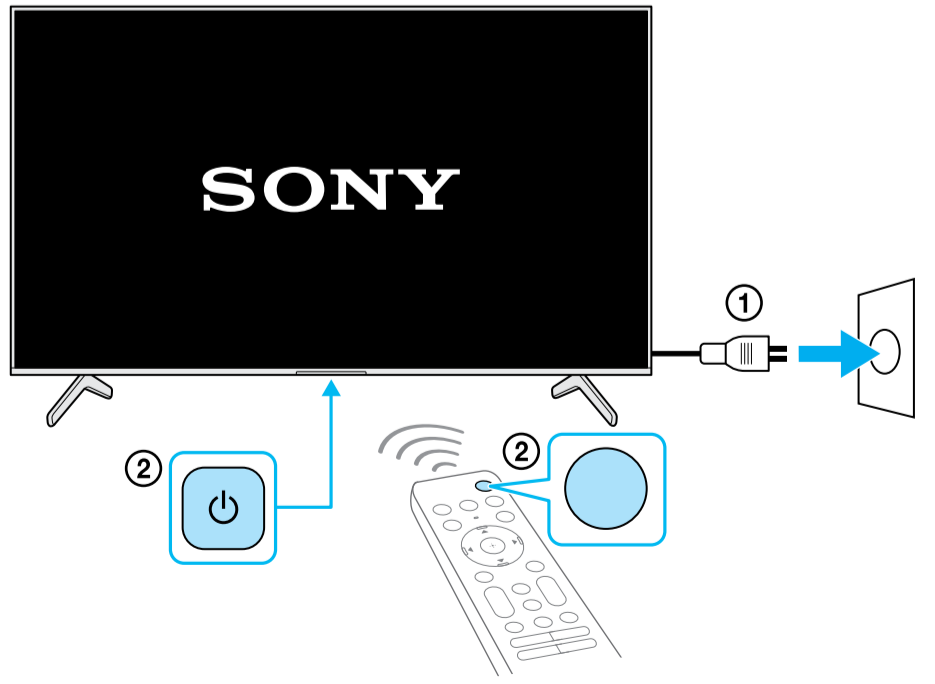

<https://www.sony.eu/support>