




Television

Reference Guide

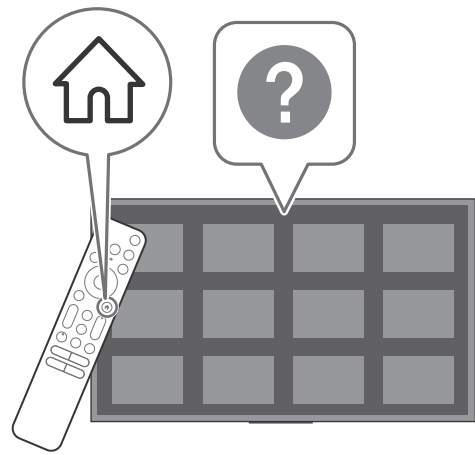

BRAVIA

KD-75X80SK / 75X80K / 75X80BK / 65X81DK / 65X80K / 65X80BK / 55X81DK / 55X80K / KD-55X80BK / 50X81DK / 50X80K / 43X81DK / 43X80K

About Manuals

This TV comes with the following manuals. Please retain the manuals for future reference.

Setup Guide • TV installation and setup.	
Reference Guide (this manual) / Safety Documentation • Safety information, remote control, troubleshooting, wall-mount installation, specification, etc.	
Help Guide (On screen Manual) • Settings, functions, Internet connection, troubleshooting, etc. • To open it, press (Input select) on the remote control and select [Help]. If [Help] does not exist, select [Edit] and add [Help].	• You can refer to the Help Guide with your smartphone. https://rd1.sony.net/help/tv/jga1/h_ga/

IMPORTANT – Read the End User Software Licence Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<https://www.sony.net/tv-software-licenses/>) or on your product screen. Press (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

Note

- Before operating the TV, please read the "Safety Information".
- Read the supplied safety documentation for additional safety information.
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates.

For latest information, visit Sony support website.

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

Safety Information


Installation/Set-up

Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electric shock or damage and/or injuries.

- Installation**
- The TV set should be installed near an easily accessible AC power outlet (mains socket).
 - Place the TV set on a stable, level surface to prevent it from falling over and causing personal injury or property damage.
 - Install the TV where it cannot be pulled, pushed, or knocked over.
 - Install the TV so that the TV's Table-Top Stand does not protrude out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

Transporting

- Before transporting the TV set, disconnect all cables.
- Two or more persons are needed to transport a large TV set.
- When transporting the TV set by hand, hold it as shown below. Do not put stress on the panel and the frame around the screen.
- When lifting or moving the TV set, hold it firmly from the bottom.

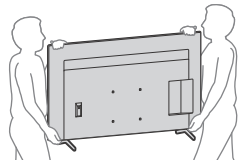


- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

Topple prevention

(Models with supplied support belt kit)


Refer to the Setup Guide on top of the cushion. The supplied wood screw is only for affixing to a solid object made of wood.

(Except models with supplied support belt kit)

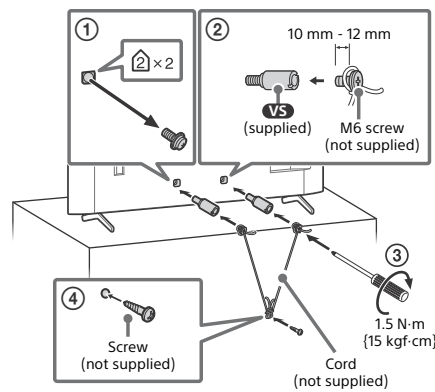


Remote Control and TV

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings*1.

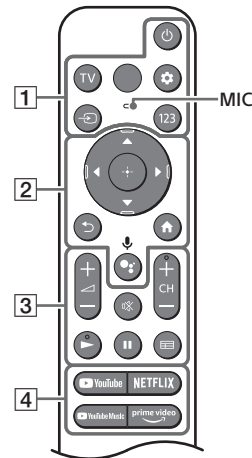

- 1 Power**
TV: Display TV channel list or switch to input.
 (Quick settings): Display Quick Settings.
 (Input select): Display and select the input source, etc.
123 (Control menu): Display the Control menu.
- 2** / / : On screen menu navigation and selection.
 (Back)
 (Home)
 (Google Assistant) / (Microphone): Use Google Assistant*2*3 or voice search*3.
- 3** + / - (Volume)
 (Mute)*4
CH + / - (Channel)
 (Guide): Display the digital programme guide of TV or TV box*5.
- 4 App buttons*6**

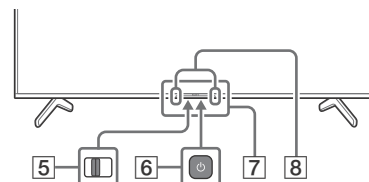

- 5 BUILT-IN MIC SWITCH*2:** Turn on/off the built-in MIC.
- 6 Power**
- 7 Remote Control sensor / Light sensor / LED**
- 8 Built-in MIC*2*3*7:** To enable the built-in MIC, press the Google Assistant/microphone button on the remote control and follow the on-screen instructions.

*1 For other remote control models, refer to the online Help Guide for details.
 *2 Only for limited region/country/model/language.
 *3 Google Assistant or voice search requires an Internet connection.
 *4 Accessibility shortcut is available by pressing and holding (Mute).
 *5 [TV box setup] setting is required.
 *6 Installation of the NETFLIX app may be required depending on your region/country.
 *7 Power consumption will increase when the built-in MIC is enabled as it is always listening.

? For more information, refer to the Help Guide. Press (Input select) on the remote control and select [Help]. If [Help] does not exist, select [Edit] and add [Help].

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL850 or SU-WL450)* (not supplied)

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:


Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information

For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.

<https://www.sony-asia.com/support>


- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Sony is not liable for any damage or injury caused by mishandling or improper installation.
- Only qualified service personnel should carry out wall-mount installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including:
 –Wall-Mount Bracket SU-WL850
 –Wall-Mount Bracket SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.
 The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

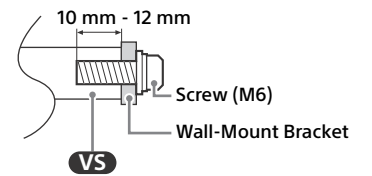

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

* Only for limited region/country/model.

Optional Camera and Microphone Unit Cable Management

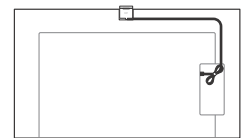

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- 1** Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead). Or, press the power button on the TV for about 40 seconds until the TV turns off.
- 2** Refer to the Help menu shown below.
- 3** Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- 4** Visit Sony support website (information provided at the end of this manual).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 9999 for the PIN and enter the new PIN.

? For more information on troubleshooting, refer to the Help Guide. Press (Input select) on the remote control and select [Help]. If [Help] does not exist, select [Edit] and add [Help].

Specifications

System

Panel system: LCD (Liquid Crystal Display) Panel, LED Backlight
TV system: Depend on your country/area selection/TV model
Analogue: B/G, I, D/K, M
Digital: DVB-T/DVB-T2
Colour system: PAL/SECAM/NTSC3.58/NTSC4.43
Channel coverage: Depend on your country/area selection/TV model
Analogue: UHF/VHF/Cable
Digital: UHF/VHF
Sound output: 10 W + 10 W
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac
Bluetooth® Version 4.2

Input/Output jacks

Antenna (aerial)/cable
75 ohm external terminal for VHF/UHF
VIDEO IN
Video/Audio input (mini jack)
HDMI IN 1/2/3/4 (HDCP 2.3-compatible)
Video:
4096 × 2160p (50, 60 Hz)^{*1+2}, 4096 × 2160p (24 Hz)^{*1}, 3840 × 2160p (50, 60 Hz)^{*2}, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 480p, PC Formats^{*3}
Audio:
In eARC (Enhanced Audio Return Channel) mode
Refer to the online Help Guide for details.
Except eARC mode
5.1 channel linear PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 bits, Dolby Audio, Dolby Atmos, DTS
eARC/ARC (Enhanced Audio Return Channel/Audio Return Channel) (HDMI IN 3 only)^{*4}
In eARC mode
Refer to the online Help Guide for details.
In ARC mode
Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, Dolby Atmos, DTS
DIGITAL AUDIO OUT (OPTICAL)
Digital optical jack (Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS)
HDMI 4 AUDIO IN
Analogue audio input (Stereo mini jack)
(Stereo mini jack)
Headphone
USB port 1, USB port 2
USB port 1 supports High Speed USB (USB 2.0)
USB port 2 supports Super Speed USB (USB 3.2 Gen 1)
LAN
10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. The communication rate and quality are not guaranteed.)
REMOTE
RS-232C, mini jack
(This terminal is for service use only.)

Power and others

Power requirements
220 V - 240 V AC, 50/60 Hz
Energy Efficiency Class^{*5}
(For Jordan only)
KD-75X80K / 75X80BK: A
KD-65X80K / 65X80BK: A
KD-55X80K / 55X80BK: B
Screen size (measured diagonally) (Approx.)
KD-75X80SK / 75X80K / 75X80BK: 75 inches / 189.3 cm
KD-65X81DK / 65X80K / 65X80BK: 65 inches / 163.9 cm
KD-55X81DK / 55X80K / 55X80BK: 55 inches / 138.8 cm
KD-50X81DK / 50X80K: 50 inches / 125.7 cm
KD-43X81DK / 43X80K: 43 inches / 108.0 cm
Power consumption
Indicated on the rear of the TV
Power consumption^{*5}
In [Standard] mode
(For Jordan only)
KD-75X80K / 75X80BK: 191 W
KD-65X80K / 65X80BK: 148 W
KD-55X80K / 55X80BK: 126 W
Annual energy consumption^{*5}
(For Jordan only)^{*6}
KD-75X80K / 75X80BK: 265 kWh per year
KD-65X80K / 65X80BK: 205 kWh per year
KD-55X80K / 55X80BK: 175 kWh per year
Standby power consumption^{*5+7+8}
Jordan/UAE/Egypt: 0.50 W, Others: 0.5 W
Display resolution (horizontal × vertical) (pixels)
3840 × 2160
Output rating
500 mA (for USB 1), 900 mA (for USB 2)

Dimensions (Approx.) (w × h × d) (mm)

with Table-Top Stand
KD-75X80SK / 75X80K / 75X80BK: 1675 × 1041 × 412
KD-65X81DK / 65X80K / 65X80BK: 1452 × 906 × 339
KD-55X81DK / 55X80K / 55X80BK: 1233 × 783 × 339
KD-50X81DK / 50X80K: 1119 × 716 × 288
KD-43X81DK / 43X80K: 964 × 629 × 288
without Table-Top Stand
KD-75X80SK / 75X80K / 75X80BK: 1675 × 962 × 73
KD-65X81DK / 65X80K / 65X80BK: 1452 × 836 × 72
KD-55X81DK / 55X80K / 55X80BK: 1233 × 713 × 72
KD-50X81DK / 50X80K: 1119 × 649 × 70
KD-43X81DK / 43X80K: 964 × 563 × 69

Mass (Approx.) (kg)

with Table-Top Stand
KD-75X80SK / 75X80K / 75X80BK: 33.5
KD-65X81DK / 65X80K / 65X80BK: 22.7
KD-55X81DK / 55X80K / 55X80BK: 16.9
KD-50X81DK / 50X80K: 13
KD-43X81DK / 43X80K: 10.7
without Table-Top Stand
KD-75X80SK / 75X80K / 75X80BK: 32.2
KD-65X81DK / 65X80K / 65X80BK: 21.7
KD-55X81DK / 55X80K / 55X80BK: 15.9
KD-50X81DK / 50X80K: 12.4
KD-43X81DK / 43X80K: 10.1

Others

Optional accessories
Wall-Mount Bracket: SU-WL850 (KD-75X80SK / 75X80K / 75X80BK / 65X81DK / 65X80K / 65X80BK / 55X81DK / 55X80K / 55X80BK only)
Wall-Mount Bracket: SU-WL450
Camera and Microphone Unit: CMU-BC1
Operating temperature: 0 °C – 40 °C

- *1 When 4096 × 2160p is input and [Wide mode] is set to [Normal], the resolution is displayed as 3840 × 2160p. To display 4096 × 2160p, set [Wide mode] setting to [Full 1] or [Full 2].
*2 Refer to the on screen menu to set [HDMI signal format].
*3 Refer to the online Help Guide for details.
*4 Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.
*5 This information is for EU and other countries whose relevant regulation is based on EU energy labelling regulation.
*6 Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.
*7 Specified standby power is reached after the TV finishes necessary internal processes.
*8 Standby power consumption will increase when your TV is connected to the network.

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.

Notes on Digital TV function

- Any functions related to Digital TV (DVB) will only work in countries or areas where DVB-T/DVB-T2 (MPEG-2 and H.264/MPEG-4 AVC) digital terrestrial signals are broadcast. Please confirm with your local dealer if you can receive a DVB-T/DVB-T2 signal where you live.
- This TV set complies with DVB-T/DVB-T2 specifications, but compatibility with future DVB-T/DVB-T2 digital terrestrial broadcasts are not guaranteed.
- Some Digital TV functions may not be available in some countries/areas.

Trademark information

- The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2021 Dolby Laboratories. All rights reserved.
- Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.
- Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and other marks are trademarks of Google LLC.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, Digital Surround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.
- Netflix is a registered trademark of Netflix, Inc.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- All other trademarks are the property of their respective owners.

TUXERA

