


## Priušтите si odličnu zabavu uz aplikacije "Sony | Music Center" i "Fiestable"!

**1** Preuzmite "Sony | Music Center" iz trgovine App Store ili Google Play.

**2** Pripremite audio sustav.

- ① Uključite sustav, uzastopno pritisnite FUNCTION – PAIRING dok indikator  (BLUETOOTH) ne počne sporo treperiti i držite pritisnutim FUNCTION – PAIRING dulje **od 3 sekunde**. Sustav se prebacuje u način rada za UPARIVANJE.
- ② Postavite BLUETOOTH® vezu u izborniku s postavkama pametnog telefona iPhone/Android™.


**3** Pokrenite aplikaciju "Sony | Music Center" i preuzmite "Fiestable".

Pokrenite aplikaciju "Sony | Music Center" i dodirnite ikonu "Fiestable" u gornjem lijevom kutu (pogledajte sl. **A**). Aplikaciju "Fiestable" možete preuzeti iz trgovine App Store ili Google Play.

## Aplikaciji »Sony | Music Center« in »Fiestable« za nore zabave.


**1** Prenesite aplikaciju »Sony | Music Center« iz trgovine App Store ali Google Play.

**2** Pripravite zvočni sistem.

- ① Vključite sistem, večkrat pritisnite gumb FUNCTION – PAIRING, dokler indikator  (BLUETOOTH) ne začne počasi utripati, in pridržite gumb FUNCTION – PAIRING za **več kot 3 sekunde**. Sistem preklopi v način SEZNANJANJA.
- ② V meniju z nastavitvami naprave iPhone/Android™ nastavite povezavo BLUETOOTH®.

**3** Zaženite »Sony | Music Center« in prenesite »Fiestable«.

Zaženite »Sony | Music Center« in se dotaknite ikone »Fiestable« v zgornjem levem kotu (glejte sliko **A**). Aplikaciju »Fiestable« lahko prenesete iz trgovine App Store ali Google Play.

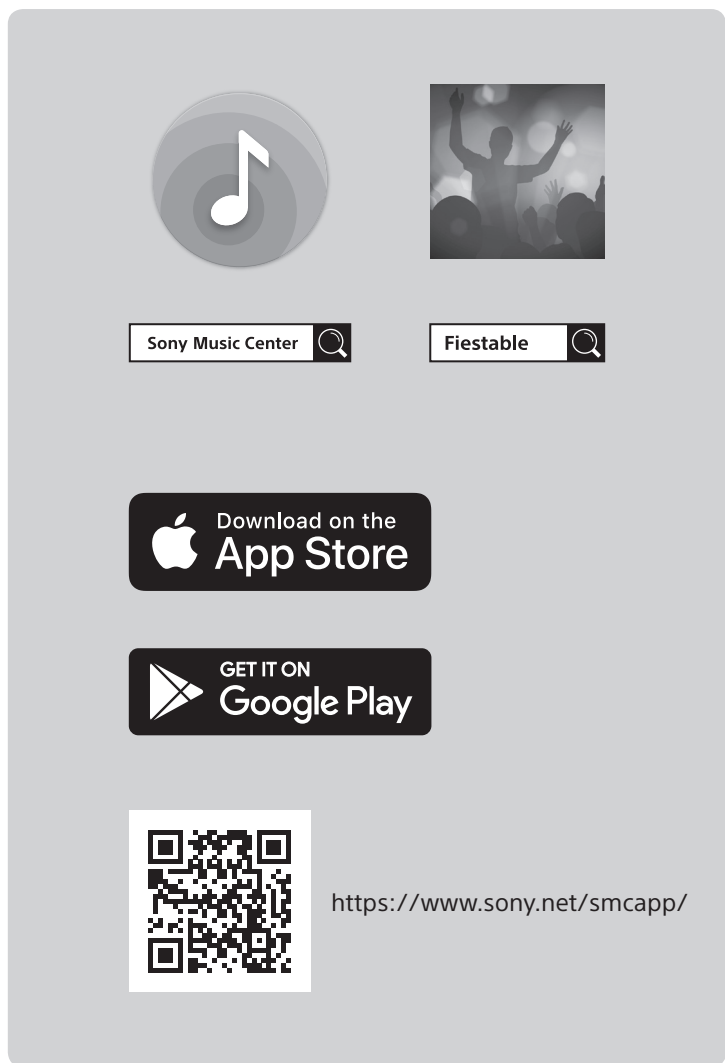

The image shows a grey background with two app icons at the top: a music note icon for "Sony Music Center" and a silhouette of a person dancing for "Fiestable". Below each icon is a search bar with the app name and a magnifying glass icon. Further down are two buttons: "Download on the App Store" with the Apple logo and "GET IT ON Google Play" with the Google Play logo. At the bottom left is a QR code, and to its right is the URL <https://www.sony.net/smcapp/>.




The image shows a screenshot of an iPhone settings menu. On the left, a list of settings includes "Wi-Fi", "Fiestable", "USB", "Audio In", "Play Music", "Settings", and "Bluetooth Audio". A callout box with a white background and a black border points to the "Fiestable" app icon. The callout box contains the app icon, the name "Fiestable", and a hand cursor icon pointing at it. The letter "A" is in a black box in the top left corner of the image.


# Pravite lude žurke uz aplikacije „Sony | Music Center“ i „Fiestable“!

**1** Preuzmite aplikaciju „Sony | Music Center“ iz prodavnice App Store ili Google Play.

**2** Pripremite svoj audio sistem.

- ① Uključite sistem, pritisnite dugme FUNCTION – PAIRING dok indikator  (BLUETOOTH) ne počne da treperi sporo i držite pritisnuto dugme FUNCTION – PAIRING **duže od 3 sekunde**. Sistem ulazi u režim PAIRING.
- ② Podesite BLUETOOTH® vezu u meniju za postavke uređaja iPhone/Android™.

**3** Pokrenite aplikaciju „Sony | Music Center“, a zatim preuzmite aplikaciju „Fiestable“.

Pokrenite aplikaciju „Sony | Music Center“ i dodirnite ikonu „Fiestable“ u gornjem levom uglu (pogledajte sliku ).

Aplikaciju „Fiestable“ možete da preuzmete iz prodavnice App Store ili Google Play.