


SONY

Müravähendusega juhtmevaba stereopeakomplekt
Belaidēs stereofoninēs ausinēs su triukšmo slopinimo funkcija
Bezvadu stereo ausiņas ar trokšņu neitralizāciju
Bežične stereo slūsalice s ukļanjanjem buķe
Bežične stereo slūsalice sa funkcijom potiskivanja buķe





Kasutussuunised
Naudojimo instrukcijas
Lietošanas instrukcijas

EE	Upute za rad	HR
LT	Uputstvo za upotrebu	SR
LV		


WH-CH710N

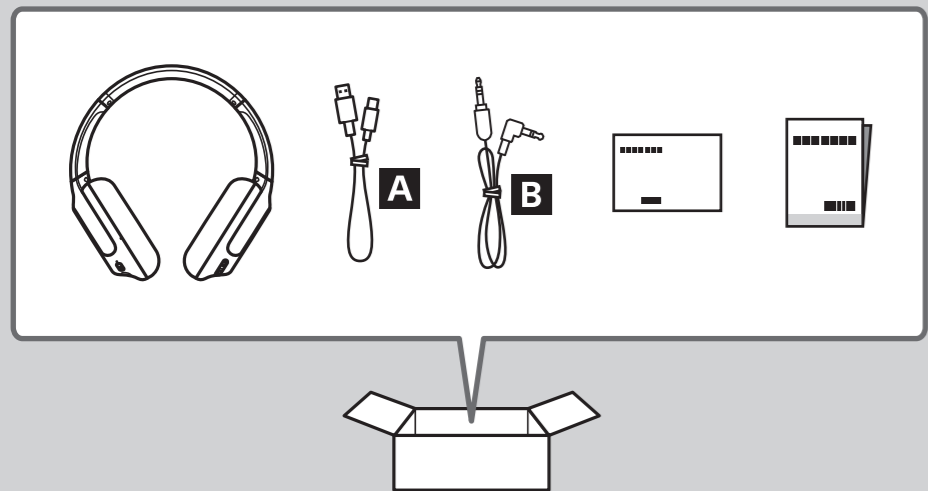





1

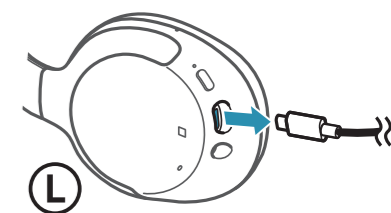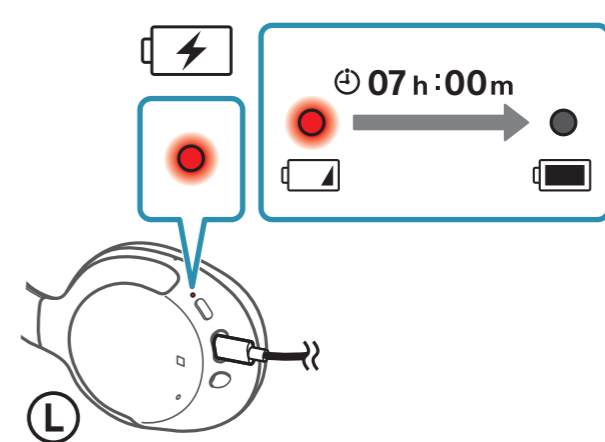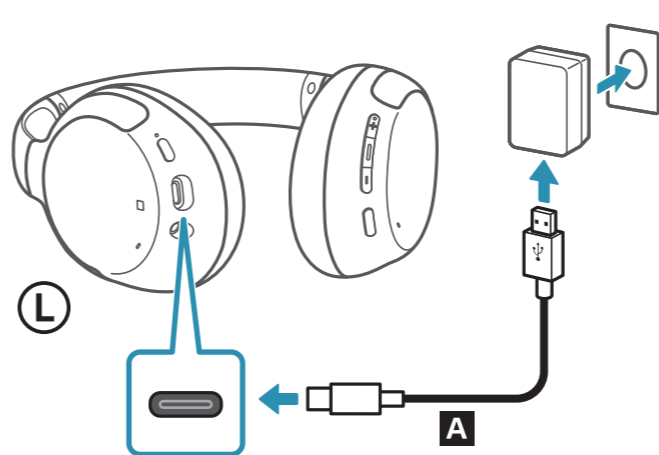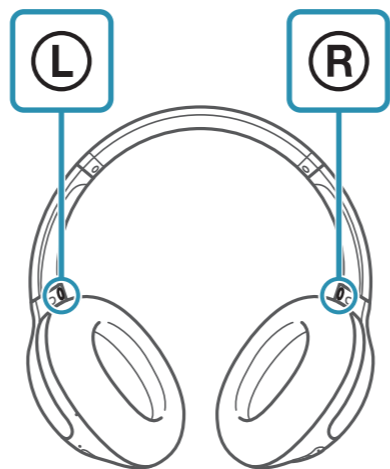






2





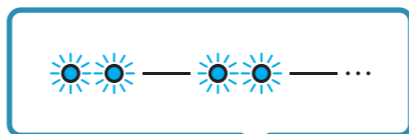


Android™ iPhone

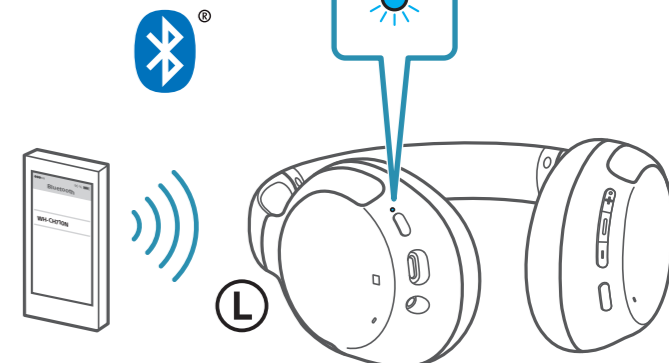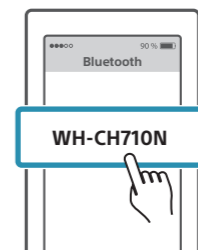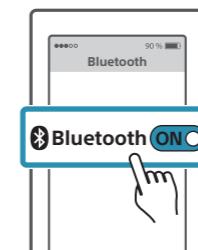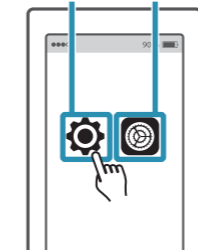

3

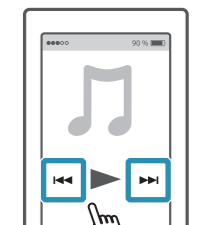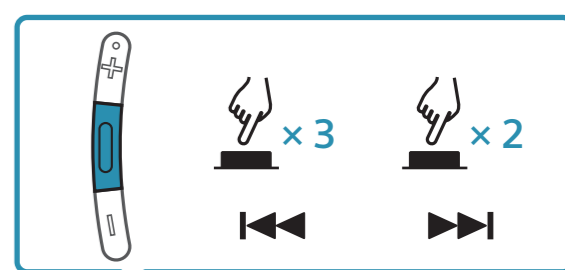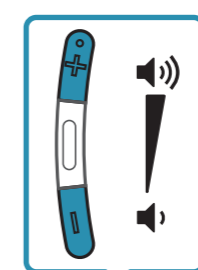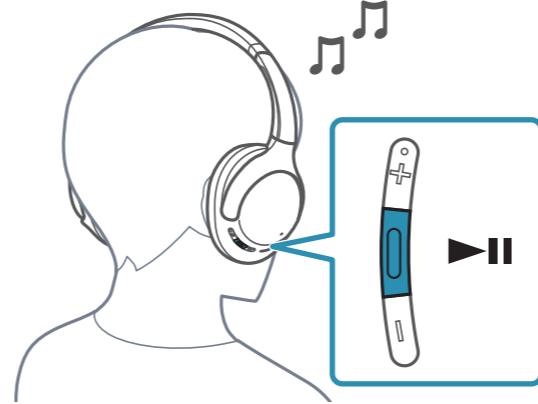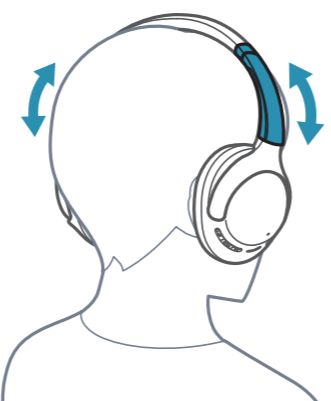


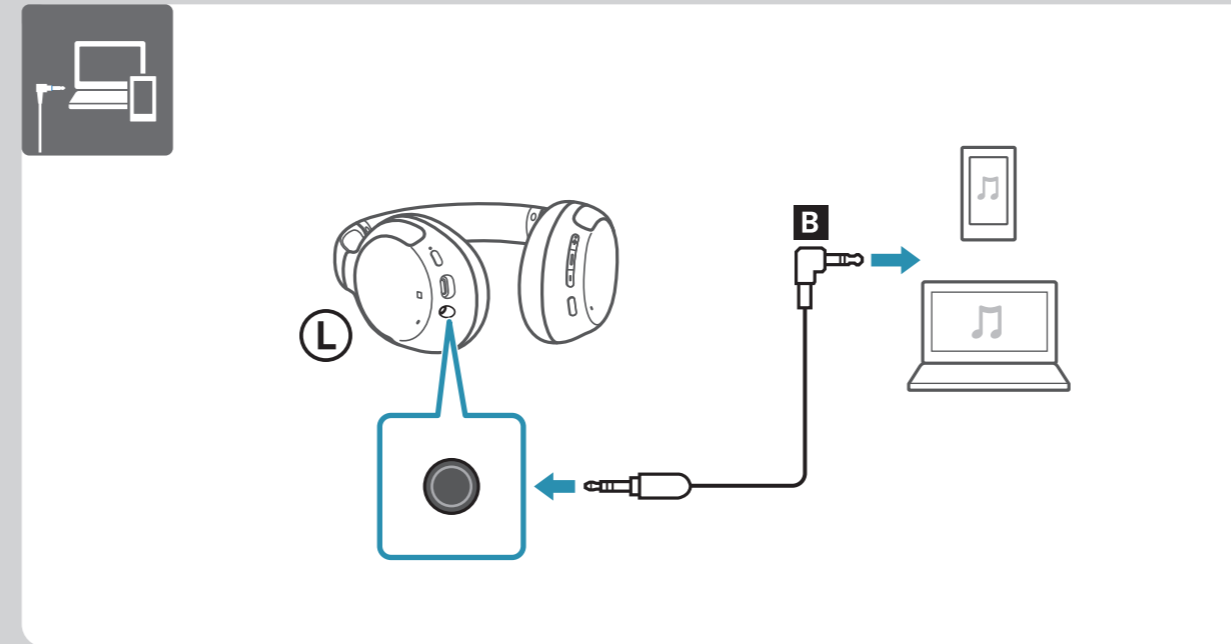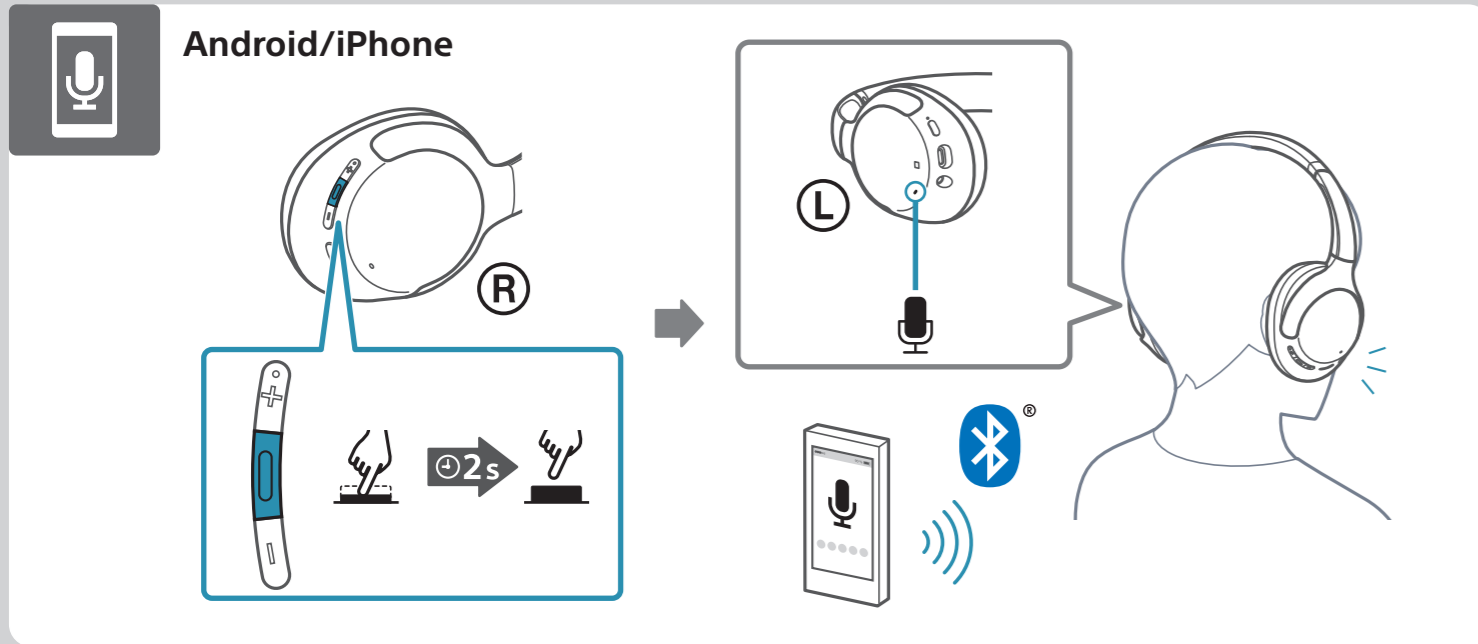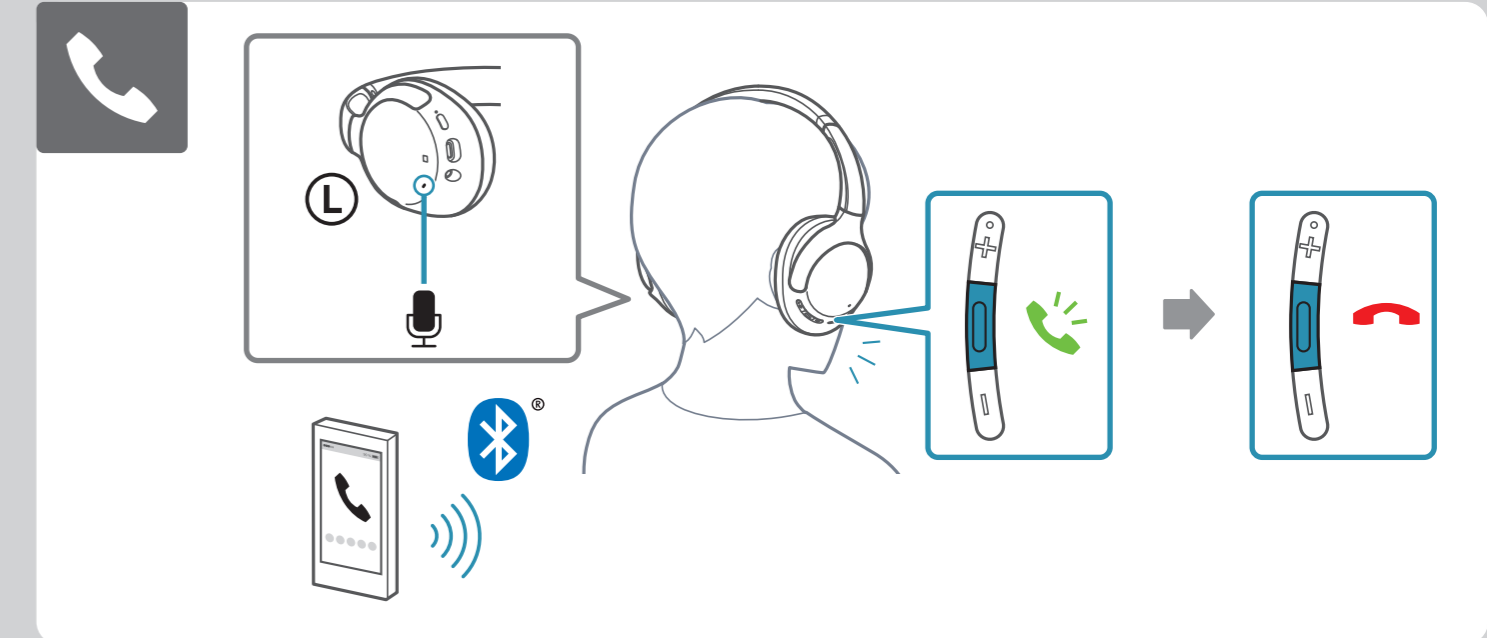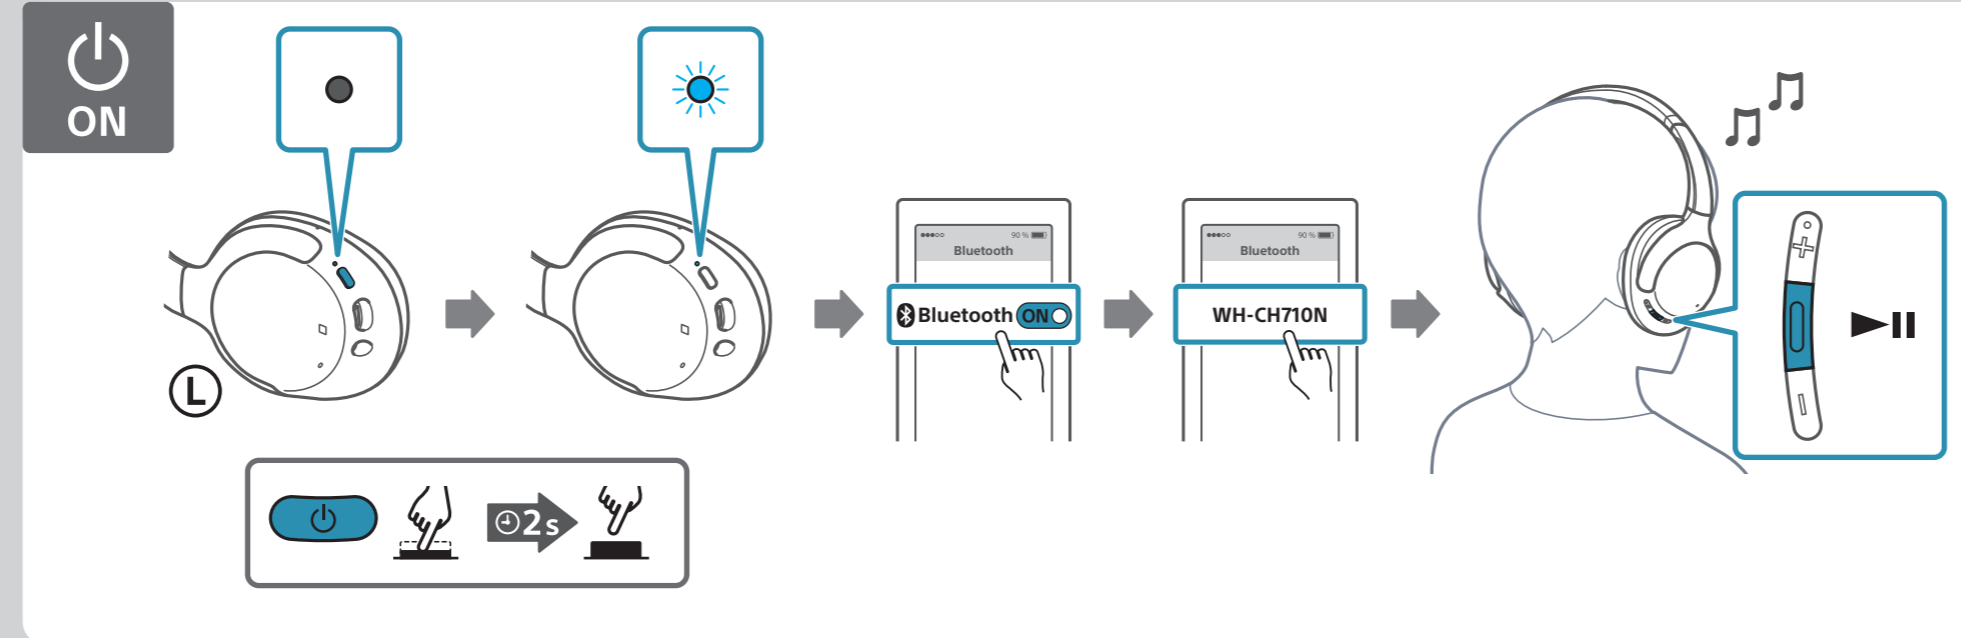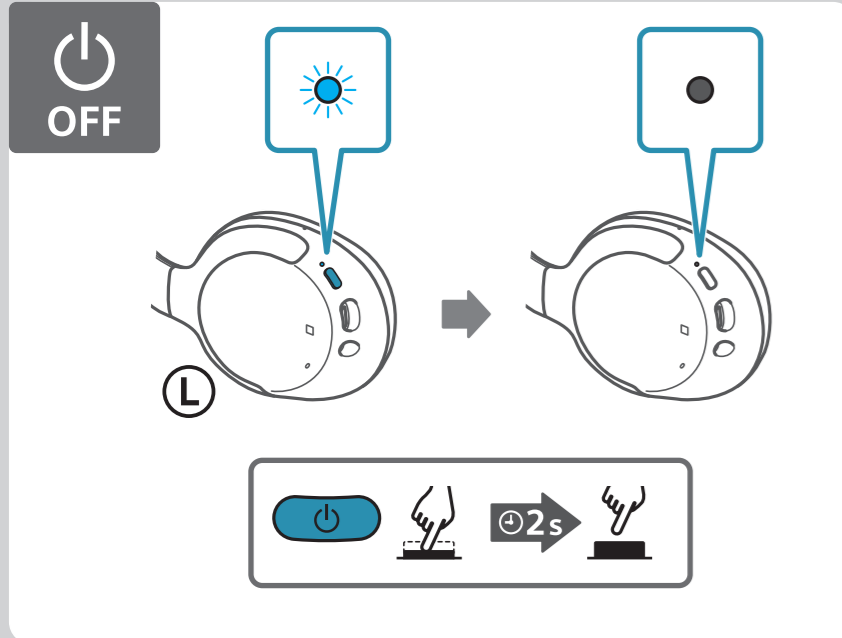

?

https://rd1.sony.net/help/mdr/whch710n/h_zz/

- Veebijuhend (spikker)
- Interneto vadovas (pagalbos vadovas)
- Tiešsaistes rokasgrāmata (palīdzības norādījumi)
- Mrežni prieručnik (Vodič za pomoć)
- Onlajn prieručnik (Vodič za pomoć)

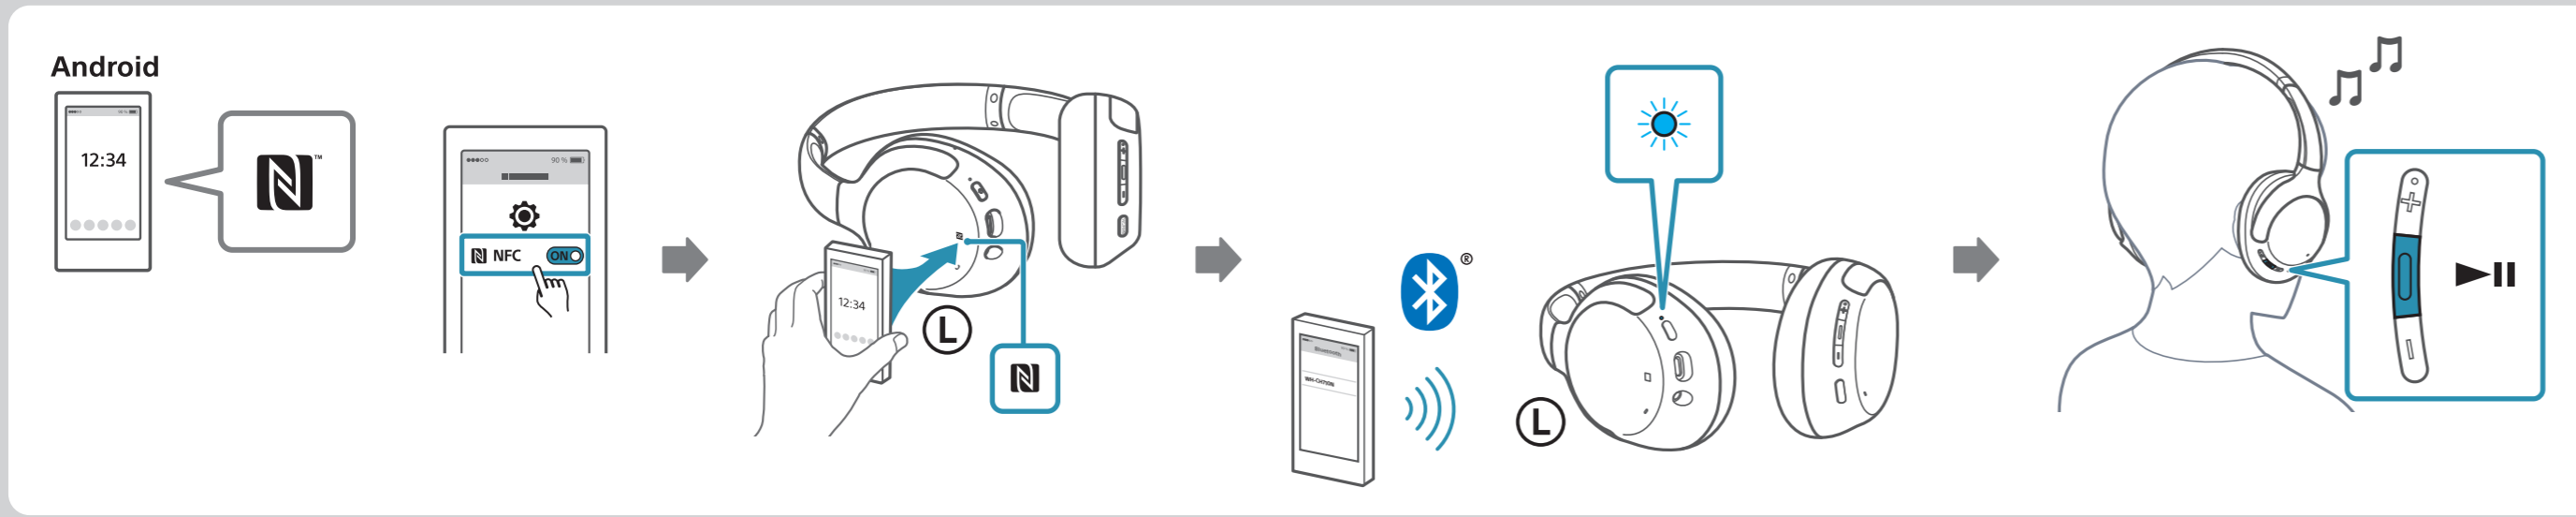

- Āpetusvideo
- Keskkonnehelide juhtimine
- Mokomasis vaizdo jrašas
- Aplinkos garso valdymas
- Norādījumu video
- Apkārtejas skaņas kontrole
- Video upute
- Način rada za zvukove iz okruženja
- Video sa uputstvima
- Kontrola ambijentalnog zvuka