

SONY®

# Important information

©2014

Note! Read this information before using your device.

## Taking care of and using your device

### Warning

Risk of fire, electric shock, bodily injury or property damage may result if these instructions are not followed. Please read below information before using your device.

- Avoid liquids entering the USB port. Do not use your device outside or in wet areas or near a sink or a bathtub. Do not touch the device with wet hands.
- Avoid metallic objects or external agents like dust entering the USB port. Clean out the ports before using your device if metallic objects or external agents enter the ports.
- Do not apply strong force, heavy shock to your device and cable. Do not use the damaged device.
- Do not sleep with the device on your person or in your bed. Do not place the device under a blanket, pillow, or under your body as this may cause the device to overheat.
- Do not attempt to alter or modify the USB cable or the device.
- Do not force the plug if it does not fit into a power outlet as this may result in electric shock.
- Remove the charger from the outlet by holding on to the adapter rather than the USB cable. Doing so reduces the risk of damage to the cable.
- Use of charging devices that are not Sony-branded may pose increased safety risks.
- Keep away from infants. Not to be used by small children. Parents should ensure that older children understand how to handle the device properly in accordance with these instructions.
- Lightning strikes are known to apply very high voltage and large current flows. Since there is a risk of electric shocks, do not touch antenna cables or power plugs once thunder begins to sound. When lightning strikes are predicted, disconnect the charger from the outlet.

### Note

- The operating temperature of the device is between +5°C(+41°F) and +35°C(+95°F).

## Disposal of old electrical & electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring that this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health, which could be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



## Limited warranty

Subject to the conditions of this limited warranty, Sony or its relevant local affiliates warrants this device against defects in design, material and workmanship at the time of its original purchase by a consumer and for 1 year thereafter. Contact an authorised Sony service partner to get further information.

## What we will do

If, during the warranty period, this device fails to operate under normal use and service, due to defects in materials or workmanship, authorized Sony distributors or service partners will, at their discretion, either repair or replace the device in accordance with the conditions stipulated herein.

## Conditions

- 1 The warranty is valid only if the original receipt issued to the original purchaser by the authorised dealer, specifying the date of purchase and serial number, is presented with the device to be repaired or replaced.
  - **For customers in the United States**  
Sony is not responsible for any labor or parts costs you incur relating to repairs or service from providers/services other than from an authorised Sony service partner.
  - **For customers in other countries and regions**  
Tampering with any of the seals on the device will void the warranty.
- 2 If Sony repairs or replaces the device, the repaired or replaced device shall be warranted for the remaining time of the original warranty period or for ninety days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
- 3 This warranty does not cover any damage, malfunctions and/or failures of the device due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with instructions for use and maintenance of the device. Nor does this warranty cover any damage, malfunctions and/or failures of the device due to accident, modification or adjustment, acts of God or damage resulting from liquid outside of the approved levels.
- 4 There are no express warranties, where written or oral, other than this limited warranty. All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty. In no event shall Sony or its vendors be liable for incidental or consequential damages of any nature whatsoever, including but not limited to lost profits or commercial loss, to the full extent those damages can be disclaimed by law. Some countries/regions do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.