

SONY®

Important information

©2015

Sony Consumer Web site

At www.sonymobile.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of Contact Centers.
- An extensive network of Sony service partners.
- A warranty period. Learn more about the warranty conditions in the *Limited Warranty* section.

At www.sonymobile.com/support or www.sonymobile.com/contact, you can find the latest support tools and information. For operator-specific services and features, please contact your network operator.

You can also contact our Contact Centers or contact your local dealer. (Calls are charged according to national rates, including local taxes, unless it is a toll-free number.)

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. To make a claim under the limited warranty, proof of purchase is required.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May explode if disposed of in fire.
- Do not use in environments where relevant IP rating limitations, if applicable, are exceeded (including excess depths and/or pressures of liquid and/or dust) or expose to excess humidity.
- For optimum performance, the product should not be operated in temperatures below $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ or above $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Do not expose the battery to temperatures above $+60^{\circ}\text{C}(+140^{\circ}\text{F})$.
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend the product.



- Do not paint or attempt to disassemble or modify the product. Only Sony authorised personnel should perform service.
- Consult with authorised medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use a Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.
- Avoid contact against your skin for longer periods. The heat generated when your device is transmitting can irritate your skin. It is recommended to use a headset for long phone calls.



Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile devices or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.



Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony branded may pose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5°C(+41°F) and +45°C(+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony service partners should remove or replace built-in batteries. Use of batteries that are not Sony branded may pose increased

safety risks. Replace the battery only with another Sony battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile devices / devices with radio transmitters may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm(6 inches) between the Sony product and the medical device. Use the Sony device at your right ear, when applicable. Do not carry the device in your breast pocket. Turn off the device if you suspect interference. For use in proximity to personal medical devices, please consult a physician and the device manufacturer.

Driving

In some cases, vehicle manufacturers may forbid the use of mobile devices in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that a mobile device or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon Sony Mobile devices for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or mobile device features are used. Please note that some Sony devices are not capable of supporting voice calls, including emergency calls.

Antenna

Use of antenna devices not marketed by Sony could damage the mobile device, reduce performance, and produce Specific Absorption Rate (SAR) levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the mobile device or Bluetooth handsfree functionality is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile device. The SAR value is determined at the highest certified

power level in laboratory conditions, but because the device is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the device is placed at the ear and when worn on the body. For body-worn operation, the device has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the device or when properly used with an appropriate Sony accessory and worn on the body. When operating with "Hotspot" functionality engaged, a separation distance of 10 mm was used.

For more information about SAR and radio frequency exposure, go to: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

Flight mode

Bluetooth and Wireless Local Area Network (WLAN) functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorisation before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm device. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, Sony does not warrant or represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile device from known, reliable sources.

Accessories

Use only Sony branded original accessories and certified service partners. Sony does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

You can use your TTY terminal with your Sony Mobile device. For information on accessibility features and solutions for persons with special needs, please visit blogs.sonymobile.com/about-us/sustainability/accessibility or contact Sony Mobile at 1-866-766-9374.

Disposal of Old Electrical and Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the device or on its packaging indicates that this device shall not be treated as household waste. Instead it shall be handed over to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this device is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this device. The recycling of materials will help to conserve

natural resources. For more detailed information about recycling of this device, please contact your local Civic office, your household waste disposal service, or the shop where you purchased the device.

Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or Sony contact center.

SIM card

If your device is equipped with a standard-sized SIM card slot, inserting an incompatible SIM card (for example, a micro SIM card, a micro SIM card with a non-Sony adapter, or a standard SIM card cut into a micro SIM card size) in the SIM card slot may damage your SIM card or your device permanently. Sony does not warrant and will not be responsible for any damage caused by use of incompatible or modified SIM cards.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.

- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the memory of the device does not ensure that it cannot be recovered. Sony does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

For Devices Supporting 3D Viewing capabilities

In viewing 3D images shot with this device, if applicable, on a 3D-compatible monitor, you may experience discomfort in the form of eye strain, fatigue, or nausea. To prevent these symptoms, we recommend that you take regular breaks. However, you need to determine for yourself the length and frequency of breaks you require, as they vary according to the individual. If you experience any type of discomfort, stop viewing the 3D images until you feel better, and consult a physician as necessary. Also refer to the operating instructions supplied with the device or software you have connected or are using with this device. Note that a child's eyesight is still at the development stage (particularly children below the age of 6). Consult a pediatrician or ophthalmologist before letting your child view 3D images, and make sure he/she observes the above precautions when viewing such images.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End user licence agreement

Software delivered with this device and its media is owned by Sony Mobile Communications Inc., and/or its affiliated companies and its suppliers and licensors.

Sony grants you a non-exclusive limited licence to use the software solely in conjunction with the device on which it is installed or delivered. Ownership of the software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the software, reproduce and distribute the software, or modify the software. You are entitled to transfer rights and obligations to the software to a third party, solely together with the device with which you received the software, provided the third party agrees in writing to be bound by the terms of this Licence.

This licence exists throughout the useful life of this device. It can be terminated by transferring your rights to the device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the licence immediately.

Sony and its third party suppliers and licensors retain all rights, title and interest in and to the software. To the extent that the software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This licence is governed by the laws of Japan. When applicable, the foregoing applies to statutory consumer rights.

In the event software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the software.

Export regulations

Export regulations: The device or software may be subject to import and export regulations of the European Union, the United States and other countries. You will comply with these applicable laws and regulations and will obtain and maintain any export and import license required for the delivery of goods to you under this Agreement. Without limiting the foregoing, and as an example, you will not knowingly export or re-export goods to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 428/2009 and specifically, and without limitation, you will also comply with U.S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) administered by Department of Commerce, Bureau of Industry and Security and economic sanctions regulations (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) administered by the U.S. Department of Treasury, Office of Foreign Assets Control.

Limited Warranty

Sony Mobile Communications AB, SE-221 88 Lund, Sweden, or its local affiliated company, provides this Limited Warranty for your mobile device, original accessory delivered with your mobile device, and/or your mobile computing product (hereinafter referred to as "Product"). Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Contact Center (national rates may apply) or visit www.sonymobile.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair, replace or refund the purchase price of the Product in accordance with the terms and conditions stipulated herein.

Sony and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Product is repaired or replaced. At present, Sony may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Product such as downloads, calendar and contacts before handing in your Sony Product for repair or replacement.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse

warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.

2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.
 - Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).
 - Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.

Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product.

Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. If you purchased your product in Australia, you are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For warranty service in Australia, please contact 1300 650 050 or Sony Service Centre, Unit 4 / 189 Woodville Road Willawood NSW 2163.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Trademarks, acknowledgements and copyright

©2015 Sony Mobile Communications Inc. and its affiliated entities. All rights reserved.

Xperia is a trademark or registered trademark of Sony Mobile Communications Inc.

Sony is a trademark or a registered trademark of Sony Corporation.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony is under license.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners.

Any rights not expressly granted herein are reserved. Visit www.sonymobile.com for more information.

www.sonymobile.com

SONY®

Sony Mobile Communications Inc.
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan

1222-9266.11

SONY®

Mahimmin bayani

Mahimmin bayani

Mahimmin bayani

©2015

Mai amfani da gidan yanar sadarwa na Sony

A www.sonymobile.com/support akwai yankin goyan baya inda taimako da tukwici suke a kadawa gaba kafan kawai. Anan zaka sami sabon daukaka software na kwamfuta da tikwici akan yadda zaka yi amfani da abin sana'arka da nagarta sosai.

Aiki da tallafi

Kana da dama zuwa ga ayyanannun fifikon aiki kamar:

- Shafukan intanet na Duniyar dana gida suna bada tallafi.
- Cibiyoyin Matuntuba na hanyar sadarwa ta duniya.
- Wata faffadar hanyar sadarwar abokan hadin guiwa na Sony.
- Tsawon lokacin garanti. A sami karin bayani game da ka'idojin garanti a cikin *Takaitaccen garanti* sashe.

A www.sonymobile.com/support ko www.sonymobile.com/contact, Za ka iya samun kayan aikin tallafi na zamani da bayani. Don kebantattun aiyuka da siffodin mai sarrafawa, tuntubi mai sarrafa hanyar sadarwarka.

Haka nan kana iya tuntubar Cibiyar Tuntubarmu ko ka tuntubi dilanka na gida. (Ana cajin kudin kira daidai da cajin kasa, da suka hada da haraji na gida, sai dai idan lambar kira-kyauta ce.)

Idan hajarka na bukatar aiki, tuntubi dilan da aka saya daga wajensa, ko kuma daya daga abokan hadin guiwar aiyukanmu. Idan za a nemi wani abu a karkashin takaitaccen garanti, ana neman shaidar saye.





Jagorori don aminci da ingantaccen amfani

Ka bi waƙannan bayanai. Gaza yin haka zai iya zama haɗari ga aikin samfurinka ko cutar da lafiyar ka. Idan kana kokanto akan ingancin aikin shi, bar wani gamsashshen abokin sabis yaduba samfurin kafin caji ko amfani dashi.



Shawarwari na kula da kuma amfani mai lafiya na kayanmu

- Rike da hankali kuma ajiye a wani tsabtataccen wuri mara-kura.
- **Gargafil** Zai iya fasa idan aka zub da cikin wuta.

- Kada a yi amfani da shi a cikin muhallai inda an wuce muhimman takaitawar kimantan IP, idan ya sanya, (haɗe da yawan zurfi da kuma/ko karfin ruwa da kuma ko kura) ko bayyana a yawan laima.
- Don daukakakken aiki, bai kamata a sarrafa kayan a cikin yanayi kasa da $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ ko sama da $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Kada a tona batiri zuwa yanayi sama da $+60^{\circ}\text{C}(+140^{\circ}\text{F})$. 
- Kada a tona zuwa harsunan wuta ko kunna kayayyakin taba. 
- Kada a yar da, jefa ko yi kokarin murgude kayan. 
- Kana a yi fenti ko yi kokarin harhada ko gyaggyara kayan. Ya kamata kawai ma'aikata masu izini na Sony suke yi aikin. 
- Tuntubi ma'aikatan lafiya masu izini da kuma umurnun kamfanin kira na na'urar lafiya kafin ka yi amfani da kaya kusa da na'urorin kara kuzarin zuciya da sauran na'urori ko kayan aiki na lafiya.
- Ka bar amfani da na'urorin na'ura, ko nakasa aikin watsar da bayanin rediyo na na'urar, inda ake bukata ko inda aka roka a yi haka.
- Kada a yi amfani da ita a inda mai yiwuwa yanayin fasawa ya kasance.
- Kada a saka kayan, ko girka kayan aiki mara waya, a cikin wuri a saman da jakar iska a cikin mota.
- **Tsanaki:** Tsagaggen ko karyayyen nuna suna iya kirkira gaffa masu kaifi ko sarsa da suka iya cutar da a hulɗa.
- Kada a yi amfani da Mazirorin kunne na Bluetooth a wurare inda bai face ba ko za su gana wa karfi.
- Kauce hulɗa da fatarka don dogon tsawon lokaci. Zafin da ake fito da a lokacin da na'urarka take watsar da bayani yana iya sa fatarka ta ji kaikayi. Ana shawarta ka yi amfani da mazirorin kunne don dogon kiraye-kirayen waya.

Yara

Gargadi! A ajiye a wurin da yara ba za su taba ba. Kar a bar yara su yi wasa da na'ura ko kayayyakin aiki. Za su iya cutar da kansu ko



wasu. Akwai kananan bangarori a jikin kayan da za a iya cire su daga jiki, su kuma haifar da illa.

Mai bada wuta(caji)

Hadfa caji zuwa mafarin wuta kamar yadda akayi alama akan samfurin. Kada kayi amfani a waje ko a wurare masu laima. Kada ka canja ko biyar da katin zuwa lalacewa ko karfi. Cire sashin kafin share shi. Kar ataba canza filogi. Idan filogi baidace da gurbi ba, sami gurbi mai dacewa da aka sauke ta masanin lantarki. Lokacin da aka hadfa bada wuta akwai karamar magudanar wuta. Don kaucewa karamin barnar makamashi, cire hadin kawo wuta lokacin da samfurin ya cika da caji. Yin amfani da na'urorin caji marasa alamar Sony na iya haifar da karancin aminci.

Baturi

Sabbin batura ko marasa inganci zasu iya samun gajere kuma ragaggen iko. Yi cikakken cajin baturin kafin farkon fara amfani. Yi amfani da shi don abinda akayi nufi kawai. Canja baturin a yanayin zafi tsakanin $+5^{\circ}\text{C}(+41^{\circ}\text{F})$ da $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Kada ka sanya baturi a cikin bakinka. Kada kabar karfen da yahaɗu da baturi ya taɓa wani karfe. Kashe wayarka ta hannu kafin cire baturi. Aiki yana dogara ne akan yanayin zafi/sanyi, karfin sigina, samfuran amfani, alamu da aka zaɓa da murya ko watsa bayanai. Abokan sabis na Sony kawai zasu cire ko musanya ginannun baturan ciki. Yin amfani da na'urorin caji marasa alamar Sony mai yiwuwa su haifar da karin hadarin aminci. Musanya baturin kawai da wani baturin Sony wanda ya dace da a daidaiton IEEE-1725. Amfani da baturin da bai dace ba na iya haifar da gobara, bashewa, yoyo ko wani hadari.

Kayayyakin Maganin

Na'urar hannu / na'urar da take tura sakonnin radiya kan illata kayayyakin magani da aka dasa a jiki. Za a iya rage hadarin kawo tarnaki ta bayar da tazarar 15 cm(inci 6) tsakanin kayayyakin Sony da injinan magani. A yi amfani da na'urorin Sony a kunnen dama idan da dammar yin hakan. Kada a sa na'urar a aljihun gaba. Idan kana zaton kawo tarnaki, to a kasha na'urar. Don amfani da na'ura a kusa da injinan magani a tuntubi likita da kuma kamfanin kera na'ura.

Tuki

A wasu lokutan masu kera ababan hawa kan hana amfani da wayoyin hannu a abin hawa, sai idan an yi amfani da na'urar amsa waya a fili da kuma eriyar waje da take tallafawa kayan. Ka tuntubi masu kera abin hawa'nka ka tabbatar amfani da na'urar tafi da gidanka ko na'urar amsa waya a fili ta Bluetooth ba za su taɓa kayan wutar abin hawa ba. Dole ne a

maida hankali yayin tuki a ko da yausha, sannan a bi dokokin amfani da na'urorin tafi da gidanka yayin tuki.

GPS/Kafaffun ayyukan wurare

Wasu samfura suna bada GPS/Kafaffun ayyukan wurare. An kawo aikin kuduri na wuri "Azaman shine" kuma "Tareda duk aibu". Sony baya yin kowane wakilci ko garanti ga daidaiton wannan bayanin wurin.

Amfanin kafaffen bayanin wuri ta na'ura bazai katse ko zama mara kuskure ba kuma yana iya zama mai dogaro da samuwar sabis na cibiyar sadarwa. Kula cewa aiki mai yiwuwa ya ragu ko yazama ankare shi a wasu yanayin wurare kaman cikin gini ko wirare masu gami da gine-gine.

Tsanaki: Kada ayi amfani da ayyukan GPS cikin hanya wacce ke haifar da fashewa daga tuki.

Kiraye-kirayen gaggawa

Ba za a iya yin garantin kira ba a kowanne yanayi. Kar ka dogara kawai a kan na'urorin kamfanin Sony Mobile don sadarwa. Ba lallai ne kira ya yiwu a ko'ina ba ko a kowanne network ko kuma idan ana amfani da wasu ayyukan network ko kuma an kunna wasu ayyukan na'ura. A kula wasu na'urorin kamfanin Sony bas a yin kiran murya ko da kuwa kiran gaggawa.

Eriya

Amfani da eriyar da ba kamfanin Sony ne yake sayar da ita ba zai iya lalata na'ura ko ya rage karfin amfani, ya kuma daga darajar amfani ta musamman (SAR) fiye da kima. Kada ka rufe eriya da hannunka, domin hakan zai taba kyayun kira da darajar wuta, sannan kuma zai takaita kira da lokutan jira.

Bayyana Mitar Radiyo (RF) da kuma takamaimiyar kimar sha (SAR)

Idan aka kunna na'urar hannu ko kuma Bluetooth din amsa waya,yana rage karfin Mitar Radiyo. An shirya dokokin kare kai na duniya ta hanyar binciken kimiyya a kai-a kai da tantance bayanai. Wadannan dokoki sun ba da izinin bayyana Mitar radiyo. Wadannan dokokin sun kunshi iyaka mara hadari da aka tsara don a tabbatar da lafiyar kowa a kuma tabbatar da duk wani bambaci a ma'aunin.

Ana amfani da takamaimiyar kimar sha (SAR) don auna mitar rediyon da jiki ya dauka ya yin amfani da na'urar hannu. Ana tantance kimar SAR ne da manyan ijina a dakin gwaji, amma saboda an tsara na'urar ta yi amfani da lantarki ma fi kankanta ta sami netwok din da aka zaba, darajar SAR za ta iya zama kasa da wannan daraja. Babu wani tabbacin bambancin lafiya dangane da bambancin darajar SAR.

Kayayyakin da suke aika sakon rediyo dole ne su sami tabbaci daga Hukumar Sadarwa ta Kasa (FCC) kafin a sayar dasu a Amurika. Idan ana bukata, ana yin gwajin ne yayin da aka sa na'urar a kunne ko aka daura a jiki. Don gwajin-daurawa a jiki, ana gwada na'urar ne idan ta yi tsawon a kalla 15 mm daga jiki ba tare da wani karfe a tsakani ba ko kuma yayin da aka yi amfani da na'urar Sony yadda ta dace a ka kuma daura a jiki. Yayin amfani da dandali ayyuka suna kamawa, ana amfani da nisan 10 mm was.

Don Karin bayani game da SAR da kuma bayyana Mitar rediyo, a ziyarci: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

Yanayin kaura

Aikin Bluetooth da Intanet Mara waya (WLAN), idan akwai su a na'ura, za a iya kunna su a yanayin jirgin sama, amma za a iya hana amfani da su a cikin jirgin ko a wasu wuraren da aka hana aika sakon radiya. A irin wadannan wurare a tabbatar an nemi izi kafin a kunna aikin Bluetooth ko Intanet mara waya WLAN ko da kuwa a yanayin jirgin sama.

Malware

Malware (takaitawa ne na 'malicious software') wani shiri ne da zai iya cutar da na'ura. Malware ko shirye-shirye masu cutarwa sun hadar da 'viruses' da 'worms' da 'spyware' and da sauran shirye-shiryen dab a a bukata. Duk da cewa na'ura na daukar matakan kare kai, kamfanin Sony Mobile bay a garantin cewa na'urar za ta sami cikakkiyar kariya daga kutsen malware. Duk da haka, za a iya rage hadarin farmakin 'malware' ta hanyar lura yayin sauke bayanai ko amsar shirye-shirye, da gujewa bude sakonnin da ba a san daga inda suke ba, da yin amfani da amintattun masu bad a sabis din intanet, sannan kuma da sauke bayanai zuwa na'ura da wuraren da aka amince da su.

Na'urorin hadi

Yi amfani kawai da Sony mai alamar na'urori na asali da gamsashshen abokan sabis. Sony baya gwada na'urorin gadi na bangare na uku. Na'urorin hadi na iya yiwa suya fitar RF tasiri, aikin rediyo, karar murya, amincin lantarki da wasu wurare. Na'urorin hadi na mutun na uku da bangarori mai yiwuwa ya haifar da hadari zuwa lafiyarka ko aminci ko rage aiki.

Amsoshin Samun Iso ga/Bukatu na Musamman

Kana iya yi amfani da tashar TTY tare da na'urar Sony Mobile dinka. Domin bayani a kan fuskoki da amsoshi na samun iso ga don mutane da suke da bukatu na musamman, a ziyarci blogs.sonymobile.com/about-us/sustainability/accessibility ko tuntubi Sony Mobile a 1-866-766-9374.

Zubarwa da Tsohon Kayan aiki na Lantarki da kuma Na'ura (Mai sanyawa a cikin Tarayyar Turai da sauran kasashen Turai da suke da sistem tarawa dabam-dabam)



Wannan alama a kan na'urar ko a kan fakitinta tana nuna cewa bai kamata a gana wa wannan na'ura kamar sharan gida ba. A maimako a mika wa wurin tarawa da ya dace don sake juyawa na kayan aiki na lantarki da kuma na'ura.

Ta tabbatarwa an zubar da wannan na'ura daidai, za ka taimaka hana sanadiyya mara kyau a gaba ga muhalli da lafiyar ɗan Adam, wanda yake taso in ba haka ba ta hanyar kulawa da shara da ba ta dace na wannan na'ura. Sake juyawa na kayayyaki zai taimaka tanadi albarkatun kasa. Don karin cikakken bayani game da sake juyawa na wannan na'ura, don allah tuntubi ofis na Civic na gida, sabis na zubarwa da shara na gida ɗinka, ko shago inda ka sayi na'urar.

Kati mai kwakwalwa

Idan na'ura ta zo a hade da memori kad, to memori kad din zai dace da ita, amma fa ba lallai ba ne ya dace da sauran na'urori ba ko ya yi aiki da su. Ka duba sauran na'urori domin dacewa kafin saye ko amfani.yi na' Idan an yi na'ura da gidan memori kad, to a duba dacewar memori kad da na'urar kafin saye ko amfani da shi.

Galibi ana tsara memori kad kafin a sayar da su. Don sake tsara memori kad a yi amfani da na'urar da ta dace. Kada a yi amfani da daidaitaccen injin tsara memori kad na kwamfuta don tsara memori kad. Domin cikakken bayani, a duba takardar amfani da na'ura ko cibiyar tuntuba ta Kamfanin Sony Mobile.

katin SIM

Idan na'ura ta zo da daidaitaccen ramin SIM kad, sanya SIM kad din da bai dace ba (misali karamin SIM kad ko karamin SIM kad da majonin da ba na Kamfanin Sony ba, ko daidaitaccen SIM kad din da aka yanke shi ya koma karamin SIM kad) a ramin SIM kad na iya lalata SIM kad din ko kuma na'urar har abada. Kamfanin Sony bay a garntin amfani da SIM kad din da bai dace ba ko daukar naiyin barnar da yin hakan ya jawo.

Gargadi

Idan na'urar na bukatar adafta don sakawa cikin na'urar kai ko wata na'ura, kada a saka katin kai tsaye batara da adaftar da ake bukata ba.

Kariya kan amfanin katin kwakwalwa

- Kada a bijirar da katin kwakwalwar ajiya ga laima.

- Kada a taba tashar hadi da hannunka ko da wani abun karfe.
- Kada a goge, lankwasa, ko jifa da katin kwakwalwar ajiya.
- Kada ayi yunkurin babbballa ko gyaggyara katin kwakwalwar ajiya.
- Kada ayi amfani da ko ajiye katin kwakwalwar ajiya a wurare masu laima ko lalatattu ko cikin matsanancin zafi kamar rufaffiyar mota laokacin rani, cikin hasken rana kai tsaye ko kusa da hita, dasauransu.
- Kada a latsa ko lankwasa karshen adaftan katin kwakwalwar ajiya da matsanancin karfi.
- Kada a bar datti, kura, ko bakin abubuwa su shiga cikin zangon kowane adaftan katin kwakwalwar ajiya.
- Bincika ka saka katin kwakwalwar ajiya daidai.
- Saka katin kwakwalwar ajiya har iyakacin yadda ake bukata ya shiga cikin kowane adaftan katin kwakwalwar ajiya. Katin kwakwalwar ajiya bazai yi aiki ba harsai an saka shi gaba daya.
- Mun bada shawara cewa kayi kwafin ajiyar mahimman bayanai. Baza mu dauki alhakin kowacce asara ko lalacewar abun cikin daka ajiye a katin kwakwalwar ajiya ba.
- Zai yuwa bayanai da aka yi rikodi su lalace ko su face lokacin daka cire katin kwakwalwar ajiya ko adaftan katin kwakwalwar ajiya, kashae wuta yayin tsarawa, karantawa ko rubuta bayanai, ko amfani da katin kwakwalwar ajiya a wurare masu tabbataccen lantarki ko madaukakin filin watsa wutar lantarki.

Kare bayanan sirri

A goge bayanan sirri kafin rabuwa da na'ura. Don goge bayanai, a sake saiti zuwa na ainahi. Goge bayanai daga memorin na'urarka ba tabbaci ba ne na ba za a iya dawo das u ba. Kamfanin Sony Mobile bay a garanti a kan dawo da bayanai kuma baya daukar nauyin bayyana wani bayani ko da bayan sake saiti na ainahi.

Na na'urori da za a iya bada goyon bayan dubawa 3D

A yayin duba hotunan 3D wadanda aka dauka da wannan na'ura, idan tana yi, a kan allo da yake nuna 3D, za a iya samun rashin jin dadi a di cikin

idanu ko kuma gajiya, ko kumallo. Domin hana waɗannan alamomi, mun shawara ka tsaya a kai a kai. Amma, ana bukata ka yi shawarar kanka tsayin da lokacin tsayawa da ka bukata, saboda waɗannan dangane da kowani mutum. Idan ka sha wani irin rashin jin daɗi, dakata dubawan hotunan 3D har sai lokaci da ka jin daɗin jikinka, da tuntubi likita idan wajibi ne. Kuma ka duba takardar amfani da na'ura ko shirin na'urar da aka haɗa ko da ko ake amfani tare da wannan na'ura. Kula da idon yaro/yarinya na ya karuwa (musamman yara karkashin shekaru 6). Tuntubi likitan yara ko likitan ido kafin ka bada izinin yaronka/yarinyanka ya duba hotunan 3D, kuma ka tabbatar da shi/ta kiyaye da waɗannan rigakafi idan ana duba waɗannan hotuna.

Gargadi da babbar muryal

Guji matakan kara waɗanda zasu iya cutar da jinka.

Yarjejeniyar lasisi na masu amfani

Sofwaya da aka isar da tare da wannan na'ura da midiyansa na Sony Mobile Communications Inc., da kuma/ko madangantan kamfanoni da masu samarwa da masu lasisi ɗinsu.

Sony yana samar maka da wani iyakaccen lasisi mara-kebabbe don yi amfani da sofwaya kawai tare da na'urar da aka girka ko isar da shi zuwa. Ba a sai da, gusar da ko in ba haka ba mika mallakawar sofwaya.

Kar a yi amfani da kowaɗanne hanyoyi don gane sirrin tushe ko kowace kunshiyar sofwaya ɗin, haifar da kuma rarraba sofwaya ɗin, ko gyara sofwaya ɗin. Kana da damar gusar da hakkoki da wajibai na sofwaya zuwa ga wasu, kawai tare da na'urar wadda ka karɓi sofwaya ɗin da, muddin wasu ɗin sun yarda a rubucce a ɗaure su da sharuɗɗa na wannan Lasisi.

Wannan lasisi yana kasance a duk rayuwa mai amfani na wannan na'ura. Ana iya tsayar da gusarwa da hakkokinka na na'urar ga wasu a rubucce.

Gazawa da bi wani daga waɗannan sharuɗɗa da halaye zai tsayar da lasisin nan take.

Sony da wasu masu samarwa da masu lasisi ɗinsu sun rike duk hakkoki, batu da harka a cikin da kuma zuwa ga sofwaya ɗin. Har iyakancin sofwaya ɗin ya kunshi kaya ko sirri na wasu, iri wannan wasu ɗin za su zama masu amfana da waɗannan sharuɗɗa.

Ana sarrafa wannan lasisi ta wajen dokokin Japan. A inda ya shafa, waɗannan sun shafi hakkokin mai amfani na doka.

Idan an samar da sofwaya dake bi ko da aka samar da tare da na'urarka da karin sharuɗɗa da halaye, iri wannan guzuri zai sarrafa dukiyarka da amfani da sofwaya ɗin.

Dokokin aikawa kasashen waje:

Dokokin aikawa kasashen waje: Na'ura ko ko shirin na'ura na iya dogara ga dokokin shigowa ko fitar da kayayyaki na Turai ko Amurika ko wasu kasashe. Dole ne a bi wadannan sharadai da dokoki, a kuma sami duk wani lasisin da ake bukata na shigowa ko fitar da kaya, don kawo maka wani kaya a karkashin wannan yarjejeniya. Ba tare da togaciya ba, ga misali ba za ka fitar da kaya zuwa wuraren da aka bayyana su daga daftarin babi na II na Hukumar Turai (EC)428/2009 kana sane ba, sannan kuma musamman ba tare da togaciya ba za a bi dokokin fitar da kaya na Gwamnatin Amurika " ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) wanda sashen kasuwanci na Hukumar Masana'antu da tsaro ke kula da su; da kuma ka'idoji da sharuɗɗan tattalin arziki (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) wadanda ake kula da su a Sashen Baitulmal na Amurka, ofishin kaddarorin waje.

Takaitaccen garanti

Kamfanin Sony Mobile AB, SE-221 88 Lund, Sweden, ko kanan kamfanin da suke karkashinsa suna bayar da wannan garanti ga na'urorinsu na hannu da kayayyakin amfani na ainahi wadannada na'urorinku suka zo da su da kuma kayayyakin lissafi na hannu (nan gaba za mu rika kiran su da "kayayyaki"). Idan kaya na bukatar aikin garanti, to a mayar da shi wajen dillalin da aka siya ko cibiyar kamfanin Sony Mobile da ke kusa (national rates may apply) ko a ziyarci shafin www.sonymobile.com don samin Karinbayani.

Garanti namu

Bugu da kari ga halayen wannan garanti mai iyaka, Sony yayi garantin wannan samfur don zama mai ingancin kira, kayan aiki da ma aikacin sana'a a asalin lokacin da dankasuwa ya saya. Wannan garanti mai iyaka zai dauki tsawon shekara (1) daya kamar daga asalin kwanan watan sayan abin sana'a.

Abin da za mu yi

Idan wannan kaya ya ki yin aiki a yayin amfani da shi ko gyara ta hanyar da ta dace, a cikin lokacin da aka bayar na garanti, saboda illa wajen kira ko kayan da hada su aikin ma'aikaci, to dillalin da Kamfanin Sony ya amince das hi a garin da aka sayi kaya yana da zabin – ko dai ya sauya maka sabo ko kuma ya gyara maka ko kuma ya mayar maka da kudinka a bias dokoki da sharadan da aka shimfida a nan.

Kamfanin Sony ko abokan huldarsa na da dammar cazar kudin gyara idan kayan da aka dawo da shi ba ya cikin garantin da aka bayar a bias yarjejeniyar da ke kasa.

A kiyaye cewa ana iya rasa wasu saitin da aka yi ko bayanan da aka sauke idan aka gyara kayan Sony ko aka sauya. A yanzu dai, amfani da wasu dokoki ko sharadai ko kariyar kimiyya na hana Kamfanin Sony yin kwafin ko-ta-kwana na wasu bayanan da aka sauke. Kamfanin Sony ba ya daukar alhakin kowanne irin bayanan da aka rasa, kuma ba zai biya wannan abu da aka rasa ba. Ya kamaya a rika yin kwafin ko-ta-kwana na dukkanin bayanan da aka adana ko aka sauke a cikin na'urar Sony ko kwanan wata ko lambobi, kafin a mika ta domin gyara ko Sauyawa.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.
 - Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).
 - Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.

Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product. Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Tambarun kamfani, godiya da hakkin mallaka

©2015 Sony Mobile Communications Inc. da madangantan kamfanoninsa An kebe dukan hakkoki.

Xperia wani tambari ko tambari da aka yi rajista ne na Sony Mobile Communications Inc.

Sony wani tambari ko tambari da aka yi rajista ne na Sony Corporation.

Bluetooth wani tambari ko tambari da aka yi rajista ne na Bluetooth SIG Inc. kuma kowane amfani da iri wannan maki wajen Sony an yi da lasisi ne.

Duk sunayen samfur da kamfani da aka ambata a nan tambaru ko tambaru da aka yi rajista na ainihin masu mallaka dinsu ne.

An kebe duk hakkoki da ba a bada izini takanas ba. Ziyarci www.sonymobile.com don karin bayani.

Ede Yorùbá

Aaye ayelujara Onibara Sony

Ni www.sonymobile.com/support ni apakan atilẹyin nibiti iranlọwọ ati awọn italo lobo sunmọ. Nibiyi wa ri awọn imudoju awọn software kọmputa titun ati itanilogo lori lilo oja rẹ diẹ ẹ sii daradara.

Iṣẹ àtí àtílẹ̀yìn

O ní ànfàní láti lo àpò ìkó ìwé sī fí kīi ìṣe ti gbogbo gbò:

- Ṣiṣe atilẹyin fun awọn ayelujar ti agbaye ati agbegbe.
- Awọn gbongan nẹtiwoḱi ikànsi ti agbaye kan.
- Nẹtiwoḱi ti o gbòrò ti awọn olùbàṣiṣe Sony.
- Akókò fi ilé isé leè ṣe àtúnṣe ohun èlò fi ó bàjé tàbí fi tuntun rọpò ní ọfẹ. Mọ síwájú síi nipa ipò àtúnṣe tàbí didá paḍa ohun èlò fún ilé iṣẹ *Odiwọn àkókò fi ilé isé leè ṣe àtúnṣe ohun èlò fi ó bàjé tàbí fi tuntun rọpò ní ọfẹ* lpin.

ní www.sonymobile.com/support tàbí www.sonymobile.com/contact, o le ri awọn irinṣe fun atilẹyin ati àlàyé ti o ṣeṣe jade. Fun oṣiṣe - awọn iṣe ati abúdá, jọwọ kan si oṣiṣe nẹtiwoḱi rẹ.

O si tun lee kan si awọn ẹka ikansi wa tabi ki o kan si oniṣowo ti agbegbe yin. (A gbe owó le ipè geḱeḱe iye owo ipe ni orile-ede, peḷu afikun awọn owó-orí ti agbegbe, àyàfi ti o ba jẹ nomba ọfẹ.)

Ti ó bá ṣeḱeḱe pé ohun èlò rẹ nílò àtúnṣe, jọwọ kàn sí oniṣòwò tí o ti ráá, tàbí ọkan lára àwọn aláàṣiṣe pé wa fún àtúnṣe. Lati gba eto labe idiwon atilehin, a nilo eri rira oja.





Awọn Itọsona fun Ailewu ati Lilo daradara

Jọwọ ṭe awọn itọsona wọnyi. Ti o ba kuna lati ṣe eyi o le fa aiṣeṣadara oja na tabi ewu ti o poju fun ilera. Ti o ba ṣeyemeji si iṣe didara, gbe oja rẹ lẹ fun ayewo nipese alabaṣiṣe ti afowọ si ṣaaju gbiba agbara tabi lilo rẹ.



Awọn Igbànyànjú fún Itọjú àtí lilo aláàbò àwọn ohun àgbéjádé

- Rọra diímú kí o sí tọjú rẹ sí ibi tó mó tí kò sí ní eruku.
- **Ikilọ!** Le bú gbàmù tí o bá sọ ọ sínú iná.

- Māṣe lóò nínú àyíká tó kojá àwọn òdíwọn igbéléwọn IP pàtàkì, tí ó bá nílò (pèlù àpòjù àwọn ijìnlẹ̀/tàbí iwọn olómi/tàbí eruku) tàbí ṣàfihàn sí àpòjù kùrukùru.
- Fún iṣesí tó dára jùlọ, a kò gbòdò lo àgbéjádé nàà ní iwọn oorú tí kò tó $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ tàbí kojá $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Māṣe ṣàfihàn bátiri nàà sí oorú tó kojá $+60^{\circ}\text{C}(+140^{\circ}\text{F})$. 
- Māṣe ṣàfihàn sí èéfín tàbí tan àwọn àgbéjádé tabà. 
- Māṣe sọ sílẹ̀, jùú tàbí gbìyànjú láti tẹ̀ àgbéjádé nàà. 
- Māṣe kùn ún tàbí gbìyànjú láti tú u tàbí ṣàtúnṣe àgbéjádé nàà. Akòṣẹ̀moṣẹ̀ Sony tí a fún láṣe nikan ló gbòdò ṣe àtúnṣe. 
- Kàn sí òṣìṣẹ̀ ilera tó ní àṣe àti àwọn itòni olùṣe ẹ̀rọ ilera kí o tó lo àgbéjádé nàà lẹ́gbẹ̀ẹ̀ àwọn ẹ̀rọ ilera mírán tàbí irinṣẹ̀.
- Māṣe lo àwọn ẹ̀rọ iná mọ, tàbí gbé iṣẹ̀ igbésórí aféfẹ̀ rédiò sípò àìṣélò lórí ẹ̀rọ nàà, níbití ó bá nílò tàbí ní láti ṣe bẹ̀ẹ̀.
- Māṣe lóò níbití ó ti ṣeéṣe láti bú gbàmù.
- Māṣe gbé àgbéjádé nàà, tàbí ṣàgbékalẹ̀ irinṣẹ̀ aláilowáyá, nínú agbègbè tó kojá àpò aféfẹ̀ nínú ọ̀kọ.
- **Ikilọ:** Àwọn àfihàn tó sán tàbí fọ̀ le ṣedá igun tó mú tàbí àfọ̀kù tóle ṣokùnfà ijàmbá ní ifowókàn.
- Māṣe lo Àgbékòrí Bluetooth ní àwọn ipò tó kò rọ̀rùn tàbí tí yóò wà lábẹ̀ idérùbà.
- Yàgò fún kikan awọ ara rẹ̀ fún igbà pípẹ̀. Ooru tí n jádé nígbàtò ẹ̀rọ rẹ̀ n ṣìṣẹ̀ le léwu fún awọ ara rẹ̀. A gbà ọ̀ níyànjú láti lo àgbékòrí kan fún ipẹ̀ igbà pípẹ̀.

Awon Omọ

Ikilọ! Mu pamọ kuro nibi ti ọwọ awon omode leto. Maṣe je ki awon omode fi ohun elo alagbeka tabi awon eroja ṣere. Won le ṣepalara fun ara won tabi elomiran. Awon Agbejade leni awon eya keekeke ti a le yo kuro ki o si fa ewu aillemi.



Gbigba agbara (Şaja)

So şaja poma si awon pataki agbara ti a daruko bi a ti samisi lori oja naa. Maa se lo awon gbagede tabi ni awon agbegbe oririn. Maa se pafo tabi te okun ba si bibaje tabi wahala. Yoo kuro saaju kio to so di mimo. Mase paaro puloggi lailai. Ti ko ba wo inu oju-isani, fi oju-isani to dara sori ero nipase oshise ina monamona to moye. Nigbati ipese agbara ti sopo sisan kuro kekere agbara yoo wa. Lati yago fun didanu agbara kekere, ge ipese agbara nigbati oja re ti gba agbara ni kikun. Lo awon ero gbigba agbara ti kii se Sony titun le fa ifiwewu to gaju.

Batiri

Titun tabi awon batiri laise se o le fa ibinu didinku agbara. Batiri naa ti gba agbara ni kikun saaju ipilese lilo. Lo fun idi ti a pinnu nikan. Yi batiri pada ni iwon otutu laarin +5°C(+41°F) ati +45°C(+113°F). Ma se fi batiri si enu re. Ma se je ki irin ti nmu batiri kan ara won ti o wa lori batiri kan irin miiran. Pa a oja re saaju ki o to yo batiri kuro. Awon igbarale imuse ni iwon otutu, agbara ifihan, lilo hun elo, eya ti a yan, ati ohun tabi gbigbe data. Nikan Sony awon alabasepo ise lo ye ki o yo kuro tabi ropo awon batiri ti a se sinu re. Lilo awon batiri ti kii Sony titun le fa ifiwewu to gaju. Ropo pelu batiri Sony miiran nikan ti a ti jersi pelu oja na lati bosewa IEEE-1725. Lilo batiri ti a ko jersi le fa ewu ina, bugamu, yiyo jo tabi ewu miiran.

Ohun-elo ilera eni

Ohun-elo alagbeka / ohun-elo igbohunsafefe redio le sokunfa ohun elo ilera inu. Di ewu akoba ku nipa jijina die 15 cm(inshi mefa) laarin abajade Sony ati ohun-elo ilera. Lo ohun-elo Sony ni eti otun re, ni ibamu. Mase fi ohun-elo si apo aya re. Pa ohun-elo bi o ba fura akoba. Fun lilo die fun ohun-elo ilera eni, jowo kansa dokita ati oluse ohun-elo.

Wiwoko

Ni ona miiran, oko oludasile le ma fayegba lilo ohun-elo alagbeka ninu oko won ayafibi won balo ohun aifowodimu eyi ti eriali ita gba ifisi re. Sebeere lowo asaju oluse oko naa'lati ni idaniloju pe ohun-elo alagbeka tabi aifowodimu Bluetooth koni sakoba ise ero ninu oko. Ifokansi pipe lagbodo fun wiwa oko ni gbogbo igba ati ofin agbegbe ati agbekale to de lilo ohun-elo alailokun lalo ni akoko wiwa oko.

Awon ise orisun ipo/GPS

Die ninu awon oja pese awon ise orisun ipo/GPS. Ti pese ipo ti npinnu isese "Bi o se wa" ati "Pelu gbogbo awon asise". Sony ko se asaju tabi atileyin oja fun eyikeyi aperere tabi geger bi isedede alaye ipo.

Lilo alaye orisun ipo nipasẹ ẹrọ le ma ni idilọwọ tabi ko ni ašise le gbarale neṭiwọki ni afikun wiwa işe. Jowo se akiyesi pe işe-şise le dinku tabi ni idiwo ni awon ayika kan gegebi awon ita ile tabi egebe agbegbe awon ile.

Işora: Ma se lo işe şise ni kikun ti GPS ni ona to fa idamu lati nwa moṭo.

Awon ipe pajawiri

Gbogo ipe ko ni yoo di gbigba ni gbogbo igba. Maşe gbe gbogbo okan le ohun-elo Sony Mobile fun ibanisoṛo to yekoro. Ipe le maa şeşe ni gbogbo agbegbe, lori gbogbo neṭiwọki, tabi nigba ti işe neṭiwọki kan ati/tabi işe ohun-elo alagbeka bawa ni lilo. Mo daju pe awon ohun-elo Sony kan kole gba lilo ipe ohun, peḷu ipe pajawiri.

Eriali

Ṭpòlówó ohun-èlò éríálí fí kīi şe Sony ló polowó rẹ lé ba ohun-èlò alágbèéká jé, dín işesí kù, àti mímú ìpele Ẹwón Gbígbasara tó Dájú (SAR) ga ju ipò òpin. Máşe bo éríálí pèlú owó rẹ nítòrí èyí n̄ şòkùnfà ojúlówó ipè, ìpele agbára àti pé ó lè dín ipè kúrú àti àkókò ìdúrónà.

Işafihan Radio Frequency (RF) ati Specific Absorption Rate (SAR)

Nigba ti ohun-elo alagbeka tabi işe Bluetooth amudani ba wa ni titan, o maa n mu agbara işesi redi kere. Awon ilana abo agbaye ni a ti şagbekale ni akoko kan ati nipa ayewo imo sayensi. Awon ilana agbekale fayegba ipele ifihan igbi omi redio. Ilana naa ni gbendeke abo ti a şagbekale lati fi daniloju abo gbogbo eniyan ati lati so iwon orişii.

Specific Absorption Rate (SAR) ni a nlo fun iwon agbara işesi redio ti ara n gba lakoko lilo ohun-elo alagbeka. Imoriri SAR pinnu ipele eri agbara giga ni abe ile ipogun, şugbon nitori a şe agbekale ohun-elo lati lo agbara diẹ ti o nilo ati şamulo neṭiwọki yiyan, ipele SAR gan le kere si iwon yii. Kosi eri iyato lori abo ti o da lori orişii iwon SAR.

Abajade peḷu igbohunsafeşe redio ti a ta I US gbodo je eyi ti Federal Communications Commission (FCC) şejeri. Nigba ti a ba beere, a n şe ayewo nigba ti a ba mu ohun-elo si eti ati ti a wo sara. Fun işe wiwo sara, atise ayewo ohun-elo lakoko gbigbe si o keere 15 mm lati ara laini eya irin ni agbegbe ohun-elo tabi ni lilo daradara peḷu ohun ilo Sony ti a wo sara. Nigba ti a ba n lo işişe "Hotspot", alafoo 10mm ni a lo.

Fun iroyin sii nipa SAR ati afihan işesi redio, loşi: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

Ipo ofurufu

Bluetooth ati işe Wireless Local Area Network (WLAN), bi o ba wa ninu ohun-elo naa, ni a le mulo ni Flight mode şugbon a le ma fayegba lakoko

wiwo oko ofurufu tabi ni agbegbe miiran nibiti akoti fayegba igbohunsafefe redio. Nirufe awon agbegbe bee, jowo gba ase ti o tona ki o to samulo Bluetooth tabi ilo WLAN paapaa ni Flight mode.

Asejamba

Asejamba (kukuru fun awon airidimu buburu) je airidimu ti o le se ijamba fun ohun-elo re. Asejamba tabi ohun asejamba leje akoran, aran asakoba, sipaiwia ati awon ise miiran ti a ko fe. Bi ohun-elo se nlo ona aabo lati dojuko awon ipa yii, Sony ko satilehin tabi soju pe ohun-elo naa kole gba awon asejamba. Sibe o le sadinku ewu asejamba nipa sifora lakoko gbigba wale ohun kan tabi gbigba, kiko lati si tabi dahun si ifijise lati odo orison aimo, lilo ise titi lati wole si ayelujara, ati gbigba ohun ti a mo si ohun-elo lati orison ti a fehinto.

Awon eya ero miiran

Lo saja ti Sony titun fun awon eya ara ero ati awon alabasepo ise ti a fowosi nikan. Sony ko se idanwo awon eya ero eniketa. Awon eya ero miiran le ni Agba ifihan RF, ise redio, ipariwo, idabobo ina ati awon agbegbe miiran. Awon eya ero eni keta ati awon ipin le duro fun ifiwewu si ilera re tabi dikun ise.

Awon Ona Abayo Larofwoto/Awon Ain Pataki

O le lo ori TTY re pelu ero Sony Mobile re. Fun alaye lori awon eya irayesi ati awon ona abayo fun awon abarapa, jowo sabewo si blogs.sonymobile.com/about-us/sustainability/accessibility tabi kan si Sony Mobile ni 1-866-766-9374.

Ikodanu Irinse Ina ati Ohun Amulo Ina Atijo (Eyi to wa ni Isokan Yurupu ati Awon Orile-edo Yurupu pelu awon lina akopo atijo)



Ami yii lori ero naa tabi lori akopo re tokasi pe ero yii ni a ko ni sise le lori bii isofu inu ile. Dipa a o fifowo si ibi akojopo to tona fun isatunse irinse ina ati ohun amulo ina. Nipa sifaridaju pe a ko ero yii danu daradara, waa seranwo lati dena awon abayori to lodi fun ayika ati ilera eda, eyi to le sele nipase isise lori ohun afisowo ero ni ona aitofu. Isatunse awon ohun ini naa yoo seranwo lati da aabobo awon ohun abalaye. Fun ekunrele alaye nipa isatunse ero yii, jowo kan si ibi-ise ljoba abele re, ise ikodanu ohun afisofu inu ile re, tabi isofu ti o ti ra ero naa.

Kaadi iranti

Bi abajade bawa pɛlu kaadi iranti alayokuro pipe, yoo ɛe lo pɛlu alagbeka ti a ra ɕugbon o le ma ɛeelo pɛlu awon ohun-elo miiran tabi pɛlu kaadi iranti won. Wo ibamu ohun-elo miiran ki o to ra. Bi abajade bami ibi ilo kaadi iranti, ɕayewo ibamu ohun-elo ki o to ra tabi lo.

A maa n fomati kaadi iranti ki a to ko ranɕe. Bi o ba fe tun fomati kaadi iranti re ɛe, lo ohun-elo ti o bamu. Maɛe lo iɛe ojulowo fomati nigba ti o ba n fomati kaadi iranti lori PC. Fun alaye, kansilana lilo ohun-elo naa tabi Sony contact center.

Kaadi SIM

Bi ohun elo re bani ojulowo iwon kaadi SIM ti a fisi, fifi kaadi SIM ti ko to (fun apeere, kaadi SIM kekere, kaadi SIM kekere ti koni Sony adapter, tabi ojulowo kaadi SIM sinu kaadi SIM kekere) ninu iho kaadi SIM le ba kaadi SIM tabi ohun-elo re je patapata. Sony ki funni ni atilɛhin kosi di gba esun fun abuku nipa lilo lilo kaadi SIM ti ko to tabi agbelero.

Ikilol

Ti ero ba beere fun ohun ti nmu badogba lati fi sii tabi ero miiran,ma ɛe fi kaadi sii taara laisi ohun ti nmu badogba ti o beere fun.

Awon iɕora lori lilo kaadi iranti

- Maa ɛe fi kaadi iranti han si orinrin.
- Maa ɛe fi owo kan asopo ebute pɛlu owo tabi irin kan.
- Maa ɛe lu, te, tabi ju kaadi iranti silɛ.
- Maa ɛe gbiyanju lati ɕaito tabi yi kaadi iranti pada.
- Ma ɛe lo tabi fi kaadi iranti pamo sinu irin tutu tabi ipo ti ko daa tabi nmu ooru to po bi oko titi pa ninu ooru, ni taara imole orun tabi sunmo ero ti ngbona, ati bebe lo.
- Maa ɛe te tabi te opin ohun ti nmu badogba kaadi iranti pɛlu agbara to po.
- Ma ɛe je ki egin, eruku, tabi maɛe je ki ohun elo miran wo inu ibi ti a ti fi ohun elo ti nmu badogba ti kaadi iranti sii.
- ɕayewo boya o ti fi kaadi iranti sii bi o ti to.
- Fi kaadi iranti sii niwonigba ti yoo lo si ohun ti nmu badogba ti kaadi iranti ti nilo. Kaadi iranti le maa ɕiseadara ayafi ti o ba fi sii daradara.

- A ɛ iduro wipe ki o ɛ daako afeyinti fun awon data pataki. A ko ni ɛ idalohun pipadanu tabi bibaje akoonu ti o fipamo sori kaadi iranti.
- Data ti o gbasilee baje tabi sonu nigba ti o ba yo kaadi iranti tabi kaadi iranti ohun ti nmu badogba, pa agbara re ni gba ti o ba npa akoonu re, kika tabi kiko data, tabi lo kaadi iranti ni agbegbe imole ina aimi tabi aaye imole ina to gaju.

Idabobo iroyin eni

Pa data eni re ki o to so abajade nu. Lati pa data re, ɛ atunto oniɛ. Pipa data re lori ohun-elo iranti ko tumosi pe a ko le ri mo. Sony ko lodi si atilehin iripada iroyin ko si le gba ebi fun isafihan iroyin paapaa lehin atunto oniɛ.

Fun awon ero ti o ni agbara lati wo 3D

Lati wo awon awojiji 3D pelu ohun-elo yi lori ferese iboju ti nsiɛ po pelu 3D, o le ni awon iriri inilara kan ti o je mo oju didun, ailokun ninu, tabi fifi lati bi ounje. Lati dekun awon aami aitera wonyi, a gba o niyanju lati ma a da wiwo naa duro lekoƙoƙan. Sugbon o gbodo pinu funraare nipa bi akoko ti o da wiwo naa duro yoo ti gun to, ati iye igba ti o nilo re, nitori eyi ma nyato laarin eniyan kan si omiiran. Bi o ba ni iriri inilara yoowu, da wiwo awojiji 3D duro titi di igba ti inilara naa ba lo kuro, ki o si kan si dokita bi o ba ye be. Bakan naa, wo awon itosona nipa ise ero naa, eyiti o ba ero tabi software ti o so po mo naa, tabi ti o nlo pelu re, wa. ɛ akiyesi pe oju awon omode si wa ni ipo idagbasoke (paapa julowon omode ti ojo ori won ko ti to odun 6). Kan si dokita awon omode tabi dokita oju ki o to gba omo re laaye lati wo awon awojiji 3D, ki o si ri i daju pe o tele awon imoran ti o wa loke yi nigbati o ba nwo iru awon awojiji be.

Ikilo alariwol

Yera fun awon ipele iwon didun to le ɛ ipalara si gbigboran re.

Adahun Igbanilaye asamulo

Eya airidimu ti a fijiɛ pelu ohun elo yi ati midia re je ti Sony Mobile Communications Inc., ati/tabi ti awon ile-ise alajosiɛ po re ati awon olufunni re ati awon olugbanilaye.

Sony n fun o ni Igbanilaye ailopin pataki lati lo eya airidimu naa nikan ni ibasepo pelu ohun elo naa lori eyi ti a sagbikalere si tabi fijiɛ. Jije oluhun eya airidimu naa ni a ko ta, fiɛwo tabi so ni on miran.

Mase lo ona kona lati sawari koodu orisun naa tabi eya kankan ti eya airidimu naa, titunse ati pinpin eya airidimu naa, tabi satunse eya airidimu

nàà. O ní ètò láti fi àwọn ètò àti ojùsè şowò sí èyà àìrídímú nàà ti èlòmíràn, nikan lápapọ pèlú ohun èlò nàà pèlú èyítí o gba èyà àìrídímú nàà, èyí tó bá jẹ pé èlòmíràn nàà bá gbà ní ìkọsilẹ̀ láti faramọ̀ ifẹ̀nukò ti Igbaniílàyè yíí.

Igbaniílàyè yíí wà nílẹ̀ tífí igbà iwúlò ti ohun èlò yíí. Ó le dọ́pín nípa fífí àwọn ètò rẹ̀ şowò sí ohun èlò nàà sí èlòmíràn ní ikọsilẹ̀.

Ìkùnnà láti faramọ̀ àwọn ifẹ̀nukò àti ipò wònyí yóò dọ́pín igbaniílàyè nàà lójú esẹ̀.

Sony àti àwọn olùgbaniílàyè àti àwọn olùfúnni míràn rẹ̀ ní ètò, àkọlẹ̀ àti ifẹ̀-inú nínú àti sí èyà àìrídímú nàà. Dé bi wípé èyà àìrídímú nàà ní ohun àmúlò tàbí kóòdù ti èlòmíràn, irú àwọn èlòmíràn nàà yóò jẹ̀ ànfàní àwọn ifẹ̀nukò wònyí.

Ifẹ̀nukò yíí ni àwọn òfin Japani n̄ darí. Nígbà tí ó bá şeélò, iwònyí n̄ şàmúlò sí àwọn ètò aşàmúlò tó bá òfin mu.

Tó bá şełẹ̀ pé èyà àìrídímú tó wá pèlú tàbí tí a pèsè ní íbáşepọ̀ pèlú ohun èlò rẹ̀ ni a pèsè pèlú àfikún ifẹ̀nukò àti ipò, irú àwọn ipèsè bẹ̀ẹ̀ tún darí níní àti lílò èyà àìrídímú nàà.

Awọn Ilana Okoowo orilẹ̀ ede si orilẹ̀ ede:

Awọn Ilana Okoowo orilẹ̀ ede si orilẹ̀ ede: Ohun-elo naa tabi airidimu le da lori ilana okoowo ikohun wole ati okoowo orilẹ̀ ede si orilẹ̀ ede ti European Union, United States ati awon orilẹ̀ ede miiran. Wa se amulo awon ofin ati ilana yii ati gbigba ati mimuse ilana okoowo orilẹ̀ ede si orilẹ̀ ede ati iwe ikohun wole fun kiko oja fun labẹ Ajoşepọ̀ yii. Laise idiwon ohun wonyi, fun apeere, o le gbé awon oja lo tabi atun gbelo si awon ilu asayan miran fun karakata gegẹ bi awon ofin towaní ori iwe II ti Ajo Amofin Europu (EC) 428/2009 Dandan ni titelẹ awon ilanà ijoba U.S tonise pelu gbigbe oja jade losi ile miran ("EAR", 15 C.F. R §§ 730-774, <http://www.bis.doc.gov/>) Olutaju lati odọ Igbimo Isowo, Ajo Olugbejade ati Idaabobo; (30 C.F.R. §§ 500 et. seq.,, <http://www.treas.gov/offices/enforcement/ofac/>) alamojutu ti Igbimo Afowopamo U.S, Ibi ise Oludari awon Nnkan ini Ilu miran.

Idiwon Atilehin

Sony Mobile Communications AB, SE-221 88 Lund, Sweden, tabi awon ileşe alajose ibile, pese Iduwon Atilehin yii fun ohun-elo alagbeka re, ohun elo akoko lamulo pelu ohun-elo alagbeka re, ati/tabi ilo abajade konputa alagbeka re(eyi ti a peni "Agbejade" nibi).

Bi Abajade re banilo ise atilehin, jowo da pada fun oluta lodọ eniti a ti ra, tabi kansu Sony Contact Center agbegbe re (iye ilo le di sisan) tabi kansu www.sonymobile.com lati gba iroyin sii.

Atilẹyin oja wa

Koko-orọ si awọn ipo ni atilẹyin oja to lopin, Sony ẹ atilẹyin fun oja yi laini abawọn ninu apeṣere, ohun elo ati iṣe ni akoko rira atilẹba alabara. Atilẹyin oja to Lopin ma ṣiṣe ni bi odun kan (1) lati ojo deede ni rira fun oja.

Ohun ti a o ẹ

Ni akoko atilẹhin, bi Agbejade yii bakọ lati ṣiṣe lona toyẹ ni iṣe, leyi to da lori aṣiṣe Iyàwòrán, ojun elo tabi akoko iṣe, alaṣe pinpin Sony tabi alabaṣiṣepọ, ni orilẹ ede/ẹkun* nibi ti o ti ra Agbejade, yoo, ni ero wọn, ṣatunṣe, parọ tabi dawo rira Agbejade pada ni ibamu pe lu ilana ati agbekale ti a ko.

Sony ati awọn alabaṣiṣepọ ni aṣe lati beere owo bi a ba rip e Agbejade ti a da pada kosi labẹ atilẹhin gegebi ilana isale.

Jowo ṣakiyesi pe lara aato re, igbawale ati awon iroyin miiran nigba ti a se atunse tabi parọ Agbejade Sony re. Lọwólọwọ, òfin lé òfin Sony lówó, àwọn ilànà tàbí ìdiwọ ònà ìmọ́ lára iṣẹ́dà àfẹ̀yínti àwọn igbawalẹ kan. Sony kii gba ebi fun adanu awon iroyin Kankan ati pe kii yo da owo kan pada fun o fun iru adanu be. O gbodo maa se awon iseda afeyinti fun gbogbo iroyin afipamo lori Agbejade Sony gegebi igbawale, kalenda ati olubasoro saaju fifi Agbejade Sony re silẹ fun atunse tabi iparo.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.

- Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).
- Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.

Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product. Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Orúkọ àdálò, Imọ̀fínrìn àti àṣẹ̀ oníṣẹ̀

©2015 Sony Mobile Communications Inc. àti àwọn ilé isẹ̀ alájoṣiṣẹ̀ rẹ̀.
Gbogbo àwọn ètò ni a fipamọ̀.

Xperia jẹ orúkọ àdálò tàbí orúkọ àdálò tí a kòsilẹ̀ tí Sony Mobile Communications Inc.

Sony jẹ orúkọ àdálò tàbí orúkọ àdálò tí a kòsilẹ̀ tí Sony Corporation.

Bluetooth jẹ orúkọ àdálò tí Bluetooth SIG Inc. àti pé ilò kankan tí orúkọ náà nípasẹ̀ Sony wà lábẹ̀ ǵbaniláyè.

Gbogbo àwọn orúkọ ilé-iṣẹ̀ àti ǵgbéjádé tí a dárúkọ níbí jẹ orúkọ àdálò tàbí orúkọ àdálò tí a kòsilẹ̀ tí àwọn onińkan.

Ètò kankan tí a kò fúnni tàrà níbí wà nípamọ̀. Şàbèwò sí www.sonymobile.com fún iwífún síwájú síi.

Igbo

Onye oriri mkpokota ntanetijime Sony

Na www.sonymobile.com/support bu ebe akwadoro ebe enyemaaka na ndumodu no naani na ipi igodo na obere uzu. Ebe a iga ahuu mmelite komputa software nke di oheru ma ndumodu otu iga esi eji ngwa oru gi ebe okachamma.

Oru na enyemaka

Inwere ikike mbanye nke diri naani gi nke uru oru ndi dika:

- Ozuru uwa na Websait nke mba anyi nke n'eweta enyemaka.
- Igweoru nke ozuru mba nke ebe ikpo oku.
- Igweoru buru ibu nke ndjalaka oru Sony.
- Oge imezu nkwa. Mutakwuo banyere onodu ejiri mezuo nkwa ahụ na *Imezu nkwa nke nwere njedebe* Nkeji.

Na www.sonymobile.com/support mọbu www.sonymobile.com/contact ga enweta ngworu enyemaka nke ka bu ya na ozi. Maka oru na atumatu nke onye na-ahu maka oru kowaputara, biko kpoturu onye na-ahu maka netwok gi.

! nwekwara ike ikpoturu Ama Mkpoturu anyi ma o bu kpoturu onye na-ere ahia na mpaghara gi. (A na-ewere ego oku ikporo dika ego oku nke ala anyi,tinyere utuisi nke okeala, obuzi mọbu akara ekwentị emere maka efu.)

Oburu na iheru gi choo ndozi, Biko kpoturu onyehia ebe igotara ya, mọbu otu n'ime ndjalaka oru anyi. Iji zoro ihe n'okpuru ebi nwere oke ahụ, achoro ihe akaebe nke nzuta.

Atumatu maka Ojii Echekwara ma di Ezigbomma

Biko soro ntuziaka ndi a. Emeghi otu a na ebute ngwaahia arughi oru nke oma ma o bu obutere gi oria na ahu gi. Oburu na itukwasighi obi na ezigbo iruoru, mee ka onye otu oru enyere ikikere tulee ngwaahia tupu ichajie ma o bu jiri ya.



Nkwado maka nlekota na iji ngwaahia anyi na enweghi mmekpa ahụ

- Jiri nke oma, dowe ebe di ocha, ntu adighi.
- **Ido aka na nti!** Nwere ike igbawa ma o buru na etinye ya n'oku.
- Ejina na gburugburu ebe agafere mmachi ogo IP di mkpa, o buru na o di, (gunyere omimi gafere oke na/ma o bu ike nke mmiri na/ma o bu ntu) ma o bu kpughepu ya na oke mmiri.
- Maka arumoru kachasi, ekwesighi iji ngwaahia ahụ na temprecho na erughi $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ ma o bu karija $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Ekpughepuna batiri ahụ na temprecho kariji $+60^{\circ}\text{C}(+140^{\circ}\text{F})$.
- Ekpughepuna na ire oku ma o bu ngwaahia anwuru amunyere oku.
- Edowena, tuo ma o bu nwaa igbago ngwaahia ahụ.
- Etena nteji ma o bu nwaa ikposa ma o bu dezie ngwaahia ahụ. Naani onye oru Sonye enyere ikike kwesiri ime oru.
- Kpoturu onye oru ahuike enyere ikike yana ntuziaka nke onye nrupuata ngwaoru ahuike tupu ejiri ngwaahia ahụ n'akuku pacemaker ma o bu ngwaoru ahuike ma o bu akurungwa ndi ozu.
- Kwusi iji ngwaoru eletroniki, ma o bu gbanyuo arumoru nnyefe radio nke ngwaoru ahụ, ebe achoro ma o bu aroro ka emee nke ahụ.
- Ejina ebe ikuku ihe ogbugba nwere ike idi.
- Edowena ngwaahia ahụ, ma o bu ranye akurungwa ikuku, na mpaghara kariji akpa ikuku n'ugbo ala.
- **Kpachapu anya:** Ngosiputa gbawara agbawa nwere ike imeputa onu piri api nwere ike ibute mmekpa ahụ na mmetu.



- Ejina Igweisi Bluetooth n'ọ̀nọ̀dụ ebe adighi mma ma ọ bu ebe nnukwu nkwagide ga-adị.
- Zere imetụ anụahụ gi ogologo oge. Okpomọkụ ngwaọrụ gi na emepụta mgbe ọ na enyefe data nwere ike imetụta anụahụ gi. Akwadoro iji igweisi maka oku ekwentị ga-anọ ogologo oge.

Ụmụaka

Ido aka na ntị! Wepu ebe ụmụaka nọ. Ahapuna ụmụaka iji ngwaọrụ ma ọ bu akurungwa mkpanaka wee gwuo egwu. Ha nwere ike imerụ onwe ha ahụ ma ọ bu ndị ọzọ ahụ. Ngwaahia nwere ike inwe obere akụkụ ndị nwere ike ikepụ wee mepụta ihe mbibi na-asuchi imi.



Inye ikikere ọrụ (Chaja)

Jikọta chaja na ikikere ọkụ dika ahudoro na ngwaọrụ. Ejikwala na-ezi ma ọ bu na ebe mmiri ga emetu ya. Awalaawa iwepu ma ọ bu mee ka eriri gabiga mmebi ma ọ bu mkpachigide. Kwụpụ ngwa tupu ina ehicha ya. Awalaawa iwepu eriri. Ọburu na eriri abanyeghi na ebe emepereya, nwee ezigbo ebe ọpụpụ onye ma anya ọrụ latrik kwunyere. Mgbe ejikoro na inye ikikere enwere obere ndoro ọkụ. Igbochi obere nwufu ike a, kwụpụ inye ikikere mgbe ngwaahia chajiri nke ọma. Oji ngwaọrụ chaja na abughi nke Sony kwadoro nwere ike ibute egwu nche di ike.

Batrị

Batrị ọhuru ma ọ bu nke nọ nkiti nwere ike inwe ọgọ belatara ebelata. Chajie batrị nke ọma tupu ina eji ya izuzu. Jiri batrị maka ojii nke akwadoro naani. Aga achaji batrị naani na temperature di na etiti +5°C (+41°F) ma +45°C (+113°F). Etinyekwala batrị na ọnu gi. Ekwela ka mmetuta igwe di na batrị metu igwe ọzọ. Gbanyuọ ngwaahia tupu ikwupu batrị. Omumeihe dabeere na temperature, ike mgbama, usoro oji, njirimara ahoro na olu ma ọ bu mgbasa data. Naani ndi otu ọrụ Sony nwere ike iwepu ma ọ bu dochie batrị arunyere. Oji batrị na abughi nke Sony kwadoro nwere ike ibute egwu nche di ike. Jiri naani otu udi batrị ọzọ Sony kwadoro nke atulere n'iji ọgọ ngwaọrụ IEEE-1725 tozuru etozu. Ijii batrị n'etozughị oke nwere ike ibute egwu ọkụ, mgbowa, ohihi ma ọ bu nsogbu ndi ọzọ.

Ngwaọrụ ahụike nkeonwe

Ngwaọrụ mkpanaka / ngwaọrụ nwere ihe mgbasa redio nwere ike imetụta akurungwa ahụike arunyere n'ime. Belata ihe egwu nke nkwuchibido site na idowe ogologo nke 15 cm(6 inches) n'etiti ngwaahia Sony na ngwaọrụ ahụike. Jiri ngwaọrụ Sony na ntị nke aka nri, mgbe ọ di. Ebuna ngwaọrụ ahụ

na akpa di na obi gi. Gbanyuṣo ngwaṣu ahu ma o buru na i na-enyo nkwochibido. Maka ojiji na nṣokete nso na ngwaṣu ahu ike nkeonwe, biko kpṣuru onye na-elekoṣa ahu yana onye ruṣuṣara ngwaṣu ahu.

ጎnya ህጎጎ

N'ebe uṣuṣu, ndi na-aruṣuṣa ህጎጎ ala nwere ike iju ojiji nke ngwaṣu mkpanaka na ህጎጎ ala ha beluṣo ngwungwu emetuaka nwere igwe opi di na mpuga na-akwado nwunye ahu. Lelee n'aka onye nṣochite nke ndi ruṣuṣa ህጎጎ ala ahu' iji di njikere na ngwaṣu mkpanaka ma o bu emetuaka Bluetooth agaghi emetuṣa sistem u eletroniki na ህጎጎ ala ahu. Ekwesiri itinye uche niile na ጎnya ህጎጎ n'oge niile, ekwesiri isopuruṣuṣu iwu mpaghara na usoro na-amachi ojiji ngwaṣu na-enweghi eriri ka a na-anya ህጎጎ ala.

GPS/Iruṣuṣu dabeere n'ebe

Uṣuṣu ngwaahia nwetara GPS/Iruṣuṣu dabeere n'ebe. Iruṣuṣu na emeputa ebe ka ewetara "As is" na "With all faults". Sony adighi eme nṣochi obula ma o bu ebi maka odimma nke ama ebe udi a.

Ngwaṣu iji ama dabeere n'ebe nwere ike ogaghi enwe ndabichi ma o bu enweghi iri mpe ma nwere ike idabeere na ṣuṣu netwoṣ di nu. Biko mata na aga ewebelata iruṣuṣu ma o bu egbochie ya na ebe di aghaa dika niime ulo ma o bu mpaghara chedoro ihu n'ulo.

Nduṣuṣu: Ejikwala iruṣuṣu GPS na uṣu oga ebute mmeghari anya na o nyiya.

Oku enyemaka

Enwere ike ikwe nkwa oku n'okpuru onodu niile. Adaberena kpankpan na ngwaṣu Sony Mobile maka nkwoṣuṣu di mkpa. Enwere ike ikpo oku agaghi aga na mpaghara niile, na netwoṣ niile, ma o bu mgbe ejiri uṣuṣu ṣuṣu netwoṣ na/ma o bu ngwaṣu mkpanaka. Biko mara na uṣuṣu ngwaṣu Sony enweghi ike ikwado oku olu, gunyere oku ihe mberede.

Poolu

Iji ngwaṣu igwe opi nke Sony anaghi akwado azumahija ya nwere ike imebi ngwaṣu mkpanaka ahu, belata arumoru, ma ruṣuṣa okwa Specific Absorption Rate (SAR) kariya oke ezubere. Ejina aka gi wee kpuchie igwe opi ahu ebe nke a na-emetuṣa ogo oku, okwa ike ma o nwere ike ibelata oge ikwu okwu na njikere.

Mbupute Radio Frequency (RF) na Specific Absorption Rate (SAR)

Mgbe agbanwuru ngwaṣu mkpanaka ma o bu emetuaka Bluetooth, o nabupute obere okwa nke ike frekwensi redio. Emeputala nduzi nchedo ofesi

site na nyocha nke ọmụmụ sayensị emere kwa oge ma mee nke ọma. Nduzi ndị a na-emepụta ọkwa nke mbupute ikuku redio anabatara. Nduzi ndị ahụ ọnyere oke nchedo ezubere iji gbaa mbọ hụ na ekpuchidoro mmadụ niile yana ikpesa maka ndịiche ọ bụla na ọhara.

A na-eji Specific Absorption Rate (SAR) iji atụ ọhara ike frikwensi redio nke ahụ mịbara mgbe i na-eji ngwaọrụ mkpanaka. A na-ekpebi uru SAR na ọkwa ike kachasị akwadoro na ọnọdụ ime ulọ nyocha, mana n'ihie ezubere ngwaọrụ ahụ iji ike pekarịsiri iji nweta netwọk ahọpụtara, ọkwa SAR eburuputa nwere ike ọgaghị erute uru a. Enweghị ihe akaebe nke ndịiche na nchedo dabere na ndịiche na uru SAR.

Ngwaahịa nwere ihe mgbasara redio erere na US ga-enweriri asambodo nke Federal Communications Commission (FCC). Mgbe achoro, a na-eme nnwale mgbe edobere ngwaọrụ ahụ na ntị yana mgbe eyiri ya na ahụ. Maka arụmọrụ a na-eyi na ahụ, anwaleela ngwaọrụ ahụ mgbe edobere ya opekata mpe ihe di ka 15 mm pụọ na ahụ na-enweghị akukụ igwe ọ bụla di na ogige nke ngwaọrụ ahụ ma ọ bụ mgbe ejiri nke ọma yana akurungwa Sony ziri ezi ma yiri ya na ahụ. Mgbe a na-eji yana arụmọrụ "Hotspot", ejiri ogologo nkewa nke 10 mm.

Maka ozi ndị ọzọ gbasara SAR na mbupute frikwensi redio, gaa na: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

Ọnọdụ ofufe

Arụmọrụ Bluetooth na Wireless Local Area Network (WLAN), ọ bụrụ na ọ di na ngwaọrụ ahụ, enwere ike igbanye na ukpuru Ofufe mana enwere ike imachi ya n'ime ụgbọ elu ma ọ bụ na mpaghara ebe amachiri mgbasara redio. N'udiri gburugburu ahụ, biko chọọ ikikere ziri ezi tupu igbanye arụmọrụ Bluetooth ma ọ bụ WLAN ọbụlagodi n'ukpuru Ofufe.

Malụwe

Malụwe (mkpirisi maka ngwanrọ adigboroja) bụ ngwanrọ nwere ike ibute mmekpa ahụ na ngwaọrụ. Malụwe ma ọ bụ ngwa na-ebute mmekpa ahụ nwere ike igụnye nje, worm, spyware, na programmụ ndị ọzọ achoghị. Ka ngwaọrụ ahụ anaghị enwe ukpuru nche iji gbochie udiri mbọ ahụ, Sony anaghị enye ikike ma ọ bụ egosiputa na ngwaọrụ ahụ ga-egbochi ndubata nke malụwe. Agbanyeghị i nwere ike ibelata ihe egwu nke nsogbu malụwe site na iji mkpachara anya mgbe i na-ebudata ọdịnaya ma ọ bụ na-anabata ngwa, zere imepe ma ọ bụ izaghachi ozi sitere n'aka ndị amaghị, site na iji ọrụ atụkwasi obi iji nweta Intaneti, yana ibudata naanị ọdịnaya n'ime ngwaọrụ mkpanaka site na isi amara nke ọma, ma nwee ntụkwasi obi na ya.

Ngwa enyemaka

Jiri naani ngwa enyemaka Sony nsinambu ma ndi otu atuputara. Sony adighi atule ngwa enyemaka ndi ozo. Ngwa enyemaka nwere ike imetu mgbasapu RF, iruoru redio, odasiike, nche latrik na mpaghara ndi ozo. Ngwa enyemaka ndi ozo na akuku ha nwere ike ibute egwu nyere ahuike gi ma o bu wedata arumoru.

Asisa Ndi A Ga-enwetanwu/Mkpa Ndi Puru Iche

I nwere ike iji onu TTY gi yana ngwaru Sony Mobile gi. Maka ozi gbasara atumatu na asisa ndi a ga-enwetanwu maka ndi mmadu nwere mkpa puru iche, gaa na blogs.sonymobile.com/about-us/sustainability/accessibility ma o bu kpotururu Sony Mobile 1-866-766-9374.

Ntufu nke Akurungwa Latrik na Eletronik Ochie (Di na European Union yana mba Europe ndi ozo nwere sistemụ nnakota di iche)

Akara a di na ngwaru ahụ ma o bu na nkechi ya na egosi na ekwesighi ijikwa ngwaru a di ka ahijia ulo. Kama a ga-enyefe ya n'aka onu nnakota ziri ezi maka ntighachi nke akurungwa latrik na eletroniki.

Hu na etufuru ngwaru a nke oma, i ga-enyere aka gbochie ndaputa na adighi mma maka gburugburu na ahujike mmadu, nke enwere ike ibute si na njikwa ahijia nke ngwaru a na adighi mma. Ntighachi nke ngwa ahụ ga-enyere aka chedo ngwa ekerepuwa. Maka ozi akowaputara nke oma gbasara itighachi ngwaru a, biko kpotururu ulo oru Obibi ndu mpaghara gi, oru ntufu ahijia ulo gi, ma o bu zuo ahia ebe i zutara ngwaru ahụ.

Kaadị ebe nchekwa

O buru na eji ihe niile di ka kaadi ebe nchekwa enwere ike iwepu wee weta ngwaahia ahụ, o na-adakorikari na igweaka azutara mana o nwere ike ogaghi adakorita na ngwaru ndi ozo ma o bu nru oru nke kaadi ebe nchekwa ha. Lelee ngwaru ndi ozo maka ndakota tupu nzuta ma o bu ojiji. O buru na etinyere ihe na-agu kaadi ebe nchekwa na ngwaahia ahụ, lelee ndakota kaadi ebe nchekwa tupu nzuta ma o bu ojiji.

A na-ahazikari kaadi ebe nchekwa tupu ebupu ha. Iji hazigharia kaadi ebe nchekwa, jiri ngwaru dakotara. Ejina okoloto nhazi sistemụ arumoru mgbe i na-ahazi kaadi ebe nchekwa na PC. Maka nkowaputa, rutu aka na ntuziaka arumoru nke ngwaru ahụ ma o bu ama inweta Sony.

kaadi SIM

O buru na ngwaru gi nwere okoloto -nha onu kaadi SIM, ifanye kaadi SIM na-adakotaghi (dika omumaatu, obere kaadi SIM, obere kaadi SIM nwere adapta na-abughi Sony, ma o bu okoloto kaadi SIM n'ime nha obere kaadi

SIM) na ɔnɔ kaadi SIM nwere ike imebi kaadi SIM gi ma ɔ bu ngwaɔrɔ gi kpankpam. Sony anaghɔ enye ikike ma ɔgaghɔ anara ɔta maka mmebi ɔ buɔ nke ojiji kaadi SIM emeziri ma ɔ bu na-adakɔtaghɔ butere.

Amumal

Ɔburu na ngwaɔrɔ riɔriɔ ngwa nfanye maka nfanye niime ngwaaka ma ɔ bu ngwaɔrɔ ɔzɔ, afanyekwala kaadi a na ejighɔ ngwa nfanye kwesiri ekwes.

Amuma mbu na oji kaadi ebe nchekwa

- Agbasakwala kaadi ebe nchekwa nyere edo.
- Akpatukwala ɔnu njikɔ aka ma ɔ bu iji ihe dika igwe metu ya.
- Akukwala, roo, ma ɔ bu tufuo kaadi ebe nchekwa.
- Awakwala awa ijikɔtaghari ma ɔ bu imeghari kaadi ebe nchekwa.
- Ejikwala ma ɔ bu chekwa ebe nchekwa na ebe mkpuru mmiri ma ɔ bu ebe nwere ike ita nchara ma ɔ bu ebe na ekpo ɔkɔ dika niime ugbuɔala emechiri emechi na oge ɔkɔchi, na ɔkpuru anyawu ma ɔ bu jeketa igwelatrik, drz.
- Apikwala ma ɔ bu roo azu ngwa nfanye kaadi ebe nchekwa n'iji ike.
- Ekwela ka unyi, ntu, ma ɔ bu ihe ɔbia ɔzɔ banye na mbata nfanye ngwa nfanye kaadi ebe nchekwa.
- Tulee ma ifanyela kaadi ebe nchekwa ebe ɔdimma.
- Fanye kaadi ebe nchekwa ebe ɔga enwe ike iga na ngwa nfanye kaadi ebe nchekwa achɔrɔ. Kaadi ebe nchekwa nwere ike ɔgaghɔ arɔrɔ nke ɔma karia ma afanyere ya n'uju ya.
- Anyi duruɔdu ka ime ndetu akwadoro maka data di mkpa. Anyi agaghɔ anara ɔta maka ofufu ma ɔ bu mmebi nke ɔdinaya ichekwara na kaadi ebe nchekwa.
- Data edekɔrɔ nwere ike imebi ma ɔ bu fuo ma iwepu kaadi ebe nchekwa ma ɔ bu ngwa nfanye kaadi ebe nchekwa, gbanyuɔ ɔkɔ mgbe ina ahazi, na-agu ma ɔ bu na-edede data, ma ɔ bu jiri kaadi ebe nchekwa na ebe latrik kwudoro ofu ebe ma ɔ bu mpaghara mgbasapu latrik di elu.

Mkpuchido nke ozi nkeonwe

Hichapụ data nkeonwe tupu itufuo ngwaahịa ahụ. Iji hichapụ data, mee ọkaibe ntoghari. Ihichapụ data na ebe nchekwa nke ngwaọrụ ahụ anaghị aputa na enweghị ike iweghachite ya. Sony anaghị enye ikike gabiga nweghachite nke ozi ma ha anaghị anara ụta maka mbupute nke ozi ọ bụla ọbụlagodi ka emechara ọkaibe ntoghari.

Maka ngwaọrụ nke enwere ike jkwado nlere 3D

Iji lee onyonyo 3D ngwaọrụ na ihuenye nke enwere ike jru ọrụ na 3D, inwere ike inwe mgbu dika mgbu nọ na anya, mba, maọbụ mmetụta ọjia. Iji gbochie akara ọjia a, anyị tinye uche ka ị kwụsị kwa mgbe kwa mgbe. Nakwa, ị kwesiri jkpebie nke gi ogo na oge nkwụsị ichoro, makana nke a na-agbanwe site na onye. O buru na ị nwee mgbu ọ bụla, kwụsị nlere onyonyo 3D ruo mgbe ahụ gi di mma, ma kpọturu dibia bekee ọ buru na ọ di mkpa. Nakwa haa ndumodu ọrụ ngwaọrụ maọbụ ngwanrọ nke ijikoro maọbụ ijiri na ekwentị a. Rụba anya nwa ama, nke na-eto (ọ kachasi nwa n'ala afọ 6). Kpọturu dibia bekee maka nwa maọbụ dibia bekee maka anya tupu inye nwa gi ohere ka ọ lee onyonyo 3D, na mee ka ọ dokwara gi anya ha sọpuru ndumodu n'ala a mgbe nlere onyonyo a.

Amuma di elu!

Gbaghara ogo mmelite uda nwere ike idi njo na onunu ihe gi.

Nkwekorita ikike ọjia

Ngwanrọ e jiri njia a buga na midia ya bu nke ndi Sony Mobile Communications Inc nwè., na/maobu uloruru nwere mmeko na ha na ndi na-ebunye ha ahia nakwa ndi enyere ikike.

Sony nyere gi ikike puru iche enweghi atu iji jiri ngwanro ruo ọrụ gunyere ijikwa njia nke a kwakonyere maobu nke ebute gi. Onwunwe ngwanro bu nke anaghi ere ere, enyefe maobu were.

E jikwala uzọ ọbụla iji chọputa koodu nsiribia maobu ngwa ọbụla nke ngwanrọ, imeputaghari ya na ikesasi ngwanrọ, maobu mezima ngwanrọ. I nwere ikike inyefe ikike ma ọrụ ga na ngwanrọ ruo na nke onye atọ, naanị site na njia nke iji anata ngwanrọ, naanị ma ọ bughị ma onye nke atọ ekwenyere site n'ihe odide jikotara usoro ikike a.

Ikike a ga-adi mgbe niile aga-eji ngwanrọ a ruo ọrụ. E nwere ike kwusi ikike i nwere site na inyefe ikike gi na njia nke onye atọ site n'ederede.

Iju ime ihe usoro na onodu ọbụla ndi a ga-eme ka akwusi ikike gi ozugbo.

Ndi Sony na ndi mbunye ahia onye atọ na ndi nwere ikike niile, njirimara aha na mmasi nakwa ruo na ngwanro. Ruo na nke mere na ngwanro gi nwegasiri ngwa maobu koodu nke onye atọ, onye atọ a nwegasiri uru nrite gbasara usoro ndi a.

Ikike a kpuchidoro site n'iwu nke Japan. Mgbe etinyere ya, nganihu ya ga ahụ maka ikike ndị ọzụ.

Na nsonye mmereme ngwanrò maọbụ ndị ewepụtara site na njiarụ gị bụ nke enyere usoro na ọ̀nọdụ ọzọ ga, ụdịka oghere ndị a ga-ekpuchido onwunwe gị nakwa ka i si eji ngwanrò gị arụ ọrụ.

Iwu Mbupu:

Iwu Mbupu: Ngwaọrụ ma ọ bụ ngwanrọ ahụ nwere ike ịdabere na usoro mbubata na mbupu nke European Union, nke United States na mba ndị ọzọ. Ị ga-esoriri iwu na usoro ndị a dị adi, ma ga-enweta ma dowe ikikere mbupu na mbubata ọ bụla achọrọ maka nyefe nke ngwaahia n'aka gị n'okpuru Nkwekọrịta a. N'ighara imachi nke na-aga, yana dị ka imaatụ, ị gaghi akpachara anya ibupu ma ọ bụ bupugharịa ngwaahia gaa na ebe njedebe akọwapụtara ka nke na-esochi Edemede na Nkebi II nke European Council Regulation (EC) 428/2009 yana nke akọwapụtara iche, na-enweghi mmachi, ị ga-esoririkwa Iwu Nchikwa Mbupu nke gọmentị U.S. ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) nke Ngalaba nke Azụmahia wetara, Ụlọ Ọrụ nke Ụlọ Nruputa na Nche na usoro mmachi njikwa ego (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) nke U.S. Ngalaba nke Akụ, Ụlọ Ọrụ nke Njikwa Arịa Mba Ofesi wetara.

Ebi Nwere Oke

Sony Mobile Communications AB, SE-221 88 Lund, Sweden, ma ọ bụ ụlọ ọrụ mmekọ ya dị na mpaghara, na-enye Ebi Nwere Oke a maka ngwaọrụ mkpanaka gị, akurungwa eburuputa enyefere yana ngwaọrụ mkpanaka gị, na/ma ọ bụ ngwaahia mgbakọ mkpanaka gị (emechara n'ime ebe a na-akpọ "Ngwaahia").

Ngwaahia gị chọọ ọrụ ebi, biko weghachi ya n'aka onye na-ere ahia azụtara ya n'aka ya, ma ọ bụ kpọturu Ama Inweta Sony dị na mpaghara gị (ugwo mba nwere ike ịdi) ma ọ bụ gaa na www.sonymobile.com iji nweta ozi ndị ọzọ.

Ebi anyi

Odabeere na onodu ebi nwere ọgọ nkwusi nka, Sony nyere Ngwaahia ebi ka onwe oghere mmetuta nruputa, ihe ndi ma ike onyemmeputa oge onye oriri buruuzo zuo ya. Ebi nwere Ọgọ nkwusi a ga adi ire ruo otu (1) afọ site na deeti nsinambu mgbe izuru Ngwaahia.

Ihe anyị ga-eme

Ọ bụrụ, n'oge ebi, Ngwaahia a nupu isi iru ọrụ n'okpuru ojiji na ọrụ kwesiri, n'ihị mperi na ụdị, ihe ma ọ bụ nka, Ndị nkesa ma ọ bụ ndị mmekọ ọrụ Sony nyere ikike, na mba/mpaghara* ebe ị zụtara Ngwaahia ahụ, ga, na nhoro ha,

dozie, dochie ma o bu kwughachi onwego nzuta nke Ngwaahija ahụ n'usoro na usoro na onodu eyibere n'ime ebe a.

Sony na ndi mmeko oru ya na-echedo ikike iji gbaa ugwo njikwa ma o buru na achoputa na Ngwaahija eweghachitere anoghi n'okpuru ebi dabere na onodu ndi di n'okpuru.

Biko mara na ufodu ntala nkeonwe gi, nbudata na ozi ndi ozu nwere ike ifu mgbe edoziri ma o bu dochie Ngwaahija Sony. N'oge ugbu a, enwere ike igbochi Sony n'okpuru iwu di, mmachi usoro ma o bu oruka ndi ozu site na imeputa nnomi ndabere nke ufodu nbudata. Sony anaghi anara uta maka ozi o bu nke udiri o bu furu efu ma o agaghi enyeghachi gi ego maka ntufu udiri o bu. I ga-emeputa nnomi ndabere nke ozi niile echekwara na Ngwaahija Sony gi oge niile di ka nbudata, kalinda na kontakti tupu inyefee Ngwaahija Sony gi maka ndozi ma o bu ndochi.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.
 - Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).
 - Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product. Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS

BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Nkwanye, ọ̀dịmara ngwaāhịa na ẹ̀nwemikikere ọ̀rụ̀nkà

©2015 Sony Mobile Communications Inc. na ndị nwere mmekọ ga na ya. Nwe ikike niile.

Xperia bu akàranhụbaāma ngwaāhịa maobu akàranhụbaāma ngwaāhịa edēbàràla nke Sony Mobile Communications Inc.

Sony bụ ọ̀dịmara ngwaāhịa maobu ọ̀dịmara ngwaāhịa edēbàràla nke ndi Sony Corporation.

Bluetooth bụ ọ̀dịmara ngwaāhịa maobu ọ̀dịmara ngwaāhịa edēbàràla nke SIG Bluetooth Inc. ma nke ọ̀bụla ejiri ruo ọ̀rụ bu akara ndi Sony bụ nke nwere ikike.

Ngwaāhịa niile na aha ụlọọrụ akporọaha ga n'ime ya bụgasị ọ̀dịmara ngwaāhịa maobu ọ̀dịmara ngwaāhịa edēbàràla nke ụlọọrụ ha di iche iche.

Ikike ɔ̀bɔ̀la nke a na-enyeghi n'ime ya bɔ̀gasi nke echekwara. Gàa na www.sonymobile.com maka ɔ̀tɔ̀tɔ̀ ozi.

www.sonymobile.com

SONY®

Sony Mobile Communications Inc.
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan

SONY®

Tlhahisoleseding ya bohlokwa

Tlhahisoleseding ya bohlokwa

©2015

Setsha sa Inthanete sa Sony bakeng sa Bareki

Ho www.sonymobile.com/support ho na le karolo ya tshetso moo thuso le maqheka di leng feela ntlheng ya menwana ya hao. Mona o tla fumana mahlale a khomphuta a morao rao le maele mabapi le ka moo o ka sebedisang sehlahiswa sa hao ka nepo.

Tshebediso le thuso

O ka tseba ho photfolio e nang le di-tshebediso tse thusang tse jwalo ka:

- Diwepesaete tsa sebakeng se le tsa lefase ho pota tse nang le thuso.
- Netweke ya lefase ho pota e nang le Dibaka tsa Kgokahanyo.
- Netweke e ikemetseng ya bathusi ba tshebediso ba Sony.
- Nako ya tshebediso. Ithute ka nako ya tshebediso ka ho *Nako ya tshebediso e lekanyeditsweng* karolo.

Ho www.sonymobile.com/support kapa www.sonymobile.com/contact, o ka thola thuso e ncha le boitsebiso. Bakeng sa tshebediso le ditirelo kapa dikarolo, ka kopo ikopanye le mothusi wa hao wa netweke.

O ka ikopanya le Dibaka tsa Khokahanyo kapa moo o rekileng sebakeng sa heno. (Difouno di lefiwa ho ya ka dichelete tsa lefase ho pota, ho akaretsa le tsa sebakeng sa heno, ntle le ha e le ya mahala.)

Ha e ba selo sa hao se batla tshebediso, ka kopo ikopanye le dealer yeo o rekileng ho yona, kapa e nngoe ya di-tshebediso sa bathekgi ba rona. Ho etsa kopo tlasa tiisetso e behetsweng meedi, ho hloka hala bopaki ba theko.

Melawana ya Tshebediso e Bolokehileng mme e Atlehileng




Ka kopo latela melaewana ena. Ho hloleha ho etsa jwalo ho ka baka monyetla wa kotsi bophelong kapa hore sehlahiswa se se sebetse.



Haeba o na le kgwao mabapi le tshebetso e nepahetseng, isa sehlahiswa ho ya hlahlojwa ke molekane wa ditokiso ya nang le tumello pele o se tjhaja kapa ho se sebedisa.

Dikgothaletso tsa tlhokomelo le tshebediso e bolokehileng ya dihlahiswa tsa rona

- Se tshware ka tlhokomelo mme o se boloke sebakeng se hlwekileng se se nang lerole.

- **Tlhokomediso!** Se ka phatloha haeba se lahlelwa mollong.
- Se ke wa se sebedisa dibakeng tseo meedi ya maemo a IP, haeba a lokeleha, a tlolwang (ho kenyeletswa botebo bo feteletseng le/kapa dikgatello tsa mokedikedi le/kapa lerole) kapa wa se beha mongobong o mongata ho feta tekanyo.
- Bakeng sa tshebetso e phethahetseng, sehlahiswa se tlameha ho se sebediswe metjhesong e ka tlase ho $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ kapa ka hodimo ho $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Se ke wa se beha metjhesong e ka hodimo ho $+60^{\circ}\text{C}(+140^{\circ}\text{F})$. 
- Se ke wa se beha pela malakabe kapa dihlahiswa tse tukang tsa kwae. 
- Se ke wa diha, wa lahla kapa wa koba sehlahiswa.
- Se ke wa leka ho qhaqholla kapa ho fetola sehlahiswa. Ke basebetsi ba dumeletsweng ba Sony feela ba tlamehang ho etsa ditokiso. 
- Hokahana le basebetsi ba dumeletsweng ba bongaka le ho bala ditaello tsa moetsi wa sesebediswa sa bongaka pele o sebedisa sehlahiswa pela dihusapelo (pacemaker) kapa thepa ya bongaka.
- Kgaotsa ho sebedisa disebediswa tsa elektroniki, kapa tima tshebediso e fetisang kgaso ka tsela ya radiyo ya sesebediswa, moo ho hlokehang kapa moo o kotjwang ho etsa jwalo.
- Se ke wa se sebedisa moo kgonahalo ya ho phatloha e leng teng.
- Se ke wa beha sehlahiswa kapa wa kenya thepa ya waelese, sebakeng se ka hodima mokotla wa moya wa kolo.
- **Temoso:** Dikarolo tsa pontsho tse petsophileng kapa tse pshatlehileng di ka baka mahlakore kapa maqhetswana a sehang a ka bang kotsi ha a thetswa.
- Se ke wa sebedisa Semamedi sa Bluetooth ditulong tseo ho tsona ho kukunelang kapa di ka bang tlasa kgatello.
- Qoba thetsano le letlalo la hao dinako tse telele. Motjheso o bakwang ke sesebediswa sa hao ha sesebediswa se fetisa kgaso o ka baka ho

tjhwatjhwasele letlalong la hao. Ho kgothaletswa hore o sebedise semamedi bakeng sa mehala e nkang nako e telele.

Bana

Tlhokomediso! Boloka thoko le moo bana ba ka fihellang. Se ke wa dumella bana ho bapala ka disebediswa kapa dikarolwana tsa tsona tse kathoko. Ba ka nna ba itematsa kapa ba lematsa bana ba bang ka tsona. Dihlahiswa di ka nna tsa ba le dikarolwana tse nyane tse ka hakolohang mme tsa baka kotsi ya ho kgama.



Phepelo ya matla (Tjhaja)

Hokela tjhaja mehloding ya matla jwalo ka ha ho tshwailwe sehlahisweng. Se ke wa e sebedisa kante ho meaho le dibakeng tse mongobo. Se ke wa fetola kapa wa tshwara thapo ka tsela eo e tla senyeha kapa ya ba tlasa kगतello. Polakolla yuniti pele o e hlwekisa. Le ka mohla o se ke wa fetola polaka. Haeba e sa lekane sehokelo, eba le sehokelo se nepahetseng se kenngwang ke ramotlakase. Ha motlakase o hoketswe ho ba le tshenyeho e itseng ya motlakase e nyane. Ho qoba hore ho be letshenyeho ena e nyane ya motlakase, hakolla motlakase ha sehlahiswa se tletse ho tjhaja. Ho sebedisa ditjhaja tse seng tsa Sony ho ka baka kotsi e eketsehileng ya poloheho.

Betri

Dibetri tse ntjha kapa tse dutseng di sa sebetse di tla ba le mothamo o fokotsehileng kamora nakwana. Tjhaja betri ka botlalo pele ho tshebediso ya pele. Sebedisa feela betri e reretsweng fono. Tjhaja betri maemong a motjhoso o dipakeng tsa +5°C(+41°F) le +45°C(+113°F). Se ke wa kenya betri ka hanong. Se ke wa dumella dikarolwana tsa betri ho thetsana le dintho tse ding tse entsweng ka tshepe. Tima sehlahiswa sa hao pele o ntsha betri. Tshebetso e ipapisitse le dithemparetjha, maqhubu a kgaso, mekgwa ya tshebediso, ditshebetso tse kgethilweng le diphetiso tsa lentse le data. Ke feela balekane ba ditokiso ba Sonyba lokelang ho ntsha le ho kenya dibetri tse aheletsweng fonong. Tshebediso ya dibetri tseo e seng tsa Sony e ka phahamisa dikotsi tsa poloheho. Tjhentjha betri feela ka betri e nngwe ya Sony e loketseng sehlahiswa ho latela maemo a IEEE-1725. Tshebediso ya betri e sa dumellwang e ka baka kotsi ya mollo, ho phatloha, ho dutla kapa kotsi e nngwe.

Ditshebeletso tse ikgethang tsa bophelo ba motho.

Dithaboletse / disebediswa tse nang le transmithara ya seyalemoya di ka nna tsa ama thepa e kentsweng ya tsa bongaka. Fokotsa kotsi ya tshitiso ka ho siya sebaka sa bohole ba 15 cm(diinche tse 6) dipakeng tsa disebediswa le

sesebediswa. Sebedisa sesebediswa sa Sony tsebeng e ka lehlakoreng le letona, ha ho hlokeha. Se ke wa beha disebediswa pakothong e sefubeng sa hao. Tima disebediswa haeba o belaela hore ho na le tshitiso. Bakeng sa hore na ha e sebediswa e atamele hakae disebedisweng tsa hao tsa bongaka, ka kopo buisana le ngaka kapa moetsi wa sesebediswa.

Ho kganna

Baetsi ba bang ba makoloi ba thibetse tshebediso ya disebediswa makoloing a entsweng ke bona ntle le haeba 'handsfree kit' ya lenakana (antenna) la kantle e tshehetsa kgokelo eo. Botsa moemedi wa moetsi wa makoloi hore o be le bonnete ba hore disebediswa kapa Bluetooth handsfree e ke ke ya ama disistimi tsa elektroniki tsa koloi. O tlameha ho ba sedi ka boqhobi ba koloi ya hao ka dinako tsohle mme melao le melawana e thibelang tshebediso ya disebediswa tsa waelese ha o qhoba e tlameha ho latelwa.

Ditshebetso tse ipapisitseng le GPS/Tulo

Dihlahiswa tse ding di fana ka ditshebetso tse ipapisitseng le GPS/Tulo. Tshebetso e fumanang tulo e fanwa "Ka tsela eo e tlang ka yona" mmoho le "Diphoso tsohle tse ka bang ho yona". Sony ha e fane ka thoholetso kapa tiisetso ya letho mabapi le ho nepahala ha tlhahisoleseding e jwalo ya tulo. Tshebediso ya tlhahisoleseding e mabapi le tulo ke sesebediswa ha e a lokela ho sitiswa mme ha ho tiiso ya ho hloka diphoso mme e ka itshetleha hodima phumaneho ya tshebetso ya netweke. Ka kopo hlokomela hore tshebediseho e ka fokotseha kapa ho thibelwa dibakeng tse itseng jwalo ka kahara meaho kapa dibakeng tse haufi le meaho.

Tlhokomediso: Se sebedise tshebediseho ya GPS ka tsela e tla baka tshitiso ha o qhoba.

Dicall tsa tshohanyetso

Di-call di ke ke tsa fuwa tiisetso tlasa maemo ohle. Le ka mohla ha o a lokela ho itshetleha hodima disebediswa dife kapa dife tsa Sony Mobile bakeng sa dikgokahano tsa bohlokwa. Di-call tsa tshohanyetso di ka nna tsa se ke tsa kgona ho etswa dibakeng tsohle, ho mefuta ya dinetweke kaofela kapa ha ditshebetso tse itseng tsa dinetweke le/kapa ditshebetso tse itseng tsa disebediswa di le tshebetsong. Ka kopo hlokomela hore disebediswa tse ding tsa Sony ha di kgone ho tshehetsa di-call tse itseng tsa lentswe, ho akarelletsa le mehala ya maemong a tsietsi.

Lenakana

Ho sebedisa lekanaka le sa maketweng ke Sony Mobile ho ka senya thaboletse ya hao, ha sitisa tshebetso ya yona, le ho hlahisa ditekanyo tsa Specific Absorption Rate (SAR) tse fetang ditekanyetso tse behilweng. Se ke wa

kwahela lenakana kaletsoho la hao kaha sena se ama boleng ba call, maemo a matla le ho ka kgutsufatsa dinako tsa ho bua le standby.

Kgahlamelo ya Maqhubu a Radio (RF) le Sekgahla sa ho Monngwa ke Mmele (Specific Absorption Rate (SAR))

Ha disebediswa kapa Bluetooth handsfree e buletswe se ntsha maqhubu a radio a matla a bobebe (radio frequency energy). Melawana ya matjhaba ya poloheho e entswe tlasa diphuputso tse keneletseng tsa saense tsa tlhahlobo ka dinako tse behilweng. Melawana ena e theha maemo a dumeletsweng a kgahlamelo/ho angwa ke maqhubu a radio. Melawana ena e kenyeletsa moedi wa poloheho o reretsweng ho fana ka tiisetso ya poloheho ho batho bohle le ho kenyeletsa diphapano dife kapa dife tse ka bang teng ditekanyetsong tsena.

Specific Absorption Rate (SAR) e sebediswa ho metha eneji ya maqhubu a radio a kenang mmeleng ha motho a sebedisa disebediswa. Boleng ba SAR bo lekannngwa boemong ba matla bo kahodimo-dimo maemong a laboratori, empa hobane disebediswa e etseditswe ho sebedisa matla a tlase haholo a hlokehang ho fihlella netweke e kgethilweng, boemo ba nnete ba SAR ba disebediswa ya tseleng ha e le tshebetsong bo ka ba katlase haholo ho boleng bona. Ha ho ba bopaki ba phapang polokehong e thehilweng hodima boleng ba SAR.

Dihlahiswa tse nang le ditransmitara tsa radio tse rekiswang naheng ya US di tlameha ho fuwa tiisetso ke ba Federal Communications Commission (FCC). Ha di hlokeha, diteko di etswa ha disebediswa e behilwe tsebeng le ha e behilweng mmeleng. Bakeng sa tshebediso ya disebediswa ka ho e boloka mmeleng, disebediswa ena e entswe diteko ha e behilwe bohole ba bonyane 15 mm thoko le mmele moo ho se nang dikarolwana dife kapa dife tsa tshepe haufinyane le disebediswa kapa ha e sebediswa mmoho le sesebediswa se e bolokang mmeleng sa nnete sa Sony Mobile se kgweswang mmeleng. Ha e sebediswa ho buletswe "Hotspot", ho lokela ho be le sebaka sa karohano ya 10 mm.

Bakeng sa tlhahisoleseding e mabapi le kgahlamelo ke maqhubu a SAR eya ho: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

Mokgwa wa sefofaneng

Tshebediseho ya Bluetooth le WLAN, haeba e fumaneha sesebedisweng, e ka bulelwa Mokgweng wa sefofaneng empa e ka thibelwa sefofaneng kapa dibakeng tse ding moo dikgaso tsa radio di thibetsweng. Ditikolohong tse jwalo, ka kopo fumana tumello e lokelang pele o bulela tshebediso ya Bluetooth kapa WLAN esitana le Mokgweng wa sefofaeng.

Malware

Malware (kgutsufatso ya malicious software) ke software e ka senyang sebediswa sa hao. "Malware" kapa ditshebediso tse kotsi di ka kenyeletsa divaerese, di- worm, spyware, le mananeo a mang a sa batleheng. Leha sesebediswa se sebedisa mehato ya tshireletso ho thibela diketso tse jwalo, Sony ha e fane ka tiisetso kapa ho bolela hore sesebediswa se ke ke sa kenelwa ke "malware". Leha ho le jwalo o ka fokotsa kotsi ya ditlhaselo tsa "malware" ka ho ba sedi ha o jarolla dikateng kapa o amohela ditshebediso, o sa bule kapa ho arabela melaetsa e tswang mehloding e sa tsejweng, ka ho sebedisa ditshebeletso tse tshepahalang ho fihlella Inthanete, le hore o jarolle dikateng disebediswa ha di tswa mehloding eo o e tsebang, e tshepahalang.

Disebediswa tse kathoko

Sebedisa feela dikarolo tse kathoko tsa nnete tsa Sony le baetsi ba ditokiso ba fuweng tumello. Sony ha e etse ditoko bakeng sa tshebediso ya disebediswa tse kathoko tsa baetsi basele. Disebediswa tse kathoko di ka ama kgahlamelo ya maqhubu a radio (RF Exposure), tshebetso ya radio, bophahamo ba modumo, polokeho motlakaseng le dibaka tse ding. Disebediswa le dikarolwana tse kathoko tsa baetsi basele di ka baka kotsi bophelong kapa polokehong ya hao.

Ditharollo tse Fihlellang/Ditlhoko tse Kgethehileng

O ka sebedisa theminale ya hao ya TTY ka sesebediswa sa hao sa Sony Mobile. Bakeng sa tlhahisoleseding e mabapi le ditshebetso tsa phihlelo le ditharollo bakeng sa batho ba nang le ditlhoko tse kgethehileng, ka kopo etela blogs.sonymobile.com/about-us/sustainability/accessibility kapa ikopanye le Sony Mobile ho 1-866-766-9374.

Ho Lahlwa ha Thepa ya Kgale ya Motlakase le ya Elektroniki (Ho sebetsang Kopanong ya Dinaha tsa Yuropo le dinaheng tse ding tsa Yuropo tse nang le disistimi tsa pokelelo ya matlakala e arohantsweng)



Letshwao lena le sesebedisweng kapa pakaneng ya sona le bontsha hore sesebediswa sena ha se a lokela ho tshwarwa jwalo ka matlakala a lapeng. Empa se tlameha ho iswa dibakeng tse lokelang tsa pokeletso bakeng sa tlhahisobotjha ya thepa ya motlakase le ya elektroniki.

Ka ho netefatsa hore sesebediswa sena se lahlwa ka tsela e nepahetseng, o tla thusa ho thibela ditlamorao tse ka nnang tsa ba mpe ho tikoloho le bophelo ba batho, e leng se ka bakwang ke ho tshwarwa hampe ha matlakala ha a sesebediswa sena. Tlhahisobotjha ya thepa e tla thusa ho baballa dihlo dilweng. Bakeng sa tlhahisoleseding e eketsehileng e mabapi le ho hlaliswa botjha ha sehlahiswa sena, ka kopo ikopanye le Ofisi ya heno ya

Masepala, tshebeletso ya heno ya tsamaiso ya matlakala, kapa lebenkele leo o rekileng sehlahiswa ho lona.

Karete ya memori

Haeba disebediswa e tla e feletse e na le karete ya memori e ka ntshuwang, hangata e ka sebediseha mmoho le selefouno e rekilweng empa e ka nna ya se ke ya sebediseha mmoho le disebediswa tse ding kapa bokgoni ba dikarete tsa tsona tsa memori. Hlahloba disebediswa bakeng sa tshebeletsano pele o di reka kapa o di sebedisa. Haeba sehlahiswa se tla le sebadi sa karete ya memori, hlahloba hore na karete ya memori e ka sebeletsana le disebediswa pele o e reka kapa o e sebedisa.

Dikarete tsa memori katlwaelo di fomatilwe pele di romelwa. Ho fomata botjha karete ya memori, sebedisa sesebediswa se sebeletsanang. Se ke wa sebedisa fomate ya sistimi ya tshebetso e tlwaelehileng ha o fomata karete ya memori khomphuteng. Bakeng sa dintlha tse feletseng, sheba ditaello tse mabapi le sesebediswa kapa ikopanye le ba lefapha la tshehetso ya bareki.

karete ya SIM

Haeba sesebediswa sa hao se na le lesoba la boholo bo tlwaelehileng la ho kenya SIM, ho kenya karete ya SIM e sa tsamaisaneng le sona (for example, a micro SIM card, a micro SIM card with a non-Sony adapter, or a standard SIM card cut into a micro SIM card size) lesobeng la karete ya SIM ho ka senya karete ya hao ya SIM kapa sesebediswa sa hao hoo se ke keng sa lokiswa. Sony Mobile ha e fane ka tiisetso ebile e ke ke ya jara bokarabelo ka tshenyoe e bakilweng ke ho sebedisa dikarete tsa SIM tse sa tsamaisaneng le sesebediswa kapa e fetotsweng.

Tlhokomedisol

Haeba sesebediswa se hloka adaptara bakeng sa ho kenngwa disebediswa kapa sesebediswa se seng, se ke wa kenya karete ka kotloloho ntle le adaptara e hlokehang.

Mehato ya tlhokomelo e mabapi le thebediso ya karete ya memori

- Se ke wa beha karete ya memori dibakeng tse mongobo.
- Se ke wa thetsa dikgokelo tsa ditheminale ka letsoho la hao kapa dikarolwana tsa tshepe.
- Seke wa otlala, wa koba, kapa wa diha karete ya memori.
- Se ke wa leka ho qhaqholla kapa wa fetola karete ya memori.

- Se ke wa sebedisa karete ya memori dibakeng tse mongobo kapa dibakeng tse ka kgakgaphehisang kapa motjhesong o mongata haholo jwalo ka ka koloing nakong ya hlabula, jwalo jwalo.
- Seke wa tobetsa kapa wa koba qetello ya adaptara ya karete ya memori ka matla a maholo.
- Se ke wa dumella ditshila, kapa dintho tse tswang ka thoko ho kena karolong ya ho kenya ya adaptara efe kapa efe ya karete ya memori.
- Hlahloba hore o kentse karete ya memori ka nepo.
- Kenya karete ya memori ho fihlella moo e fellang ka adaptareng efe kapa efe ya karete ya memori e hlokehang. Karete ya memori e ka nna ya se sebetse ka nepo haeba e sa kenngwa ka botlalo.
- Re kgothaletsa hore o etse bekapo ya khopi ya data ya bohlokwa. Ha re jare boikarabello bakeng sa tahlehelo kapa tshenyehelo ya dikateng tseo o di bolokileng karete ya memori.
- Data e rekotilweng e ka senyeha kapa ya lahleha ha o ntsha karete ya memori kapa adaptara ya karete ya memori, o tima motlakase ha o fomata, o bala kapa o ngola data, kapa o sebedisa karete ya memori dibakeng tse nang le motlakase wa setatiki o phahameng kapa dibaka tse ntshang motlakase o mongata.

Tshireletso ya tlhahisoleseding ya hao ya bohlokwa

Phumula tlhahisoleseding ya hao pele o lahla sehlahiswa sena. Ho phumula data ya hao, phumula tsohle. Ho phumula data memoring ya disebediswa ha ho netefatse hore e ke ke ya fumanwa botjha. Sony ha e fane ka tiisetso kgahlanong le ho fumanwa ha tlhahisoleseding mmeha ha e jare boikarabello ba bakeng sa ho hlalisoa ha tlhahisoleseding efe kapa efe le kamora hore o phumule tsohle.

Ho di Sebediswa tse tshohetsang ho ka sheba 3D

Ho sheba di tshwantsho tsa 3D tse nkuwang ka disebediswa ho di monitor tse di tshohetsang 3D, o ka l phumana o utlwa matlho a sa tsitsa, mokgathala, kapa ho feroha. Ho thibela matshwao a, re Kgothalletsa hore o inkutse ka mehla. Empa, o tlaamiele ho l khetela boelele le forikhwensi ya bo ikhutso o e hlokang, hoba ho fapanya ka mong. Ha e ba o iphihlela o sa tsitsa, emisa ho

sheba di Tshwantsho tsa 3D ho fihlela o ikutlwa hlapohetswe, rerisa ngaka ha ho hlokehang. Hape, lebisa ho ditaello tsa tshebediso tse filweng le sesebediswa kapa software e o hokanyileng kapa o e sebedisang ho disebediswa. Lemoha hore mahlo a bana a santse a hola (haholoholo bana ba ka tlasa ha dilemo di le 6). Rerisa tidima ya bana hoba ya mahlo pele ngwana a ka sheba ditswantsho tsa 3D, o be otiisetse hore o ela hloko di temoso the ka hodimo ha o sheba distshwantsho jwale ka tsena.

Tihokomediso ya modumo o phahameng!

Qoba medumo e phahameng e ka bang kotsi kutlong ya hao.

Tumellano ya laesense ya mosebedisi wa ho qetela

Software e fanweng le sesebediswa sena le media ya sona ke thepa ya Sony Mobile Communications Inc., le/kapa dikhampani tse sebeletsanang le yona le bafepedi ba yona le bafani ba dilaesense.

Sony e o fa laesense e sa kgetholohang mme e nang le moedi ya ho sebedisa software feela mmoho le le sesebediswa seo e kentsweng kapa e nehelanweng ho sona. Monga software a ke ke a e rekisa, a e fetisa kapa ka tsela e nngwe e fapaneng ya ho fetias.

Se ke wa sebedisa mokgwa ofe kapa ofe wa ho sibolla khoutu ya mohlodi kapa karololwana efe kapa efe ya software, ho e hlahisa botjha kapa ho hasanya software, kapa ho fetola software. O na le tokelo ya ho fetisetsa ditokelo le ditlameho tsa molao ho software ho motho wa boraro, ha feela di le mmoho le sesebediswa seo o amohetseng software mmoho le tsona, mme ha feela motho eo wa boraro a dumela ka mongolo ho tlangwa ke dipehelo tsa Laesense ena.

Laesense ena e teng nakong yohle ya bophelo ba sesebediswa sena ha se ntse se sebetsa. E ka fediswa ka ho fetisetsa ditokelo tsa hao sesebedisweng ho motho wa boraro ka mongolo.

Ho hloleha ho ikamahanya le ditlhoko le dipehelo tsena ho tla fedisa laesense hanghang.

Sony le bafepedi ba yona ba batho ba boraro le bafani ba dilaesense ba na le ditokelo tsohle, thaetlele ho le bakeng sa software. Ho fihlela moo software e nang le matheriale kapa khoutu ya motho wa boraro, batho ba boraro ba jwale e tla ba majalefa a dipehelo tsena.

Laesense ena e laolwa ke melao ya Japane. Ha ho lokeleha, se etellang pele mona se a sebetsa mabapi le ditokelo tsa ketsomolao tsa bareki.

Haeba ho etsahala hore software e tsamayang le sona kapa e fanweng mmoho le sesebediswa sa hao e fanwe mmoho le ditlhoko le dipehelo, dipehelo tse jwalo di tla laola hape thuo ya hao le tshebediso ya software.

Melawana ya Thomelo ntle:

Melawana ya Thomelo ntle: Sesebediswa kapa software di ka nna tsa itshetleha ka melawana ya thomello ya Dinaha Tsa Selekane sa Europe, le United States hammoho le ya dinaha tse ding. O tla tsamaisana le melao le melawana ena e sebetsang mme o tla fumana le ho boloka laesense leha e le efe ya ho romella le ho tlosa thepa ka hara naha e hlokalahalang bakeng sa thobello ya thepa e tlang ho wena tlasa Tumellano ena. U tlameha hore u tsebe ho romele kantle ho naha kapa u romele hape kantle ho naha Dihlahiswa ho dibakeng tsa bokgutlo tse hlwauweng ho latela di-Article in Chapter II of European Council Regulation (EC) 428/2009 u tlameha ho ikobela melawana ya U.S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) e tsamaiswang ke Department of Commerce, Bureau of Industry and Security and economic sanctions regulations (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) tse tsamaiswang ke U.S. Department of Treasury, Office of Foreign Assets Control.

Tiisetso ya Tokiso e Behetsweng moedi

Sony Mobile Communications AB, SE-221 88 Lund, Sweden, kapa khampani ya heno e sebeletsanang le yona e fana ka Tiisetso e Behetsweng moedi bakeng sa disebediswa ya hao, disebediswa tse tlieng le disebediswa ya hao ha e rekwa, le/kapa sehlahiswa sa khomphuta sa disebediswa ya hao (seo ho tloha mona se tla bitswa "Sehlahiswa").

Haeba Sehlahiswa sa hao se hloka tokiso tlasa tiisetso, ka kopo se kgutlisetse ho morekisi eo se rekilweng ho yena, kapa ikopanye le Setsi sa Mehala sa Sony Mobile se haufi le wena (ditefiso tse akaretsang naha di ka sebetswa) kapa etela www.sonymobile.com ho fumana tlhahisoleseding e feletseng.

Tiisetso ya rona ya tokiso

Ho ipapisitse le diphelelo tsa Tiisetso ena e Behetsweng Moedi, Sony e fana ka tiisetso hore Sehlahiswa sena ha se na mathata a moetso, thepa e se entseng kapa a tshebetso ya ho se etsa ka nako ya theko ya sona ke moreki. Tiisetso ena e Behetsweng Moedi e tla nka nako ya selemo se le seng (1) ho tloha ka letsatsi la pele la theko ya Sehlahiswa.

Seo re tlang ho se etsa

Haeba, nakong ya tiisetso, Sehlahiswa sena se ka hloleha ho sebetsa tlasa maemo a tlwaelehileng a tshebediso le tshebetso, ka lebaka la thepa e sa sebetseng hantle kapa ho se ahwe ka tsela e nepahetseng kapa tsebo ya mosebetsi, bahwebi ba Sony kapa barekisi ba dumeletsweng kapa balekane ba yona ba etsang ditokiso ba tla etsa, naheng/tikolohong* eo o rekileng Sehlahiswa ho yona, ka kgetho ya bona, ba etse ditokiso, ba fane ka

Sehlahiswa se seng boemong ba seo ho latela dipehelo le maemo a hlahositsweng mona kapa ba buseletse moreki tjehelete yeo a rekileng ka yona. Sony le balekane ba yona ba etsang ditokiso ba na le tokelo ya ho lefisa tshebeletso ya tokiso haeba Sehlahiswa se kgutlisitsweng se fumanwa se se tlasa tiisetso ho latela dipehelo tse hlahositsweng ka tlase mona.

Ka kopo hlokomela hore tse ding tsa di-setting tseo e leng tsa hao, dintho tseo o di jarollotseng le tlhahisoleseding e nngwe di ka lahleha ha Sehlahiswa sa hao sa Sony se ya ho lokiswa kapa o fuwa se setjha. Ha jwale Sony e ka thibelwa ka molao o amehang, ditaello tse ding kapa dithibelo tsa setegeniki hore e ka etsa kopi ya polokelo ya tlatsetso (backup) ya dintho tse itseng tse jarolotsweng. Sony ha e jare boikarabello bakeng sa tahlehelo efe kapa efe ya tlhahisoleseding ya mofuta ofe kapa ofe mme ha e na ho o lefa matshediso a letho bakeng sa tahlehelo e jwalo. O lokela ho iketsetsa dikopi tsa tlatsetso (backup) bakeng sa tlhahisoleseding yohle e bolokilweng Sehlahisweng sa hao sa Sony jwalo ka dintho tse jarolotsweng, khalendara le mabitso pele o isa Sehlahiswa sa hao sa Sony dibakeng tsa tokiso kapa ho fumantshwa se setjha.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.
 - Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).

- Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.

Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product. Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF

MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products. ** In some countries/regions additional information (such as a valid warranty card) may be requested.

Matshwao a kgwebo, dikananelo le khopiraete

©2015 Sony Mobile Communications Inc. le makalana a sebedisanang le yona. Ditokelo tsohle di sireleditswe ka molao.

Xperia ke letshwao la kgwebo kapa letshwao la kgwebo le ngodisitsweng la Sony Mobile Communications Inc.

Sony ke letshwao la kgwebo kapa letshwao la kgwebo le ngodisitsweng la Sony Corporation.

Bluetooth ke letshwao la kgwebo kapa letshwao la kgwebo le ngodisitsweng la Bluetooth SIG Inc. mme tshebediso efe kapa efe ya letshwao le jwalo ke Sony e etswa tlasa laesense.

Mabitso ohle a dihlahiswa le khampani a boletsweng ka hare mona ke matshwao a kgwebo kapa matshwao a kgwebo a ngodisitsweng a beng ba oona ka ho fapana.

Ditokelo tsohle tse sa fanwang ka ho hlaka ka hare mona di sireleditswe ka molao. Etela www.sonymobile.com bakeng sa tlhahisoleseding e eketsehileng.

isiZulu

Iwebhusaythi yakwa-Sony Consumer

Ku www.sonymobile.com/support kunengxenye yesaphothi lapho kutholakala khona usizo namathiphu. Lapha uthola ukuvuselelwa kwesofthiwe yekhompyutha yakamuva namathiphu okuthi ungawusebenzisa kanjani umkhizizo wakho ngokuyimpumelelo.

Uncedo nokweseka

Ungakwazi ukuthola uncedo olukhethekile olunje ngokulandelayo:

- AmaWeb sites wangala ekhaya kanye nawomhlaba jikelele akwesekelayo.
- iNetwork yezindawo zokuxhumana zomhlaba wonke.
- iNetwork ebanzi yabasebenzisana nabakwaSony.
- Isikhathi sesiqiniseko. Funda kabanzi ngezidingo zesiqiniseko sakho *ohlwini olukhuluma* ngeSiqiniseko sesikhashana.

Ku www.sonymobile.com/support noma www.sonymobile.com/contact, ungathola amathulusi esimanjemanje wokukusekela kanye neminingwane. Kwizidingo ezibhekene nqo nosizo oluhambelana nezindlela zokusebenza nama'features', sicela uxhumane neNetwork.

Okanye ungazixhumanisa nezindawo zethu zokuxhumana noma uxhumane nomdayisi wakho. (zindleko zokusishayela ziyafana nalezo ozikhokhela uma ushayela kwelakho, kuhlanganisa namataxes, ngaphandle kokuba inombolo uyishayelayo, yinombolo engakhokhelwa.)

Uma umkhizizo wakho udinga ukulungiswa, sicela uthintane nomdayisi othenge kuye noma enye yezindawo zosizo esisebenzisana nazo. Ukugunyaza ngaphansi kweWaranti elinganiselwe, ubufakazi bokuyithenga buyadingeka.

Imihlahlandlela Yokusetshenziswa Ngokuphephile Nangokuyikho

Sicela ulandele le mihlahlandlela. Ukwehluleka ukwenza lokho kungadala ingozi empilweni noma ukungasebenzi kahle komkhiqizo. Uma ungabaza ngokusebenza kwawo okufanele, hambisa umkhiqizo uyohlolwa wuphathina wesevisi oqinisekisiwe ngaphambi kokuwushaja noma ukuwusebenzisa.



Izincomo zokunakekela nokusebenzisa ngokuphephile imikhiqizo yethu

- Bamba ngokucophelela futhi gcina endaweni ehlanzekile engenazo izintuli.
- **Isixwayisio!** Ingase iqhume uma ilahlwa emlilweni.
- Ungayisebenzisi endaweni lapho izilinganiso zomkhawulo we-IP, uma zisebenza, zeqiwa khona (okuhlanganisa ukujula okudlulele kanye/noma izingcindezi zoketshezi kanye/noma izintuli) noma ukuchayeka kukushisa okudlulele.
- Ukuze uthole ukusebenza okungcono kakhulu, umkhiqizo akufanele usetshenziswe kumazinga okushisa angaphansi kokuthi $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ noma ngaphezulu $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Ungachayi ibhethri kumazinga okushisa angaphezu kokuthi $+60^{\circ}\text{C}(+140^{\circ}\text{F})$.
- Ungachayi kumalanganabi noma imikhiqizo kagwayi ovuthayo
- Ungawisi, ulahle noma uzame ukugobisa umkhiqizo.
- Ungaphendi noma uzame ukuqaqa noma ulungise umkhiqizo. Izisebenzi zakwa-Sony kuphela ezigunyaziwe okufanele zenze isevisi.
- Thintana nezisebenzi zokwelashwa ezigunyaziwe kanye neziqondiso zabakhiqizi bedivayisi yezokwelapha ngaphambi kokusebenzisa umkhiqizo eduze kwemishini yenhliziyo noma amanye amadivayisi ezokwelapha noma impahla.
- Yeka ukusebenzisa amadivayisi kagesi, noma uyekise umsakazo odlulisa ukusebenza kwedivayisi, lapho okudingeka khona noma lapho ocelwa ukuthi wenze kanjalo.
- Ungasebenzisi endaweni engase ibe nokuqhuma.



- Ungabeki umkhiqizo, noma ufake impahla engenazo izintambo, endaweni engenhla ezeduze kwesikhwama somoya emotweni.
- **Ukuqapha:** Izibonisi ezinofa noma eziphukile zingase zakhe imikhawulo ebukhali noma ukuhlafaka okungase kube yingozi lapho uthintana nakho.
- Ungasebenzis Amahedisethi e-Bluetooth ezindaweni ezingekho kahle noma ezingase zibe ngaphansi kwengcindezi.
- Gwema ukuthintisa esikhunjani sakho isikhathi eside. Ukushisa okwakhekayo lapho idivayisi yakho idlulisa kungase kuphazamise isikhumba sakho. Kunconywa ukuthi usebenzise amahedisethi uma uzoshaya ucingo isikhathi eside.

Izingane

Isixwayiso! Yigcine kude nezingane. Ungavumeli izingane zidlale ngamaselula noma ngezisekeli zawo. Zingazilimaza noma zilimaze abanye. Imikhiqizo ingaba nezingxenye ezincane ezingakhipheka bese zidala ingozi yokubindeka.



Amandla kagesi (Ishaja)

Xhuma ishaja emithonjeni yamandla njengoba kumakiwe kumkhiqizo. Ungayisebenzisi emnyango noma ezindaweni eziswakeme. Ungayishintshi noma ulimaze noma ugqilaze intambo. Khipha iyunithi epulakini ngaphambi kokuyihlanza. Ungalokothi ushintshe ipulaki. Uma iplagi ingangeni kule ndawo yamandla, thola abasebenza ngogesi abaqeqeshiwe bakufakele lezo zinto ezifanele zokudonsa ugesi. Uma okuphakela amandla kuxhunyiwe kunokusebenza okuncane kwamanadla. Ukugwema loko kumosheka okuncane kwamandla, nqamula okuphakela amandla uma umkhiqizo usushajeke wagcwala. Ukusebenzisa amadivaysi okushaja angagunyazie wu-Sony kungandisa izingozi zezokuphepha.

Ibhetri

Amabhethri amasha noma ahleli isikhathi eside angaba nomthamo wesikhashana omncane. Yishaje ngokugcwele ibhetri ngaphambi kokuyisebenzisa okokuqala. Yisebenzisele okuhloselwe yona kuphela. Shaja ibhetri emazingeni okushisa aphakathi kuka +5°C(+41°F) no +45°C(+113°F). Ungalifaki ibhetri emlonyeni wakho. Ungavumeli okothintana kwebhetri kuthintane nezinye izinsimbi. Cima umkhiqizo wakho ngaphambi kokukhipha ibhetri. Ukusebenza kuncika emazingeni okushisa, amandla esignali, izindlela zokusebenzisa, izimpawu ezikhethiwe kanye nokuhanjiswa kwezwi noma

kwedatha. Makube wophathina besevisi bakwa-Sony kuphela abakhipha noma abashintsha amabhethri akhelwe ngaphakathi. Ukusebenzisa amabhethri angagunyazie wu-Sony kungandisa izingozi zezokuphepha. Shintsha ibhethri kuphela ngenye ibhethri ye-Sony ehambisana nomkhqizo ngokwezinga le-IEEE-1725. Ukusebenzisa ibhethri elingagunyaziwe kungaba nengozi yomlilo, ukuqhuma, ukuvuza nezinye izingozi.

Izinto ezakhelwe wena zezokwelapha

Amadivayisi apha thekayo / Amadivayisi eneradio ingaba nomthelela ezintweni ezifakwe ngenxa yokugula okuthile. Nciphisa ingozi yokuphazamiseka ngokugcina ibanga okungenani eliwu 15 cm (6 amayintshi) phakathi kwefoni nedivayisi. Uma kunokwenzeka, sebenzisa idivayisi yakwa-Sony endlebeni yakho yangasokudla. Ungafaki idivayisi ephaketheni elisesifubeni. Cisha idivayisi uma usola ukuphazamiseka. Ukuyisebenzisa idivayisi ngenxa yezizathu zokugula, sicela uthintane nodokotela futhi nomkhandi idivayisi.

Ukushayela

Kwezinye izenzakalo, abakhi bezimoto ezithile bayakwenqabela ukusetshenziswa kwamafoni ezimotweni zabo ngaphandle uma kunekhithi eyi-handsfree enothi lwangaphandle esekela ukufakwa. Thintana nomakhi wemoto yakho ukuze uqinisekise ukuthi iselula yakho noma ihendsfree yeBluetooth ngeke kuphazamise izinto ze-elektronikhi emotweni yakho. Gxilisa ngokugcwele umqondo ekushayeleni ngasosonke isikhathi nasekuhlonipheni imithetho yangakini elawula ukusetshenziswa kwamadivayisi angenawayo ngesikhathi sokushayela.

Imisebenzi esekeleke ku-GPS/Indawo

Eminye imikhqizo ihlinzela ngemisebenzi esekeleke ku-GPS/Indawo. Umsebenzi wokuthola indawo uhlinzekwa "Njengoba unjalo" futhi "Nawo wonke amaphutha". I-Sony akukho ekuthembisayo noma ekuqinisekisayo mayelana nokunemba kwalolu lwazi lwendawo.

Ukusetshenziswa kolwazi olusekeleke kwindawo yidivayisi ngeke kungaphazamiseki noma kungabi namaphutha kuthi kungancika ekutholakaleni kwesevisi yenethiwekhi. Sicela uqaphele ukuthi ukusebenza kungancipha noma kuvimbeke ezindaweni ezithile njengaphakathi kwamabhilidi noma eduze kwamabhilidi.

Isexwayiso: Ungasebenzisi i-GPS ngendlela ezophazamisa ukushayela.

Izingcingo eziphuthumayo

Izingcingo ngeke ziqinisekiswa ngaphansi kwazo zonke izimiso. Ungalokothi wethembele ngokuphelele kumadivayisi we-Sony Mobile mayelana nokuxhumana okusemqoka. Kungenzeka izingcingo zingaphumeleli kuzo

zonke izindawo, kuwo wonke amanethiwekhi, noma uma amanye amasevisi enethiwekhi futhi/noma izici zedivayisi yeselula zisetshenziswa. Siza uqaphele ukuthi amanye amadivayisi we-Sony awakwazi ukusekela izingcingo zezwi, okuhlanganisa izingcingo zezimo eziphuthumayo.

Uthi

Ukusetshenziswa kothi lwe-divayisi olungakhangiswanga yi-Sony lungamosha uthi lwefoni, lwehlise nezinga lokusebenza kwayo, futhi lwenze nama zinga wama-Specific Absorption Rate (SAR) angaphezulu abe nokulinganiselwa. Ungalwembozi uthi ngesandla sakho ngoba lokho kuphazamisa izinga lezingcingo, amaqophelo amandla futhi kunganciphisa izikhathi zokukhuluma nezokubekwe eceleni.

Ukuvuleleka kwamagagasi omoya (RF) nereyithi yokumunca ethile (SAR)

Uma idivayisi noma ihendsfree yeBluetooth yakho ivulwa, ikhipha amazinga aphansi amandla efrikhensi yegagasi lomoya. Imikhombandlela yokuphepha yamazwe omhlaba isithuthukisiwe ngokuhlaziya izingcwaningo zezesayensi. Lemi khombandlela isungula amazinga avunyelwe okusondelana namagagasi omoya. La mazinga afaka nesilinganiso sokuphepha esiqinisekisa ukuphepha kwawo wonke umuntu kanye nokuphendula mayelana nanoma ikuphi ukuhluka okungenzeka uma kukalwa.

I-Specific Absorption Rate (SAR) isetshenziswa ukukala amandla efrikhensi yegagasi lomoya amuncwa wumzimba uma usebenzisa iselula. Inani leSAR lilalwa ngezinga eliphakeme kunawowonke eliqinisekisiwe ezimweni zaselebhu, kodwa ngenxa yokuthi idivayisi yakhelwe ukuba isebenzise amandla awubuncane bokucina adingekayo ukuthola inethiwekhi ekhethiwe, izinga langempela leSAR lingaba ngaphansi kakhulu kwaleli nani. Abukho ubufakazi bomehluko ekuphepheni okusekelele kumehluko wenani leSAR.

Imikhiqizo enokukhipha amagagasi omoya edayisa e-US kufanele iqinisekisiwe ngabe Federal Communications Commission (FCC). Uma kudingeka, kwenziwa ukuhlola uma idivayisi ibekwe endlebeni nalapho igqoke emzimbeni. Uma isetshenziswa ilenga emzimbeni, idivayisi ihlolwe khathi isebangeni okungenani elingu of 15 mm ukusuka emzimbeni zingekho izingxenyane zensimbi eduze kwefoni noma uma isetshenziswa nesisekeli esifanele sakwa Sony futhi isemzimbeni. Uma usebenzisa "iHotspot" kanengi uzoyithola ingasebenzi, isihlukaniso esingangobude obuyi-10 sisetshenzisiwe.

Ngolunye ulwazi mayelana neSAR nokusondelana nefrikhensi yamagagasi omoya, yiya ku: <http://blogs.sonymobile.com/about-us/sustainability/health-and-safety/sar/>.

i-Flight mode

Umsebenzi we-Bluetooth ne-WLAN, uma ukhona kudivaysi, ungaqaliswa ku-Flight mode kodwa hleze unqatshelwe endizeni noma kwezinye izindawo lapho kungavunyelwe ukwemukelwa kwamagagasi omsakazo. Ezimweni ezinjalo, sicela uthole ukugunyazwa okufanele ngaphambi kokuqalisa umsebenzi we-Bluetooth noma we-WLAN ngisho naku-Flight mode.

I-Malware

I-Malware (isinciphiso se-software eyingozi) yisoftware engalimaza uthi. I-Malware noma izinhlelo ezilimazayo kungahlanganisa ama-virus (amagciwane e-elektronikhi), ama-worms, i-spyware, nezinye izinhlelo ezingafuneki. Phezu kokuba idivaysi yakho izisebenzisa izinyathelo zokuvikeleka zokulwa nale mizamo, i-Sony ayithembisi ukuthi idivaysi yakho ngeke ingenwe yi-malware. Nokho unganciphisa ingozi yokuhlaselwa yi-malware ngokuqaphela uma ulanda okuqukethwe noma wamukela izinhlelo, ukwenqaba ukuvula noma ukuphendula imibiko ephuma kwimithombo engaziwa, ukusebenzisa amasevisi athembekile ukungena ku-Inthanethi, nokulanda kuphela ufake efonini yakho okuqukethwe okuvela kwimithombo eyaziwayo nethenjwayo.

Izesekeleli

Sebenzisa kuphela izesekeleli eziyizo ezigunyazwe wu-Sony nophathina basevisi abaqinisekisiwe. U-Sony akazihloli izesekeleli zamaqembu esithathu. Izesekeleli zingaphazamisa i-RF Exposure, ukusebenza komsakazo, ubukhulu bomsindo, ukuphepha kukagesi nezinye izindawo. Izesekeleli nezingxenywe zamaqembu esithathu zingaba yingozi empilweni noma ekuphepheni kwakho noma kunciphise ukusebenza.

Izixazululo Zokungena/Izidingo Ezikhethekile

Ungasebenzisa itheminali yakho ye-TTY ngedivayisi yakho ye-Sony Mobile. Ukuze uthole ulwazi olumayelana nezici zokungeneka kanye nezixazululo zabantu abanezidingo ezikhethekile, sicela uvakashele okuthi blogs.sonymobile.com/about-us/sustainability/accessibility noma uxhumane ne-Sony Mobile ku-1-866-766-9374.

Ukulahlwa Kwemphala Kagesi Endala Neye-elektrikhali (Kusebenza ku-European Union nasemazweni ase-Europe anesistimu yokuqoqa ehlukele)

Lolu phawu kule divayisi noma kuphakethe layo lubonisa ukuthi le divayisi akufanele iphathe njengodoti wasekhaya ovamile. Esikhundleni salokho izodluliselwa endaweni yokuqoqa efanele yokulondolozwa kwempahla kagesi neye-elektronikhi.



Ngokuqikela ukuthi le divayisi ilahlwa ngendlela efanele, uzosiza ukunqanda imiphumela engathandeki engase ibe khona endaweni ezungezile nasempilweni yomuntu, okungase kubangelwe ukusingathwa ngendlela engafanele yodoti wale divayisi. Ukulondolozwa kwezimpahla kuzosiza ukonga kwezinsiza ezingokwemvelo. Ukuze uthole ulwazi olwengeziwe mayelana nokulondolozwa kwale divayisi, sicela uthinte ihhovisi lakho Lomphakathi lendawo, isevisi yakho yokulahlwa kwadoti, noma isitolo lapho othenge khona le divayisi.

Imemori khadi

Uma umkhiqizo ufika uphelele nememori khadi ekhiphekhayo, ngokuvamile iyahambisana nehendsethi ethengiwe kodwa hleze ingahambisani namanye amadivaysi noma imithamo yamamemori khadi awo. Hlola ukuhambisana nememori khadi ngaphambi kokusebenza noma kokuthenga. Uma idivaysi yakho ifakwe okokufunda imemori khadi, hlola ukuhambisana nememori khadi ngaphami kokuthenga noma kokusebenzisa.

Ngokuvamile amamemori khadi afomathwa ngaphambi kokuthunyelwa.

Ukufometha kabusha imemori khadi, sebenzisa idivaysi efanelene.

Ungasebenzisi uhlelo lokufometha oluvamile lokusebenzisa uma ufometha imemori khadi kwi-PC. Ukuthola imininingwane, bheka imiyalelo yokusebensa kwedivaysi noma uthintane nabasekela amakhasimende.

i-SIM khadi

Uma idivaysi yakho yenzelwe i-sized SIM card slot esivamile, ukufaka i-SIM card engahambisani (ngokwesibonelo, imicro SIM card, i-micro SIM card engasebenzisi i-Sony adapter, noma-i- standard SIM card eyenzwe i-micro SIM card) kuyi mbhobo yeSIM ingalimaza iSim card yakho noma idivaysi yakho unomphela. i-Sony ayincephezeli noma angekhe ibe nendaba ngenxa yokulima okubangelwe ukungahambiselani noma i-SIM card eye yalungiswa.

Isexwayisol

Uma idivaysi yakho idinga i-adaptha ukuze ishuthekwe kwihendisethi noma kwenye idivaysi, ungashutheki ikhadi ngqo ngaphandle kwe-adaptha.

Okumele kuqashelwe Ngokusebenzisa iMemori Khadi

- Ungayibeki imemori khadi emhwamukeni.
- Ungazithinti izixhumi zetheminali ngezandla zakho noma ngento eyinsimbi.
- Ungayishayi, uyigobise, noma uyiwise imemori khadi.
- Ungazami ukuqaqa noma ukuguqula imemori khadi.

- Ungayisebenzisi noma ulonde imemori khadi ezindaweni ezinomswakama noma ezibolisa insimbi noma ekushiseni okweqile njengemoto evaliwe ehlobo, elangeni eliza ngqo noma eduze nehitha, njll.
- Ungacindezeli futhi ungagobisi indawo esekugcineni ye-adaptha yememori khadi ngamandla eqile.
- Ungavumeli ukungcola, idasti, noma izinto ezingaziwa zingene esikhaleni sokufaka se-adaptha yememori khadi.
- Hlola ukuthi uyishutheke kahle yini imemori khadi.
- Faka imemori khadi ingene yonke kwi-adaptha yememori khadi edingekayo. Imemori khadi ngeke isebenze kahle ngaphandle uma ifakwe ngokuphelele.
- Sincoma ukuthi wenze ikhophi yebhekhaphu yedatha ebalulekile. Asingene ekulahlekeni noma ekulimeleni kokuqokethwe okulonde kwimemori khadi.
- Idatha erekhodiwe ingalimala noma ilahleke uma ukhipha imemori khadi noma i-adaptha yememori khadi, noma uvala amandla kagesi ngenkathi ufometha, ufunda noma ubhala idatha, noma uma usebenzisa imemori khadi ezindaweni ezinogesi oqondile noma ekukhishweni kwezindima zikagesi ezinkulu.

Ukuvikelwa kolwazi lwakho siqu

Sula idatha eqondene nawe ngaphambi kokulahla umkhiqizo. Ukususa idatha, yenza i-master reset. Ukususa idatha kwimemori yefoni akuqinisekisi ukuthi ngeke isabuyiseka. I-Sony ayiqinisekisi ukungabuyiseki kwemininingwane futhi ayithwali cala ngokudalulwa kwanoma yiluphi ulwazi ngisho nangemuva kwe-master reset.

Uku thola amadiviyisi woku qhasa i 3D noku bheka ikhonolobuxhopololo

Uma u bheka umfanekiso we 3D ngale phone ku 3D-yobuxhopololo ungathola ubuhlungu emehlweni noma ukudoseka kwamehlo, noma ukubuyisa. Ukuze u nqande lama symptoms kufanele u thathe ama breaks. Kodwa, nguwe ofanelwe uku wazi ukuthi isikhathi esi ngakanani kuze uthathe ama breaksowa dingayo, ngoba iyaziwa nguwe ukuthi ama symptoms anini. Uma uthola ukuthi awu zizwa kahle, misa ukubeka i 3D until uzizwa kahle, bese u ye kudokotela uma kufuneka. Bhekisela nasezilayezweni zokuyisebenzisa efika nediviyasi noma i-software lena oxhume nayo noma lena ese fonini. Qaphela ukuthi

amehlo womtwana asa khula (Ngokukhethekile umntwana ongaphansi kweminyaka engu-6). Uconsulte udokotela wa mehlo noma i ophthalmologist phambilini u yeka umtwana a bheke imfanekiso ye 3D, u yenze ukuthi u beka loku oku baliwe phezulu.

Isexwayiso somsindol

Gwema amazinga evolumu angalimaza izindlebe.

Isivumelwano selayisense yomsebenzisi

Isofthiwe ethunyelwe nale divayisi nemidiya yayo iphethwe i-Sony Mobile Communications Inc., futhi/noma izinkampani zayo ezinhlalane kanye nabahlinzeki nabanikezi bayo belayisense.

I-Sony ikunikeza ilayisense enomkhawulo ongakhethekile ukuze usebenzise isofthiwe nedivayisi efakiwe noma ethunyelwe kuphela. Ubunikazi bale softhiwe abuthengiswa, abuthunyelwa noma abudluliswa.

Ungasebenzisi noma iziphi izindlela ukuze uthole ikhodi yomthombo nanoma iyiphi ingxenye yesofthiwe, ukhiqize kabusha futhi usabalalise isofthiwe, noma ngisho uguqule isofthiwe. Unalo ilungelo lokuthi udlulisele amalungelo nezibopho zesofthiwe kwelinye ilungu langaphandle, kuphela nje ngedivayisi othole kuyo isofthiwe, ngaphandle uma ilungu langaphandle livuma ngokubhaliwe ukuba ngaphansi kwemigomo yale Layisense.

Le layisense isebenza kukho konke ukuphila kwale divayisi. Ingase imiswe ngokudlulisa amalungelo akho edivayisi kwelinye ilungu langaphandle ngokubhala phansi.

Ukwehluleka ukuvumelana nanoma yimiphi imigomo nezimiso kuzomisa ilayisense ngokuphazima kweso.

I-Sony nabahlinzeki bayo bamalungu angaphandle nabanikezi bamalayisense banawo wonke amalungelo, igunya nesithakazelo kwisofthiwe. Ngokwezinga lokuthi isofthiwe iqukethe okubonakalayo noma ikhodi yelungu langaphandle, amalungu angaphandle anjalo kumele abe abamukeli baleyo migomo.

Ilayisense ibuswa imithetho yaseJaphani. Uma kufanelekile, okubonisiwe kusebenza kumalungelo abathengi angokomthetho.

Uma kwenzeka isofthiwe ehambelana noma enikezwe kanye nedivayisi yakho ihambisana nemigomo nezimiso ezengeziwe, amalungiselelo anjalo kumele futhi abuse ukuba kwakho nesofthiwe kanye nokuyisebenzisa.

Imithetho Yangaphandle:

Imithetho Yangaphandle: Idivayisi noma isofthiwe kungenzeka ibe nemithetho ye-European Union, yaseUnited States kanye neyakwamanye amazwe yokuthenga kanye nokuthengisa kwamanye amazwe. Uzovumelana nalemithetho kanye nezimiso futhi uzothola futhi ube nanoma iyiphi ilayisensi

yokuthenga kanye nokuthengisa kwamanye amazwe edingekayo ukuze lezimpahla ezingaphansi kwaLesivumelwano zidilivwe kuwe. Ngokungagcini nje kulokho esesikhulume ngakho, futhi ngokwesibonelo, ngeke ngamabomu uthengise noma uphinde uthengise kwamanye amazwe izimpahla ezibalulwe Ezahlukweni zoMqulu II we-European Council Regulation (EC) 428/2009 futhi ezishiwo, futhi ngokungagcini lapho, uzophinde uvumelane ne-Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) kahulumeni wase-U.S owakhishwa Umnyango Wezohwebo, i-Bureau of Industry kanye Nokuphepha kanye nemithetho yomnotho yezonswinyo (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) eyakhishwa Umnyango Wezimali wase-U.S., Ibhovisi Elilawula Izimpahla Zangaphandle.

Iwaranti Enomkhawuko

Sony Mobile Communications AB, SE-221 88 Lund, Sweden, noma inkampani esebenzisana nayo ngakini, unikeza leWaranti Enomkhawuko yeselula yakho nesesekeli sasekuqaleni esifike nayo (emva kwalokhu osekuzobizwa ngokuthi "Umkhqiqizo").

Uma uMkhqiqizo wakho udinga isevisi yewaranti, sicela uwubuyisele kulowo owuthenge kuye, noma xhumana ne-Call Center yakwa-Sony yangakini (amanani kazwelonke angasebenza) noma vakashela ku www.sonymobile.com ukuze uthole ulwazi oluthe xaxa.

Iwaranti yethu

Kuncike kwizimo zeWaranti eneMikhawulo, u-Sony uqinisekisa ukuthi lo Mkhqiqizo awutholanga kulimala ekwaxhiweni kwawo, kwizinto ezikuwo, noma kulabo abebewakha ngenkathi uthengwa umthengi okokuqala. IWaranti Enomkhawuko izothatha isikhathi esiwunyaka owodwa (1) kusukela osukwini lokuqala lokuthenga uMkhqiqizo.

Esizokwenza

Uma ngalesi sikhathi sewaranti, lo Mkhqiqizo uhluleka ukusebenza ngokujwayelekile nakumasevisi ajwayelekile, ngenxa yokulimala ekwaxhiweni kwawo, kwizinto ezikuwo noma kubuchwepheshe bawo, abasabalalisi noma ophathina besevisi abagunyazwe wu-Sony, ezweni* la uthenge khona uMkhqiqizo, bazokhetha noma bayawukhanda noma bayawushintsha uMkhqiqizo ngokuhambisana nemigomo nemibandela echazwe lapha. U-Sony nasebenzisana nabo bayaligodla ilungelo lokukhokhisa imali yokuphatha ngezandla kwabo uMkhqiqizo, uma kungukuthi ubuyiswe nje awukho ngaphansi kwesiqinisekiso ngokwalezi zimo ezingezansi.

Sicela wazi ukuthi amanye amasethingi aqondene nawe, okulandwayo noma olunye ulwazi kungalahleka uma uMkhqiqizo wakho we-Sony ukhandwa noma

ushintshwa ngomunye. Njengamanje u-Sony angavinjelwa umthetho osebenzayo, ezinye izimiselo noma imikhawulo yobuchwepheshe ekwakheni ikhophi yokugada ingozi yokulandwayo okuthile. U-Sony akazibophezeli olwazini olulahlekayo lwanoma yiluphi uhlobo futhi ngeke akukhokhele ngokulahlekelwa kwakho. Kufanele njalo wenze amakhophi agade ingozi alo lonke ulwazi olugciniwe eMkhiqizweni wakho we-Sony njengokulandwayo, ikhalenda noxhumene nabo ngaphambi kokuwuletha uMkhiqizo wakho we-Sony ukuzokhwindwa nokushintshwa.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony.
3. This warranty does not cover any failure of the Product that is due to:
 - Normal wear and tear.
 - Use in environments where relevant IP rating limitations, if applicable, are exceeded (including liquid damage or the detection of liquid inside the device resulting from such use).
 - Misuse or failure to use in accordance with the Sony instructions for use and maintenance of the Product.

Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, or acts of God.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony recommends that you use only batteries and chargers approved by Sony.

Minor variations in display brightness and colour may occur between devices. There may be tiny bright or dark dots on the display. It occurs when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between devices. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony, Sony will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony branded original accessories intended for use with the Product. Sony disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

Country specific terms

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony distributor. To find out if your Product is sold in the country you are in, please call the local Sony Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products. ** In some countries/regions additional information (such as a valid warranty card) may be requested.

Izimpawu zokuhweba, okwaziswayo nelungelo lokushicilela

©2015 Sony Mobile Communications Inc. nabahlanganyela kanye nabo. Onke amalungelo agodliwe.

I-Xperia uphawu lokuhweba noma uphawu lokuhweba olubhalisiwe le-Sony Mobile Communications Inc.

I-Sony uphawu lokuhweba noma uphawu lokuhweba olubhalisiwe le-Sony Corporation.

I-Bluetooth uphawu lokuhweba noma uphawu lokuhweba olubhalisiwe le-Bluetooth SIG Inc. futhi noma yikuphi ukusetshenziswa kwalelo phawu i-Sony kungaphansi kwelayisense.

Yonke imikhiqizo noma amagama enkampani aboniswe lapha izimpawu zokuhweba noma izimpawu zokuhweba ezibhalisiwe zabanikazi bazo abahlukile.

Noma yimaphi amalungelo angazange aboniswe lapho ngokucacile agodliwe. Vakashela www.sonymobile.com ukuze uthole ulwazi olwengeziwe.

www.sonymobile.com

SONY®

Sony Mobile Communications Inc.
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan