

SONY®

User guide

Stereo Bluetooth® Headset
SBH60

Contents


Introduction.....	3
Function overview.....	3
Hardware overview.....	3
Basics.....	5
Charging the battery.....	5
Turning the headset on and off.....	5
Adjusting the volume.....	5
Resetting and restarting.....	5
Wearing instruction.....	6
Getting started.....	7
Preparing to use your headset with a Bluetooth® device.....	7
Using your headset in wired mode.....	7
Using your headset.....	8
Using your headset to handle phone calls.....	8
Using your headset to listen to music.....	8
Using your headset with two devices simultaneously.....	8
Troubleshooting.....	10
Music from another device does not play in the headset.....	10
The headset turns off automatically.....	10
No connection between headset and other device.....	10
Unexpected behaviour.....	10
Legal information.....	11
Declaration of Conformity	12

Introduction

Function overview

Your Stereo Bluetooth® Headset SBH60 is designed to make life more convenient when you're on the go. You can use it together with an Android™ powered device such as a phone or tablet, or with a Bluetooth® compatible device such as a non-Android phone, a computer or a music player. When paired with a compatible device, you can use your headset to control incoming and outgoing phone calls or to listen to music.

Hardware overview

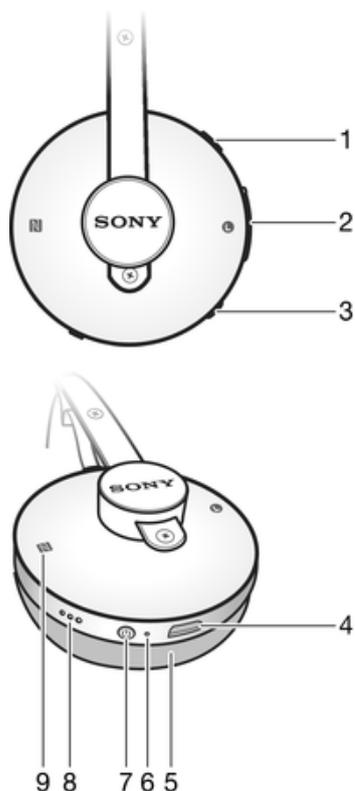

- | | | |
|---|--------------------|---|
| 1 | Music key/Call key | Press to play or pause the current media file.
Press to answer incoming calls.
Press and hold down to reject incoming calls. |
| 2 | Volume key | Press up or down to adjust the volume. |
| 3 | 3.5 mm audio jack | Connect your headset by cable if you don't want to use a wireless connection. |
| 4 | Micro USB port | Insert the USB cable here when you charge the battery. |
| 5 | Ear cushion | |
| 6 | Notification light | Flashing red light: the battery level is too low.
Flashing blue light: the headset is in pairing mode.
Flashing white light: a call is coming in. |
| 7 | | |
| 8 | | |
| 9 | | |

7 Power key Press and hold down to turn the headset on or off.
When the headset is on, briefly press to activate a notification light which shows the battery level by displaying different colours.
Flashing red light: Low battery level
Yellow light: Medium battery level
Green light: High battery level

8 Microphone


9 NFC detection area Touch other devices to this area during NFC pairing.

Basics

Charging the battery

Before using the Stereo Bluetooth® Headset SBH60 for the first time, you need to charge it for approximately 1 hour. Sony chargers are recommended.

To charge your headset

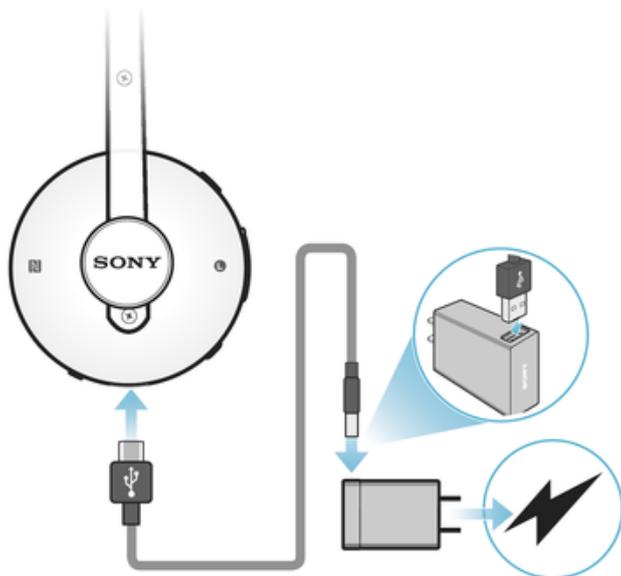

- 1 Plug one end of the USB cable into the charger.
- 2 Plug the other end of the cable into the Micro USB port of your Stereo Bluetooth® Headset SBH60.
- 3 After your headset is fully charged, the notification light turns to green.

Turning the headset on and off

To turn on the headset

- Press and hold down the Power key until a white notification light flashes once.

To turn off the headset

- Press and hold down the Power key until a white notification light flashes rapidly three times.

Adjusting the volume

To change the call or music volume

- During a call, or when listening to music, press the Volume key up or down.

Resetting and restarting

You can reset your Stereo Bluetooth® Headset SBH60 to its factory default settings. This action, which deletes all pairing-related data on your headset, is sometimes necessary if your headset stops functioning properly.

You can also force your Stereo Bluetooth® Headset SBH60 to restart in situations where it hangs or does not restart normally. When you force your headset to restart, no pairing data is deleted.

To perform a factory reset

- 1 Turn off the headset, then connect the charger so that the headset starts to charge.
- 2 Press and hold down the Call key until a white notification light starts flashing.

To force your headset to restart

- Press and hold down the Power key for at least 10 seconds until your headset restarts.

Wearing instruction

To get the best performance from the microphone, make sure to wear your headset correctly, that is, with the earphone indicated by an "L" placed on the left ear and with the earphone indicated by an "R" placed on the right ear.

Getting started

Preparing to use your headset with a Bluetooth® device

Before you can start using your headset with a Bluetooth® device, you need to pair the headset with the Bluetooth® device manually using Bluetooth® or automatically using NFC.

To manually pair your headset with a Bluetooth® device

- 1 **Bluetooth® device:** Make sure the Bluetooth® function is turned on.
- 2 Turn off your headset.
- 3 **Headset:** Press and hold down the Power key until a blue notification light starts flashing rapidly.
- 4 **Bluetooth® device:** Scan for Bluetooth® devices, then select **SBH60** in the list of available devices.
- 5 **Bluetooth® device:** Follow the pairing instructions that appear on the screen.

To automatically pair your headset with a Bluetooth® device



- 1 **Bluetooth® device:** Make sure that the NFC function is turned on and that the screen is active and unlocked.
 - 2 Place the Bluetooth® device over your headset so that the NFC detection area of each device touches the other.
 - 3 **Bluetooth® device:** Follow the pairing instructions that appear.
- ! The device used in this illustration is for illustration purposes only and may not accurately depict the actual device used.

To reconnect to a paired Bluetooth® device

- Briefly press the Call key.

Using your headset in wired mode

You can also use your Stereo Bluetooth® Headset SBH60 as a wired headset, that is, in wired mode. When you insert an audio cable into the 3.5 mm audio jack, the headset gets disconnected from any paired Bluetooth® devices and turns off automatically. You can then use the headset in wired mode, that is, using a wired connection that does not require the headset to be turned on.

Using your headset

Using your headset to handle phone calls

Use the headset to handle incoming calls, for example, to answer or reject a call. You can also switch between different ongoing calls.

- 💡 The number of ongoing calls supported can vary depending on the phone operator or network.

To answer a call with the headset

- When you hear an incoming call signal, press the Call key.

To end a call

- During an ongoing call, press the Call key.

To reject a call

- When you hear an incoming call signal, press and hold down the Call key.

To answer a second call

- When you hear an incoming call signal during an ongoing call, press the Call key. The ongoing call is put on hold.

To reject a second call

- When you hear an incoming call signal during an ongoing call, press and hold down the Call key.

To switch between ongoing calls

- Press the Call key twice in rapid succession.

Using your headset to listen to music

You can listen to music from your phone or another Bluetooth® compatible device using your headset.

To listen to music

- 1 Open the music player application in your Bluetooth® device and select a track that you want to listen to.
- 2 To play the track, press the Music key.
- 3 To pause the track, press the Music key again.

To move between tracks

- 1 To skip forward to the next track, press and hold down the Volume up key.
- 2 To skip back to the previous track, press and hold down the Volume down key.

Using your headset with two devices simultaneously

Your headset has two different connection modes: Multipoint mode and Singlepoint mode. Multipoint mode helps you manage two connections at the same time. For example, if you connect your headset with two phones, you can receive calls from both phones without having to disconnect and reconnect.

Singlepoint mode is enabled by default. If you want to use your headset with two devices at the same time, you should switch to Multipoint mode manually.

- ! You can only connect to a maximum of two devices in Multipoint mode. If you pair the headset with a third device, the first paired device gets disconnected.

To switch to Multipoint mode

- 1 Make sure that the headset is turned on.
- 2 Press and hold down both the Power key and the Volume up key until a purple notification light flashes twice.

To manually pair your headset with two Bluetooth® devices

- 1 Make sure that the headset is in Multipoint mode and is paired successfully with the first Bluetooth® device.
- 2 Turn off the headset.
- 3 **Headset:** Press and hold down the Power key until a blue notification light starts flashing rapidly.
- 4 **Second Bluetooth® device:** Scan for Bluetooth® devices, then select **SBH60** in the list of available devices. Follow the pairing instructions that appear on the screen.
- 5 **First Bluetooth® device:** To reconnect to the headset, select **SBH60** in the list of paired devices on the Bluetooth® settings screen.

To automatically pair your headset with two Bluetooth® devices

- 1 Make sure that the headset is in Multipoint mode and is paired successfully with the first Bluetooth® device.
- 2 **Second Bluetooth® device:** Make sure that the NFC function is turned on and that the screen is active and unlocked.
- 3 Place the second Bluetooth® device over your headset so that the NFC detection area of each device touches the other, then follow the pairing instructions that appear on the screen.
- 4 **First Bluetooth® device:** To reconnect to the headset, select **SBH60** in the list of paired devices on the Bluetooth® settings screen.

To switch to Singlepoint mode

- 1 Make sure that the headset is turned on and disconnected from all Bluetooth® devices.
- 2 Press and hold down both the Power key and the Volume down key until a purple notification light flashes once.

Troubleshooting

Music from another device does not play in the headset

- Make sure that the music-playing device is connected with the headset.
- Restart the music player application on the music-playing device.
- Make sure that the correct music source is selected.

The headset turns off automatically

- If the headset beeps several times shortly or a red notification light starts flashing rapidly before turning off, the battery level is low. Charge the battery.

No connection between headset and other device

- Make sure that the headset is charged and within range of the device that you want to connect to. A maximum distance of 10 metres (33 feet), with no solid objects in between, is recommended.
- Disable the Bluetooth® function in the other device so that all connections are closed, then re-enable the Bluetooth® function and pair the headset with the device again.

Unexpected behaviour

- Reset the headset.

Legal information

Sony SBH60



Prior to use, please read the *Important information* leaflet separately provided.

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©2014 Sony Mobile Communications Inc.

Interoperability and compatibility among Bluetooth® devices varies. Device generally supports products utilizing Bluetooth spec. 1.2 or higher, and Headset or Handsfree profile.


Sony is the trademark or registered trademark of Sony Corporation. Bluetooth is the trademark of the Bluetooth (SIG) Inc. and is used under license. All other marks are the property of their respective owners. All rights reserved.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

To view the CE mark and FCC ID

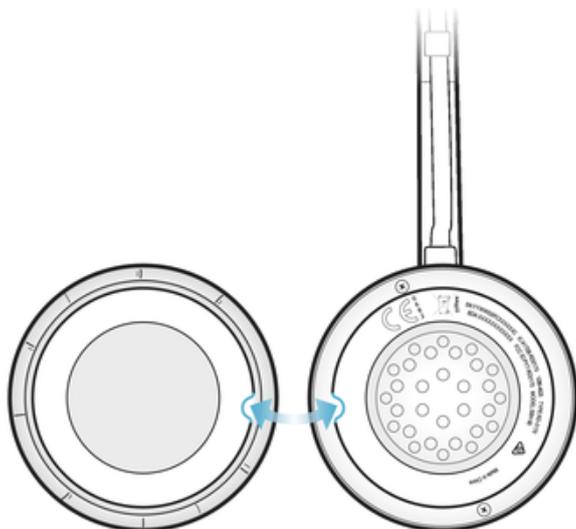

- Detach the ear cushion from the right side of your headset, that is, the side of the headset indicated by an "R".

Declaration of Conformity

We, **Sony Mobile Communications AB** of

Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony type RD-0170

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards **EN 300 328:V1.8.1, EN 301 489-3:V1.6.1, EN 301 489-7:V1.3.1, EN 301 489-17:V2.2.1 and EN 60 950-1:2006+A11:2009+A1:2010+A12:2011** following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC**.

Lund, July 2014

CE 0682



Pär Thuresson,
Quality Officer, SVP, Quality & Customer Services

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Avis d'industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et, and (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux. Le gain maximal d'antenne permis pour les dispositifs utilisant les bandes 5250-5350 MHz et 5470-5725 MHz doit se conformer à la limite de p.i.r.e. Le gain maximal d'antenne permis (pour les dispositifs utilisant la bande 5725-5825 MHz) doit se conformer à la limite de p.i.r.e. spécifiée pour l'exploitation point à point et non point à point, selon le cas. De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5 650-5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.