

SONY®

User guide

High-Resolution Audio
Headset
MDR-NC750

Contents

Getting started	3
Introduction.....	3
Overview.....	3
Learning the basics	4
Wearing the headset.....	4
Connecting your headset to your device.....	4
Digital Noise Cancelling settings in your device	5
High-Resolution Audio settings in your device	6
Legal information	7

Getting started

Introduction

The MDR-NC750 headset uses Digital Noise Cancelling and High-Resolution Audio technology to deliver crisp digital sound and clear high-quality audio.

- ! For details on device compatibility, visit www.sonymobile.com/global-en/products/accessories/high-resolution-audio-headset-mdr-nc750/specifications/.

Overview




- | | |
|---|--------------|
| 1 | Microphone |
| 2 | Earpiece |
| 3 | Headset cord |
| 4 | Clip |
| 5 | Input plug |

Learning the basics

Wearing the headset

To wear the headset

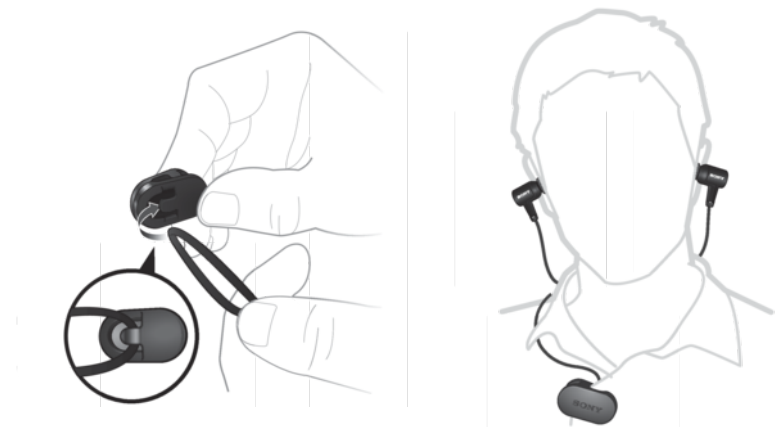

- 1 Slide the headset cord securely into the clip.
- 2 Adjust the length of the headset cord so you can insert the earplugs into your ears.
- 3 Fasten the clip to your clothes.

Connecting your headset to your device

To connect your headset to your device



- Insert the input plug of your headset into the stereo cable connector of your device.


Digital Noise Cancelling settings in your device




Your headset supports Digital Noise Cancelling technology. By using your headset with a compatible device, you can get better audio quality when listening to music in a noisy environment, such as when you are on a bus, a train or on a flight.

- 💡 Digital Noise Cancelling settings are only available on supported Sony Xperia™ devices. For details on device compatibility, visit www.sonymobile.com/global-en/products/accessories/high-resolution-audio-headset-mdr-nc750/specifications/.


To enable the noise cancelling setting in your device

- 1 Make sure your noise cancelling headset is connected to your device.
- 2 From your Home screen, tap .
- 3 Find and tap **Settings** > **Sound & notification** > **Accessory settings** > **Noise cancelling**.
- 4 Drag the slider beside **Noise cancelling** to the right.
- 5 If you want **Noise cancelling** to be enabled only during music or video playback or when the screen is active, drag the slider beside **Power saver mode** to the right.
- 6 If you want **Noise cancelling** to be enabled for as long as the headset is connected, drag the slider beside **Power saver mode** to the left.

To select your headset model name in your device

- 1 Make sure your noise cancelling headset is connected to your device and the noise cancelling setting is enabled.
- 2 From your Home screen, tap .
- 3 Find and tap **Settings** > **Sound & notification** > **Accessory settings** > **Noise cancelling** > **Headset/Headphone type**.
- 4 In the popup window that appears, select your headset model name.



To select the noise environment type in your device

- 1 Make sure your noise cancelling headset is connected to your device.
- 2 From your Home screen, tap .
- 3 Find and tap **Settings** > **Sound & notification** > **Accessory settings** > **Noise cancelling** > **Noise environment**.
- 4 Select the relevant noise environment type, then tap **OK**.

High-Resolution Audio settings in your device

Your headset supports High-Resolution Audio. When used with a compatible device, you can improve the quality of compressed music files to near High-Resolution Audio quality when using the headset.

To upgrade the quality of compressed music files

- 1 From the Home screen, tap .
 - 2 Find and tap **Settings** > **Sound & notification** > **Audio settings**.
 - 3 Drag the slider beside **DSEE HX** to the right.
-  This setting is only for wired headphones that support High-Resolution Audio.

Legal information

Sony MDR-NC750



Prior to use, please read the *Important information* leaflet separately provided.

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©2015 Sony Mobile Communications Inc.

Sony is the trademark or registered trademark of Sony Corporation.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.