

SONY®

Troubleshooting

USB Charger
UCH20C

Contents

The charging time remains the same for my device.....	3
---	---

The charging time remains the same for my device

Make sure that your device is compatible with the USB Charger UCH20C.

Compatible Xperia™ devices:

Xperia™ X Performance*

Xperia™ X*

Xperia™ XA*

Xperia™ XA Ultra*

Xperia™ XA1

Xperia™ XA1 Ultra

Xperia™ X Compact

Xperia™ XZ

Xperia™ XZ Premium

Xperia™ XZs

Xperia™ Z5 Premium*

Xperia™ Z5 Premium Dual*

Xperia™ Z5 (E6653)*

Xperia™ Z5 Dual (E6633, E6683)*

Xperia™ Z5 Compact*

Xperia™ Z3+ (E6553)*

Xperia™ Z3 Compact*

Xperia™ Z4 Tablet*

Xperia™ Z3 Tablet Compact*

Xperia™ Z3 Tablet Compact WiFi*

Xperia™ Z2 Tablet*

Xperia™ Z2 Tablet WiFi*

*A Micro USB charging cable is not included with the charger at purchase. Use the charging cable that was included with your Xperia™ device, or purchase an original Sony Micro USB charging cable separately.