



C


1.

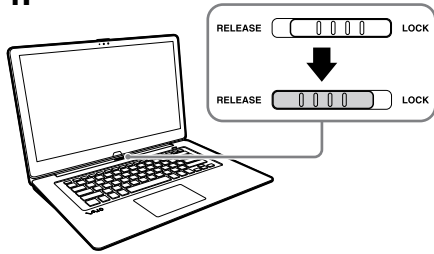


2.

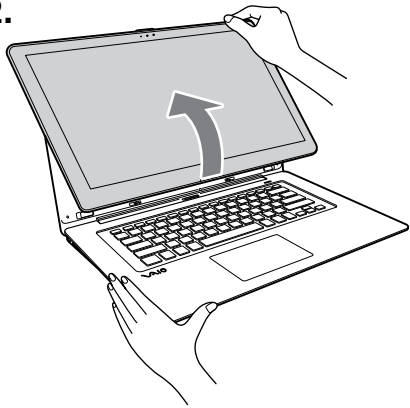


3.

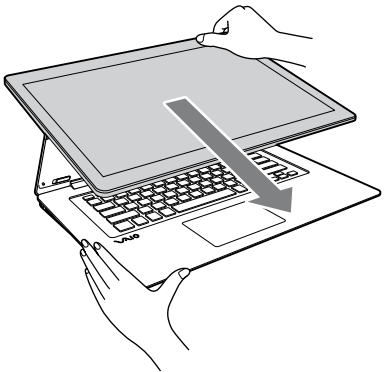


4.

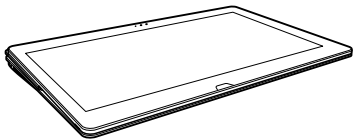**D**


1.

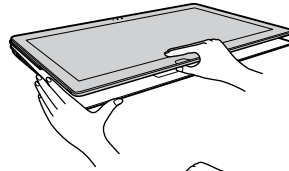


2.

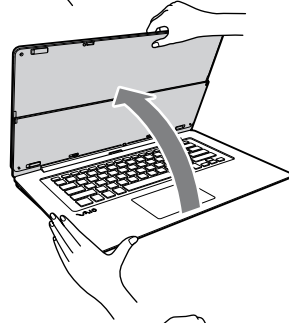


3.

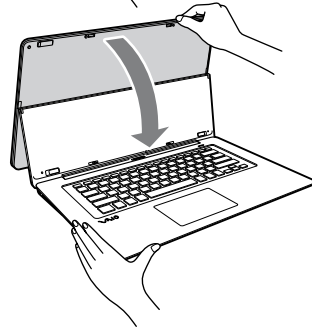

4.

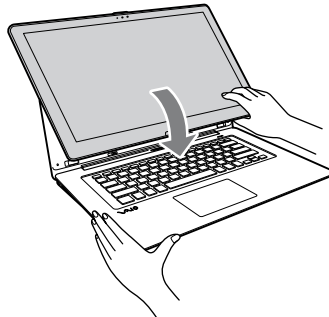

5.

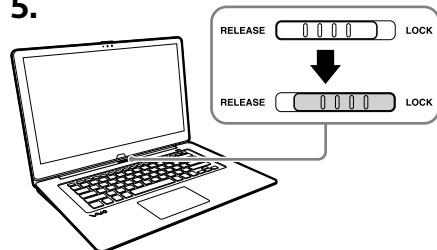**SONY****VAIO**

How to Change the Orientation of the LCD Screen

Comment changer l'orientation de l'écran ACL
 Cómo cambiar la orientación de la pantalla LCD
 Como alterar a orientação da tela LCD


4-488-194-11 (1)

© 2013 Sony Corporation / Printed in China



Laptop mode

Mode bloc-notes
Modo laptop
Modo laptop

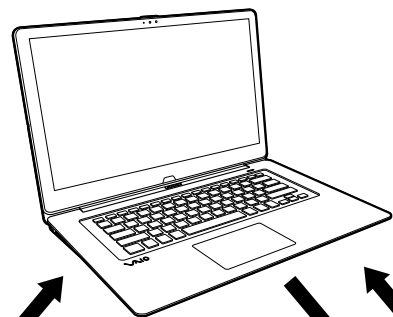

A

B


C

D



Viewer mode

Mode visionneuse
Modo display
Modo display

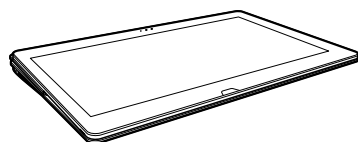


Tablet mode


Mode tablette
Modo tablet
Modo tablet

A


1.

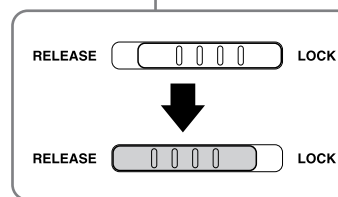

2.

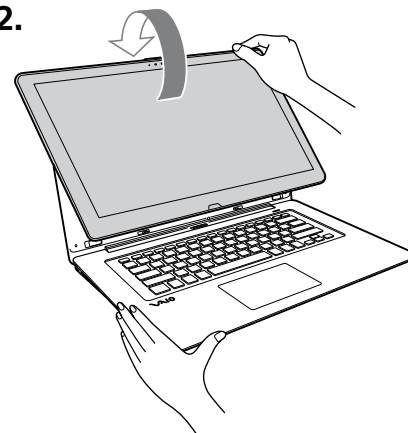


3.

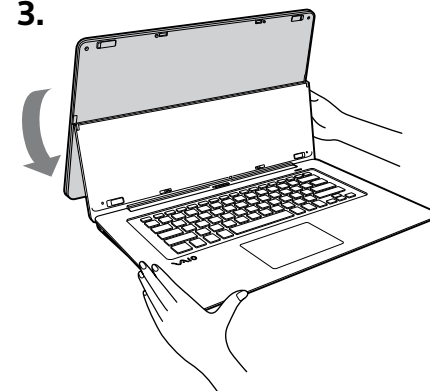


B

1.

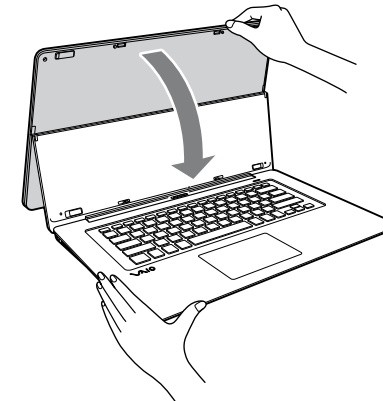

2.

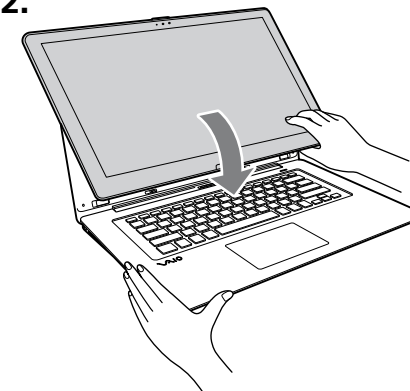

3.

