

FM/AM Compact Disc Player

Operating Instructions _____

EN

Owner's Record

The model and serial numbers are located on the bottom of the unit.

Record the serial number in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. CDX-C580 Serial No. _____

Model No. CDX-C480 Serial No. _____

For installation and connections, see the supplied installation/connections manual.

COMPACT
disc
DIGITAL AUDIO

CDX-C580

CDX-C480

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Welcome !

Thank you for purchasing the Sony Compact Disc Player. This unit lets you enjoy a variety of features by using either an optional rotary commander or an optional wireless remote.

In addition to the CD playback and the radio operations, you can expand your system by connecting an optional CD/MD changer.

Table of Contents

This Unit Only

Location of controls	4
----------------------------	---

Getting Started

Resetting the unit	6
Detaching the front panel	6
Setting the clock	7

CD Player

Listening to a CD	7
Playing a CD in various modes	8

Radio

Memorizing stations automatically	
— Best Tuning Memory (BTM)	9
Memorizing only the desired stations	9
Receiving the memorized stations	9
Storing the station names	
— Station Memo	10
Locating a station by name	
— List-up	11

Other Functions

Using the rotary commander	12
Adjusting the sound characteristics	13
Changing the sound and display settings	13

With Optional Equipment

CD/MD Changer

Playing a CD or MD	14
Scanning the tracks	
— Intro Scan	15
Playing tracks repeatedly	
— Repeat Play	16
Playing tracks in random order	
— Shuffle Play	16
Labeling a CD	
— Disc Memo (CD changer with custom file function)	16
Locating a disc by name	
— List-up (CD changer with custom file function or MD changer)	17
Selecting specific tracks for playback	
— Bank (CD changer with custom file function)	18

TV/Video (for CDX-C580 only)


Watching the TV	19
Watching a video	19
Memorizing TV channels automatically	19
Memorizing only the desired TV channels ...	19
Storing the TV channel names	20
Displaying the information stored on discs	20
Watching the TV or video while listening to a CD or MD	
— Simultaneous Play	21

Additional Information

Precautions	21
Maintenance	22
Dismounting the unit	23
Attaching the label to the rotary commander	23
Specifications	24
Troubleshooting guide	25

EN

Location of controls

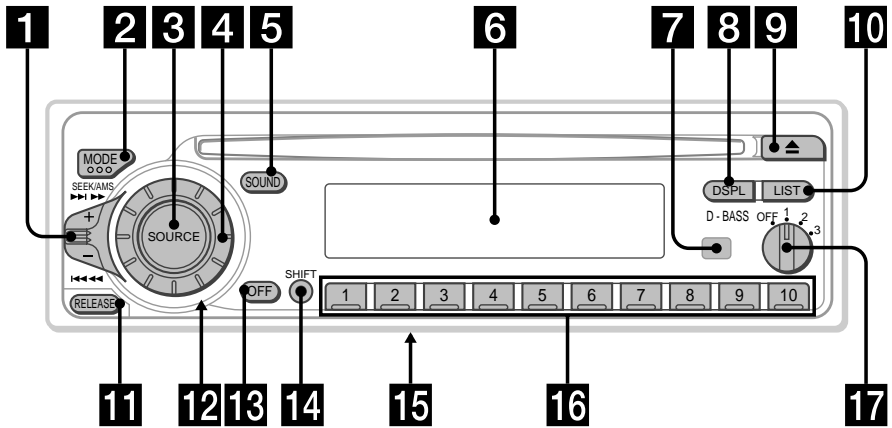


EN

Refer to the pages for details.

- 1** SEEK/AMS (seek/Automatic Music Sensor/manual search) control 8, 9, 10, 15, 18, 19
- 2** MODE (band/changer select) 9, 14, 19
- 3** SOURCE (source select) button 7, 9, 14, 15, 19, 21
- 4** Dial (volume/bass/treble/left-right/front-rear control) 7, 10, 11, 13, 16
- 5** SOUND button 13
- 6** Display window
- 7** Receptor for the optional wireless remote
- 8** DSPL (display mode change) button 7, 10, 11, 14, 15, 17
- 9** ▲ (eject) button 7
- 10** LIST button
Disc Memo 16, 17
List-up 11, 17
Station Memo 10, 11, 20
- 11** RELEASE (front panel release) button 6, 22
- 12** Reset button (located on the front side of the unit hidden by the front panel) 6
- 13** OFF button 6, 7
- 14** SHIFT button
PLAY MODE 8, 9, 10, 15, 18, 19
REP 8, 16
SET UP 7, 13, 15
SHUF 8, 16
- 15** POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT switch" in the Installation/Connections manual.
- 16** During radio reception:
Number buttons 9
During CD/MD playback:
Direct disc selection buttons 15
During TV reception (CDX-C580 only):
Number buttons 19
- 17** D-BASS dial (CDX-C480 only) 14

The illustration of the front panel in this manual is of the CDX-C480.

Optional wireless remote (RM-X47)

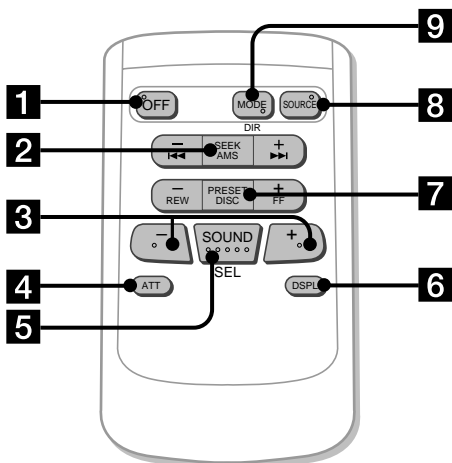

The buttons of the wireless remote operate control the same functions as those on this unit.

- 1** OFF button
- 2** SEEK/AMS button
- 3** **-** **+** buttons
- 4** ATT button
- 5** SOUND/SEL button
- 6** DSPL button

- 7** PRESET/DISC button
You cannot do manual search and manual tuning with the remote.

- 8** SOURCE button

- 9** MODE/DIR button
(MODE) controls the same function on this unit.

 
When the POWER SELECT switch is set to the **B** position, the unit cannot be operated with the wireless remote unless **(SOURCE)** on the unit is pressed or a CD is inserted to activate the unit first.

Getting Started

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Press the reset button with a pointed object, such as a ball-point pen.



Reset button

Notes


- Pressing the reset button will erase the clock and some memorized functions.
- When you connect the power supply cord to the unit or reset the unit, wait for about 10 seconds before you insert a disc. Do not insert a disc within these 10 seconds; otherwise, the unit will not be reset, and you will have to press the reset button again.

EN

Detaching the front panel

You can detach the front panel of this unit to prevent the unit from being stolen.

- 1 Press **OFF**.
- 2 Press **RELEASE** to open up the front panel. Then slide the front panel a little to the left, and pull it towards you.

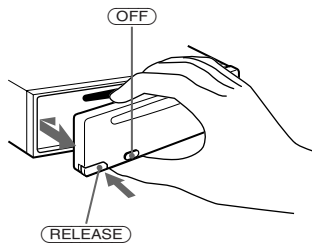


Notes

- Be sure not to drop the panel when detaching it from the unit.
- If you press **RELEASE** to detach the panel while the unit is still on, the unit will turn off automatically to prevent the speakers from being damaged.
- When you carry the front panel with you, put it in the supplied front panel case.

Attaching the front panel

Align part **A** of the front panel to part **B** of the unit as illustrated, and push until it clicks.

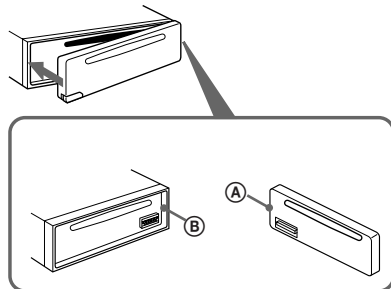

Notes

- Be sure not to attach the front panel upside down.
- Do not press the front panel hard against the unit when attaching it. Press it lightly against the unit.
- Do not press hard or put excessive pressure on the display window of the front panel.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight where there may be a considerable rise in temperature.

Caution alarm

If you turn the ignition key switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds (only when the POWER SELECT switch is set to the **A** position).

 
If you connect an optional power amplifier and do not use the built-in amplifier, the beep tone will be disabled.

Setting the clock

The clock has a 12-hour digital indication.

Example: Set the clock to 10:08

1 Press **(SHIFT)**, then press **(2)** (SET UP).




1 Press **(4)** (→).



The hour digit flashes.

 2 Set the hour.




to go backward

to go forward




 3 Press **(4)** (→).




The minutes digits flash.

 4 Set the minutes.




to go backward

 to go forward



2 Press **(SHIFT)**.

 

The clock starts.

3 Press **(SHIFT)**.

When the mode setting is complete, the normal playback mode appears.

Note

If the **POWER SELECT** switch on the bottom of the unit is set to the **(B)** position, turn the power on first, then set the clock.


CD Player

Listening to a CD

Simply insert the CD.

Playback starts automatically.

Labelled side up

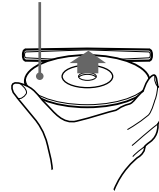

If a CD is already inserted, press **(SOURCE)** repeatedly until "CD" appears.

Elapsed playing time



Track number


Note

To play back an 8 cm (3 in.) CD, use the optional Sony compact disc single adapter (CSA-8).

To	Press
Stop playback	(STOP) or (OFF)
Eject the CD	(EJECT)

Changing the displayed items

Each time you press **(DSPL)**, the item changes as follows:

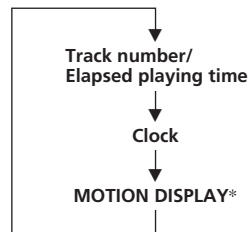

* All the items above are scrolled in the display one by one in order.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, push the SEEK/AMS control up or down momentarily.

To locate succeeding tracks



To locate preceding tracks

Locating a specific point in a track

— Manual Search

During playback, push the SEEK/AMS control up or down and hold for about two seconds. Release when you have found the desired point.

To search forward



To search backward

Note

If “LLLLL” or “RRRRR” appears in the display, that means you have reached the beginning or the end of the disc and you cannot go any further.

Playing a CD in various modes

You can play CDs in various modes:

 
- INTRO (Intro Scan) lets you play the first 10 seconds of all the tracks.
- REP (Repeat Play) repeats the current track.
- SHUF (Shuffle Play) plays all the tracks in random order.

Searching for the desired track

— Intro Scan

1 During playback, press (SHIFT).

Every time you press (SHIFT), only the items you can select light up.



2 Press (3) (PLAY MODE) repeatedly until “INTRO” appears.



3 Press (4) (→) to select “INTRO-ON.” Intro Scan starts.



4 Press (SHIFT).

To go back to the normal playback mode, select “INTRO-OFF” in step 3 above.

 
Playing tracks repeatedly

— Repeat Play

1 During playback, press (SHIFT).

2 Press (6) (REP) repeatedly until “REP-1” appears.

Repeat Play starts.



3 Press (SHIFT).

To go back to the normal playback mode, select “REP-OFF” in step 2 above.

 
Playing tracks in random order

— Shuffle Play

1 During playback, press (SHIFT).

2 Press (7) (SHUF) repeatedly until “SHUF-1” appears.

Shuffle Play starts.



3 Press (SHIFT).

To go back to the normal playback mode, select “SHUF-OFF” in step 2 above.

Memorizing stations automatically

— Best Tuning Memory (BTM)

 
The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 10 stations on each band (FM1, FM2 and AM).

Caution

When tuning in a station while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
Each time you press **(SOURCE)**, the source changes as follows:
CD ↔ TUNER

- 2 Press **(MODE)** repeatedly to select the band.
Each time you press **(MODE)**, the band changes as follows:



- 3 Press **(SHIFT)**.
- 4 Press **(3)** (PLAY MODE) repeatedly until "BTM" appears.
- 5 Press **(4)** (→) until "B.T.M" appears.
The unit stores stations in the order of their frequencies on the number buttons.
A beep sounds and the setting is stored.
- 6 Press **(SHIFT)**.

Notes

- The unit does not store stations with weak signals. If only a few stations are received, some number buttons will retain their former setting.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.
- If a CD is not in the unit, only the tuner band appears even if you press **(SOURCE)**.

Memorizing only the desired stations

You can store up to 10 stations on each band (20 for FM1 and FM2, 10 for AM) in the order of your choice.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Push the SEEK/AMS control up or down to tune in the station you want to store on the number button.
- 4 Press the desired number button (**(1)** to **(10)**) for two seconds until "MEM" appears.
The number button indication appears in the display.

Note

If you try to store another station on the same number button, the previously stored station will be erased.

Receiving the memorized stations

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Press the number button (**(1)** to **(10)**) momentarily where the desired station is stored.

If you cannot tune in a preset station

Push the SEEK/AMS control up or down momentarily to search for the station (Automatic Tuning).

Scanning stops when the unit receives a station. Push the SEEK/AMS control up or down repeatedly until the desired station is received.

Note

If the automatic tuning stops too frequently, press (SHIFT), then press (3) (PLAY MODE) repeatedly until "LOCAL" (local seek mode) is displayed. Then press (4) (→) to select "ON."

Only the stations with relatively strong signals will be tuned in.

Tip

If you know the frequency of the station you want to listen to, push the SEEK/AMS control up or down and hold for two seconds until the desired frequency appears (manual tuning).

EN

If FM stereo reception is poor

— Monaural Mode

1 Press (SHIFT), then press (3) (PLAY MODE) repeatedly until "MONO" appears.

2 Press (4) (→) repeatedly until "MONO-ON" appears.

The sound improves, but becomes monaural ("ST" disappears).

3 Press (SHIFT).

To go back to the normal mode, select "MONO-OFF" in step 2 above.

Changing the displayed items

Each time you press (DSPL), the item changes as follows:



* All the items above are scrolled in the display one by one in order.

Storing the station names

 
— Station Memo

You can assign a name to each radio station and store it in memory. The name of the station currently tuned in appears in the display. You can store up to eight characters for a station.

Storing the station names

1 Tune in a station whose name you want to store.


2 Press (LIST) for two seconds.



3 Enter the characters.

1 Rotate the dial clockwise to select the desired characters.

 (A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)




If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select "_" (under-bar).

2 Press (4) (→) after locating the desired character.

 The flashing cursor moves to the next space.



If you press (1) (←), the flashing cursor moves to the left.

3 Repeat steps 1 and 2 to enter the entire name.

 
4 To return to the normal radio reception, press (LIST) for two seconds.

Tip


To erase/correct a name, enter "_" (under-bar) for each character.

Displaying the station name

Press **(DSPL)** during radio reception.



Each time you press **(DSPL)**, the item changes as follows:

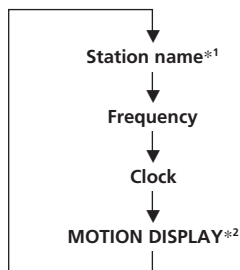

*1 If the station name of a station is not stored, "NO NAME" appears in the display for one second.

*2 All the items above are scrolled in the display one by one in order.

Erasing the station name

1 Tune in any station and press **(LIST)** for two seconds.

2 Press **(DSPL)** for two seconds.

3 Rotate the dial to select the name that you want to erase.

4 Press **(5) (ENTER)** for two seconds.

The name is erased.

Repeat steps 3 and 4 if you want to erase other names.

 
5 Press **(LIST)** for two seconds.

The unit returns to the normal radio reception mode.

Locating a station by name — List-up

1 Press **(LIST)** momentarily.

The name assigned to the station currently playing appears in the display.



2 Press **(LIST)** repeatedly until you find the desired station.

3 Press **(5) (ENTER)** to tune in the desired station.

Note

Once the station name or frequency has been displayed for five seconds, the display goes back to its normal mode. To turn off the display, press

(DSPL).


Other Functions

You can connect an optional rotary commander (RM-X4S) with this unit.

Using the rotary commander

The rotary commander works by pressing buttons and/or rotating controls. You can control the optional CD or MD changer with the rotary commander.

By pressing the button (the SOURCE and MODE buttons)

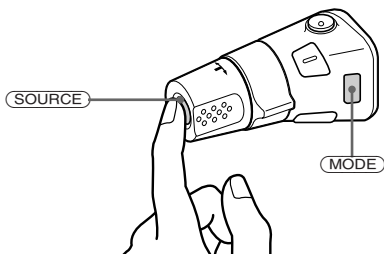

Every time you press **(SOURCE)**, the source changes as follows:

Tuner → CD → MD → TV*

* When an optional TV tuner or Video is connected.


Pressing **(MODE)** changes the operation in the following ways:

- Tuner : FM1 → FM2 → AM
- CD changer : CD1 → CD2 → ...
- MD changer : MD1 → MD2 → ...
- TV/Video : TV → VIDEO1 → VIDEO2 → ...

Tip

When the POWER SELECT switch is set to position **ⓑ**, you can turn on this unit by pressing **(SOURCE)** on the rotary commander.


By rotating the control (the SEEK/AMS control)

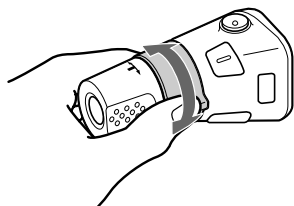

Rotate the control momentarily and release it to:

- Locate a specific track on a disc. Rotate and hold the control until you locate the specific point in a track, then release it to start playback.
- Tune in the stations automatically. Rotate and hold the control to tune in the specific station.

By pressing in and rotating the control (the PRESET/DISC control)

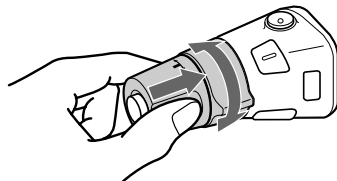


Push in and rotate the control to:


- Receive the stations memorised on the number buttons.
- Change the disc.

Other operations

Rotate the VOL control to adjust the volume.

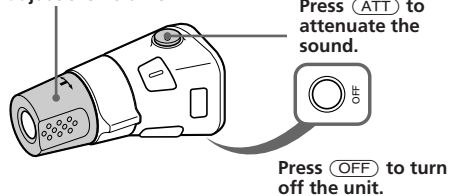

Press **(SOUND)** to adjust the volume and sound menu.

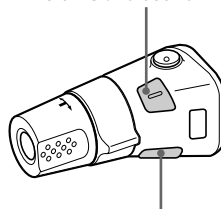


Press **(LIST)** to display the memorised names.

Changing the operative direction


The operative direction of controls is factory-set as in the illustration below.

To increase

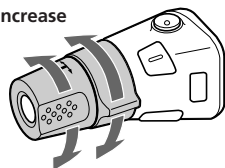

To decrease

If you need to mount the rotary commander on the right side of the steering column, you can reverse the controls operative direction.

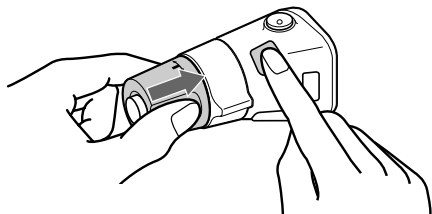

Press **(SOUND)** two seconds while pushing the VOL control.

Tip

You can control the operative direction of controls with the unit.

Adjusting the sound characteristics

You can adjust the bass, treble, balance and fader.

Each source can store the bass and treble levels independently.

1 Select the item you want to adjust by pressing **(SOUND)** repeatedly.

VOL (volume) → BAS (bass) → TRE (treble) → BAL (left-right) → FAD (front-rear)

2 Adjust the selected item by rotating the dial.

Adjust within three seconds after selecting. (After three seconds, the dial functions as volume control.)

Changing the sound and display settings

You can set:

- CLOCK (page 7).
- D.INFO (dual information) to display the clock and the play mode at the same time (ON) or to display the information alternately (OFF).
- AMBER/GREEN to change the illumination color to amber or green.
- DIM (Dimmer) to change the brightness of the display.
 - Select "ON" to dim the display.
- BEEP to turn the beep tones on or off.
- RM (Rotary Commander) to change the operative direction of the controls of the optional rotary commander.
 - Select "NORM" to use the rotary commander in the factory preset position.
 - Select "REV" when you mount the rotary commander on the right of the steering column.
- A.SCRL (Auto Scroll) (page 14).

Note

If you connect an optional power amplifier and do not use the built-in amplifier, the beep tone will be disabled.

1 Press **(SHIFT)**.

2 Press **(2) (SET UP)** repeatedly until the desired setting mode appears.

Each time you press **(2) (SET UP)**, the item changes as follows:

CLOCK → D.INFO* → AMBER/GREEN → DIM → BEEP → RM → A.SCRL*

* When you have not tune the station or there is no CD/MD being played, these items will not appear.

Note

The displayed item will differ depending on the source.

3 Press **(4) (→)** to select the desired setting (for example: ON or OFF).

4 Press **(SHIFT)**.

When the mode setting is complete, the normal playback mode appears.

Boosting bass sound


— D-bass (for CDX-C480 only)

You can enjoy clear and powerful bass sound. The D-bass function boosts the low frequency signal with a sharper curve than conventional bass boost.

You can hear the bass line more clearly even if the vocal sound is the same volume. You can emphasize and adjust the bass sound easily with the D-BASS dial. This effect is similar to the one you get when you use an optional subwoofer system.

Moreover, the Digital D-bass* function creates even sharper and more powerful bass sound than Analog D-bass.

* Digital D-bass is available during CD playback.

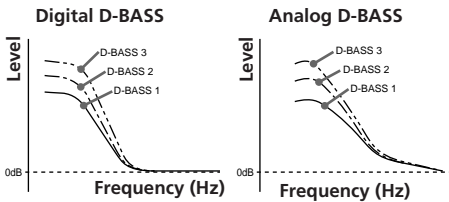

Adjusting the bass curve

Turn the D-BASS dial to adjust the bass level (1, 2 or 3).

“D-BASS” appears in the display.

During CD playback, “DIGITAL D-BASS” appears in the display.

To cancel, turn the dial to the OFF position.

Note

If the bass sound becomes distorted, adjust the D-BASS dial or volume control.

With Optional Equipment

CD/MD Changer

You can control up to 7 CD and MD changers with this unit.

Playing a CD or MD


1 Press **(SOURCE)** repeatedly to select CD or MD.

2 Press **(MODE)** until the desired changer appears (for example: CD2 or CD3).
CD/MD playback starts.

When a CD or MD changer is connected, all the tracks play from the beginning.

Changing the displayed items

Each time you press **(DISPL)** during CD/MD playback, the item changes as follows:

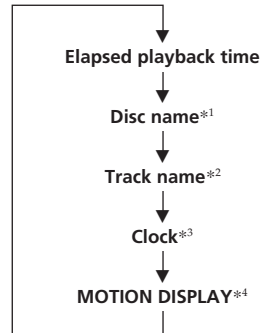

*1 If there is no prerecorded name for a CD or MD, “NO NAME” appears in the display.

*2 If the track name of an MD is not prerecorded, “NO NAME” appears in the display.

*3 If the dual information function is on, the clock does not appear in the display.

*4 All the items above are scrolled in the display one by one in order.

Tip

If the name of the MD is too long, you can scroll it across the display window by pressing **(SHIFT)**, then **(←)**.

Automatically scrolling a disc name

— Auto Scroll

If the disc name or track name on an MD exceeds 8 characters and the Auto Scroll function is on, automatically scrolls on the display as follows:

- The disc name appears when the disc has changed (if the disc name is selected).
- The track name appears when the track has changed (if the track name is selected).
- The disc or track name appears depending on the setting when you press (SOURCE) to select an MD.

If you press (DSPL) to change the display item, the disc or track name of the MD is scrolled automatically whether you set the function on or off.

1 Press (SHIFT), then press (2) (SET UP) repeatedly until "A.SCRL" appears.

2 Press (4) (→) to select "A.SCRL-ON."

3 Press (SHIFT).

To cancel Auto Scroll, select "A.SCRL-OFF" in step 2 above.

Displaying the recording date of the currently selected MD

Press (DSPL) for two seconds during MD playback.

The recording date of the track is displayed for about three seconds.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, push the SEEK/AMS control up or down once for each track you want to skip.

To locate succeeding tracks



To locate preceding tracks

Locating a specific point in a track

— Manual Search

During playback, push the SEEK/AMS control up or down and hold for about two seconds. Release when you have found the desired point.

To search forward



To search backward

Locating a disc by disc number

— Direct Disc Selection

Press the number button corresponding to the desired disc number.

The desired disc in the currently selected changer begins playback.

Scanning the tracks

— Intro Scan

You can play the first 10 seconds of all the tracks on the currently selected disc.

1 During playback, press (SHIFT), then press (3) (PLAY MODE) repeatedly until "INTRO" appears.

2 Press (4) (→) to select "INTRO-ON." Intro Scan starts.

3 Press (SHIFT).

To go back to the normal playback mode, select "INTRO-OFF" in step 2 above.

Playing tracks repeatedly

— Repeat Play

You can select:

- REP-1 to repeat a track.
- REP-2 to repeat a disc.

1 During playback, press **(SHIFT)**.

2 Press **(6)** (REP) repeatedly until the desired setting appears.



Repeat Play starts.

3 Press **(SHIFT)**.

To go back to the normal playback mode, select "REP-OFF" in step 2 above.

EN

Playing tracks in random order — Shuffle Play

You can select:

- SHUF-1 to play the tracks on the current disc in random order.
- SHUF-ALL to play all the tracks in random order (for CD changer(s) only).

1 During playback, press **(SHIFT)**.

2 Press **(7)** (SHUF) repeatedly until the desired setting appears.



Shuffle Play starts.

* "SHUF-ALL" is available for CD changer(s) only.

3 Press **(SHIFT)**.

 
To go back to the normal playback mode, select "SHUF-OFF" in step 2 above.

Labeling a CD — Disc Memo

(CD changer with custom file function)

You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can locate the disc by name (page 17) and select the specific tracks for playback (page 18).


1 Play the CD and press **(LIST)** for two seconds.



2 Enter the characters.

1 Rotate the dial clockwise to select the desired characters.

 
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)



If you rotate the dial counterclockwise, the characters appear in reverse order. If you want to enter a blank space between characters, select "_" (under-bar).

2 Press **(4)** (→) after locating the desired character.

 The flashing cursor moves to the next space.



If you press **(1)** (←), the flashing cursor moves to the left.

3 Repeat steps **1** and **2** to enter the entire name.

 
3 To return to the normal CD playback mode, press **(LIST)** for two seconds.

Tip


To erase/correct a name, enter "_" (under-bar) for each character.

Displaying the disc memo

Press **(DSPL)** during CD playback.



Each time you press **(DSPL)** during CD playback, the item changes as follows:

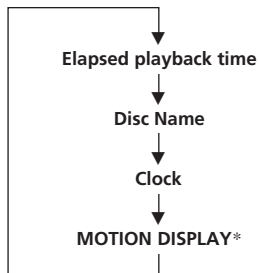

* All the items above are scrolled in the display one by one in order.

Erasing the disc memo

 
- 1 Select the CD changer (page 14).
- 2 Press **(LIST)** for two seconds.
- 3 Press **(DSPL)** for two seconds.
- 4 Rotate the dial to select the name that you want to erase.
- 5 Press **(5) (ENTER)** for two seconds.
The name is erased.
Repeat steps 4 and 5 if you want to erase other names.
- 6 Press **(LIST)** for two seconds.
The unit returns to the normal CD playback mode.

Locating a disc by name

— List-up (CD changer with custom file function or MD changer)

You can use this function with discs that have been assigned a custom name. For more information on disc names, refer to “Labeling a CD.”

- 1 Press **(LIST)** momentarily.
The name assigned to the disc currently playing appears in the display.



- 2 Press **(LIST)** repeatedly until you find the desired disc.
- 3 Press **(5) (ENTER)** to play back the disc.

Notes

- Once a disc name has been displayed for five seconds, the display goes back to its normal playback mode. To turn off the display, press **(DSPL)**.
- The track names are not displayed during MD playback.
- If there are no discs in the magazine, “NO DISC” appears in the display.
- If a disc has not been assigned a custom file, “*****” appears in the display.
- If the disc information has not been read by the unit, “NOT READ” appears in the display. To load the disc, first press the number button, then choose the disc that has not been loaded.
- The information appears only in upper case. There are also some letters which cannot be displayed (during MD playback).

 
Selecting specific tracks for playback

— Bank (CD changer with custom file function)

If you label the disc, you can set the unit to skip tracks and play only the tracks you want.

- 1 Start playing the disc and press (SHIFT). Then press (3) (PLAY MODE) for two seconds.

Bank edit mode



Note

If you have not labeled the disc, the bank edit mode does not appear. To go back to the normal playback mode, press (SHIFT).

- 2 Push the SEEK/AMS control up or down to select the track number you want to skip and press (5) (ENTER).



The indication changes from "PLAY" to "SKIP." If you want to return to "PLAY," press (5) (ENTER) again.

- 3 Repeat step 2 to set the "PLAY" or "SKIP" mode on all the tracks.
- 4 Press (3) (PLAY MODE) for two seconds. The unit returns to the normal CD playback mode.
- 5 Press (SHIFT).

Notes

- You can set the "PLAY" and "SKIP" mode on up to 24 tracks.
- You cannot set the "SKIP" mode on all the tracks.

 
Playing the specified tracks only

You can select:

- BANK-ON to play the tracks with the "PLAY" setting.
- BANK-INV (Inverse) to play the tracks with the "SKIP" setting.

- 1 During playback, press (SHIFT), then press (3) (PLAY MODE) repeatedly until "BANK" appears.

- 2 Press (4) (→) repeatedly until the desired setting appears.



Playback starts from the track following the current one.

- 3 Press (SHIFT).

To go back to the normal playback mode, select "BANK-OFF" in step 2 above.

With Optional Equipment TV/Video

You can connect an optional TV tuner and TV monitor with this unit (For CDX-C580 only).

Watching the TV

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Push the SEEK/AMS control up or down to select the desired TV band.

Watching a video

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(MODE)** repeatedly to select "VIDEO 1."
Play back the video.

Note
"VIDEO 2" appears if the VIDEO 2 terminal of the TV monitor is selected.

Memorizing TV channels automatically

The unit selects the TV channels with the strongest signals and memorizes them in the order of their frequency.

Caution

When tuning in a station while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "AUTO MEM" appears.

- 3 Press **(4)** (→).

The unit stores TV channels in the order of their frequencies on the number buttons. A beep sound and the setting is stored.

- 4 Press **(SHIFT)**.

Notes

- The unit does not store TV channels with weak signals. If only a few TV channels are received, some number buttons will remain empty.
- When a preset number is indicated in the display, the unit starts storing TV channels from the one currently displayed.

Memorizing only the desired TV channels

You can store up to 10 channels on the number buttons in the order of your choice.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Push the SEEK/AMS control up or down to tune in the TV program you want to store on the number button.
- 3 Keep the desired number button (**(1)** to **(10)**) pressed for two seconds until you hear a beep tone.
The number button indication appears in the display.

Note

If you try to store another program on the same number button, the previously stored program will be erased.


Storing the TV channel names

Follow the steps in "Storing the station names" (page 10).

Displaying the TV or radio station names

Press **(LIST)** momentarily during TV or radio reception.

Example: When receiving the FM1 band

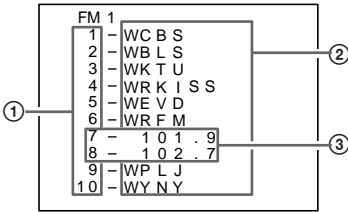

- ① Preset number
- ② Stored station names
- ③ Frequencies*

* If the name of a station is not stored, the frequency of that station will be displayed instead.

Notes

- It may take some time before all indications appear in the display.
- The TV monitor does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in the simultaneous play mode.

Turning off the display


During radio reception, press **(LIST)** again.

During TV reception, the list display on the TV monitor will automatically turn off after a few seconds.

Displaying the information stored on discs

Press **(LIST)** momentarily during CD/MD playback.

Example: When CD changer 1 is selected.

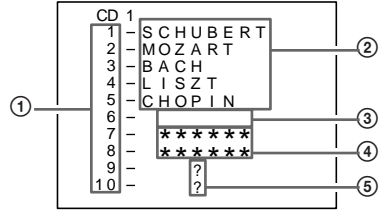

- ① Disc numbers
- ② Titles stored as custom files
- ③ No disc is loaded*¹
- ④ No stored titles*²
- ⑤ TOC information has not been identified yet*³

*¹ A blank space is displayed next to a disc numbers representing empty slots in the disc magazine.

*² If a title is not registered in the custom file, "*****" is displayed.

*³ If the disc information has not been read yet, "?" is displayed.

Notes

- It may take some time until all indications appear in the display.
- The TV program does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in the simultaneous play mode.

 
Turning off the display

Press **(LIST)** again.


Watching the TV or video while listening to a CD or MD — Simultaneous Play

The simultaneous play function does not work while you are listening to the radio.


1 Press **(SOURCE)** for two seconds.




2 Press **(1) (←)**.

 

 
3 Press **(SOURCE)** repeatedly to select a CD or MD.



4 Press **(4) (→)**.

 

 5 Press **(SOURCE)** repeatedly to select a TV or video.



6 Press **(SOURCE)** for two seconds.
Simultaneous Play starts.

Returning to normal mode

To cancel the CD or MD, follow the steps above and select "--" in step 3.

To cancel the TV or video, follow the steps above and select "--" in step 5.

Notes

If you press the EJECT button on a CD/MD changer while the unit is in simultaneous play mode, Simultaneous Play is canceled.

Additional Information

Precautions

- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of two-speaker systems, set the fader control to the centre position.
- If your car is equipped with a power aerial, note that it will extend automatically while the unit is operating.

 
If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Notes on handling CDs

A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows. Handle the disc by its edge. To keep the disc clean, do not touch the surface.




Do not stick paper or tape on the labelled surface.



EN

TV/Video/Additional Information

Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car.

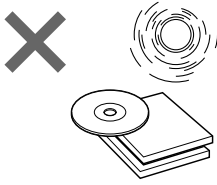

Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the centre out.

Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.



EN

Note on moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the CD player. Should this occur, the unit will not operate properly. In this case, remove the disc and wait for about an hour until the moisture evaporates.


When you play 8 cm (3 in.) CDs

Use the optional Sony compact disc single adapter (CSA-8) to protect the CD player from being damaged.

Maintenance

Fuse replacement

When replacing the fuse, be sure to use one that matches the amperage described on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

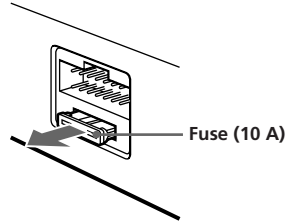


Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. To prevent this, open the front panel by pressing (RELEASE), then detach it and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

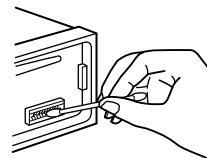


Main unit

 


Back of the front panel


Dismounting the unit

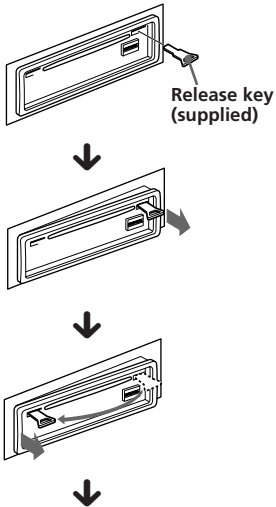

Pull the unit out while the release key is inserted.


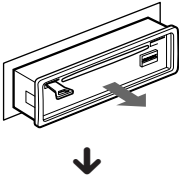


Press the clip inside the front cover with a thin screwdriver, and lever the front cover free.

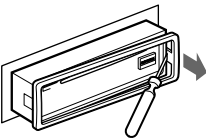

Attaching the label to the rotary commander

You can control this unit with the optional rotary commander (RM-X4S). Several labels are supplied with the rotary commander. Attach the label that matches the functions of this unit and the mounting position of the rotary commander. After you mount the rotary commander, attach the label as in the illustration below.

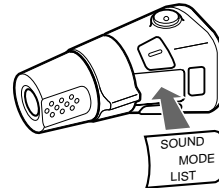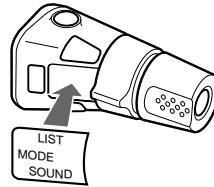

EN

Additional Information

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

17 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

Other specifications

CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	90 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 μ W*

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Tuner section

FM

Tuning range	87.5 – 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	65 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	1.0 % (stereo), 0.5 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	2 dB

AM

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 μ V

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	40 W \times 4 (at 4 ohms)

General

Outputs	Line outputs (2) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead
Tone controls	Bass \pm 10 dB at 100 Hz Treble \pm 10 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 \times 50 \times 185 mm (7 ¹ / ₈ \times 2 \times 7 ³ / ₈ in.) (w/h/d)
Mounting dimensions	Approx. 182 \times 53 \times 162 mm (7 ¹ / ₄ \times 2 ¹ / ₈ \times 6 ¹ / ₂ in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb. 10 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)
Optional accessories	Rotary commander RM-X45 Wireless remote RM-X47 BUS cable (supplied with an RCA pin cord) RC-61 (1 m), RC-62 (2 m) RCA pin cord RC-63 (1 m) Cleaning cloth XP-CD1 Compact disc single adapter CSA-8
Optional equipment	CD changer CDX-705 (10 discs), CDX-T65 (6 discs), CDX-T62 (6 discs) MD changer MDX-60, MDX-61 Source selector XA-C30 TV tuner XT-40V, etc (CDX-C580 only)

Design and specifications are subject to change without notice.

Troubleshooting guide

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

General

Problem	Cause/Solution
No sound.	<ul style="list-style-type: none">• Rotate the dial in a clockwise direction to adjust the volume.• Set the fader control to the center position for two-speaker systems.
The contents of the memory have been erased.	<ul style="list-style-type: none">• The power cord or battery has been disconnected.• The reset button has been pressed. → Store again into the memory.
Indications do not appear in the display.	Remove the front panel and clean the connectors. See "Cleaning the connectors" (page 22) for details.
No beep tone.	<ul style="list-style-type: none">• An optional power amplifier is connected and you are not using the built-in amplifier.• The beep tone is attenuated (page 13).

CD/MD playback

Problem	Cause/Solution
A disc cannot be loaded.	<ul style="list-style-type: none">• Another CD is already loaded.• The CD was forcibly inserted upside down or in the wrong way (MD).
Play does not begin.	Defective MD or dusty CD.
A disc is automatically ejected.	The ambient temperature exceeds 50°C (122°F).
The operation buttons do not function.	Press the reset button.
The sound skips due to vibration.	<ul style="list-style-type: none">• The unit is installed at an angle of more than 60°.• The unit is not installed in a sturdy part of the car.

Radio reception

Problem	Cause/Solution
Preset tuning is not possible.	<ul style="list-style-type: none">• Store the correct frequency in the memory.• The broadcast signal is too weak.
Automatic tuning is not possible.	The broadcast signal is too weak. → Use manual tuning.
The "ST" indication flashes.	<ul style="list-style-type: none">• Tune in the frequency precisely.• The broadcast signal is too weak. → Set to the MONO mode (page 10).

Error displays (when optional CD/MD changer is connected)

The following indications will flash for about five seconds, and an alarm sound will be heard.

Display	Cause	Solution
NO MAG	The disc magazine is not inserted in the CD/MD changer.	Insert the disc magazine with discs into the CD/MD changer.
NO DISC	No disc is inserted in the CD/MD changer.	Insert discs in the CD/MD changer.
NG DISCS	A CD/MD cannot play because of some problem.	Insert another CD/MD.
ERROR* ¹	A CD is dirty or inserted upside down.* ²	Clean or insert the CD correctly.
	An MD does not play because of some problem.* ²	Insert another MD.
BLANK* ¹	No tracks have been recorded on an MD.* ²	Play an MD with tracks recorded on it.
RESET	The CD/MD changer cannot be operated because of some problem.	Press the reset button of the this unit.
NO READY	The lid of the MD changer is open or MDs are not inserted properly.	Close the lid or inserted the MDs properly.
HI TEMP	The ambient temperature is more than 50°C.	Wait until the temperature goes down below 50°C.

*¹ When an error occurs during playback of an MD or CD, the disc number of the MD or CD does not appear in the display.

*² The disc number causing the error appears in the display.

If the above-mentioned solutions do not help improve the situation, consult your nearest Sony dealer.

