

FM/AM Compact Disc Player

Operating Instructions _____

US

Owner's Record

The model and serial numbers are located on the bottom of the unit.

Record these numbers in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. CDX-L550X Serial No. _____

For installation and connections, see the supplied installation/connections manual.



CDX-L550X

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Welcome !

Thank you for purchasing this Sony Compact Disc Player. You can enjoy its various features even more with:

- CD TEXT information (displayed when a CD TEXT disc* is played).
- **Optional controller accessories**
 - Rotary commander RM-X4S
 - Card remote commander RM-X114

* A CD TEXT disc is an audio CD that includes information such as the disc name, artist name, and track names. This information is recorded on the disc.

Table of Contents

| | |
|----------------------------|---|
| Location of controls | 4 |
| Precautions | 6 |
| Notes on discs | 6 |

Getting Started

| | |
|---------------------------------|---|
| Resetting the unit | 7 |
| Detaching the front panel | 8 |
| Setting the clock | 9 |

CD Player

| | |
|--------------------------------|----|
| Playing a disc | 9 |
| Display items | 10 |
| Playing tracks repeatedly | |
| — Repeat Play | 10 |
| Playing tracks in random order | |
| — Shuffle Play | 10 |

Radio

| | |
|---|----|
| Storing stations automatically | |
| — Best Tuning Memory (BTM) | 11 |
| Receiving the stored stations | 11 |
| Storing only the desired stations | 12 |
| Storing station names | |
| — Station Memo | 12 |
| Locating a station by name | |
| — List-up | 13 |

Other Functions

| | |
|---|----|
| Using the rotary commander | 14 |
| Adjusting the sound characteristics | 15 |
| Quickly attenuating the sound | 15 |
| Changing the sound and display settings | |
| — Menu | 16 |
| Selecting the sound position | |
| — “My Best sound Position (MBP)” | 17 |
| Setting the equalizer | 17 |

 
Additional Information

| | |
|-------------------------------|----|
| Maintenance | 18 |
| Removing the unit | 19 |
| Specifications | 20 |
| Troubleshooting | 21 |
| Error displays/Messages | 22 |

Location of controls

Refer to the pages listed for details.


CD : During Playback **RADIO** : During radio reception **MENU** : During menu mode

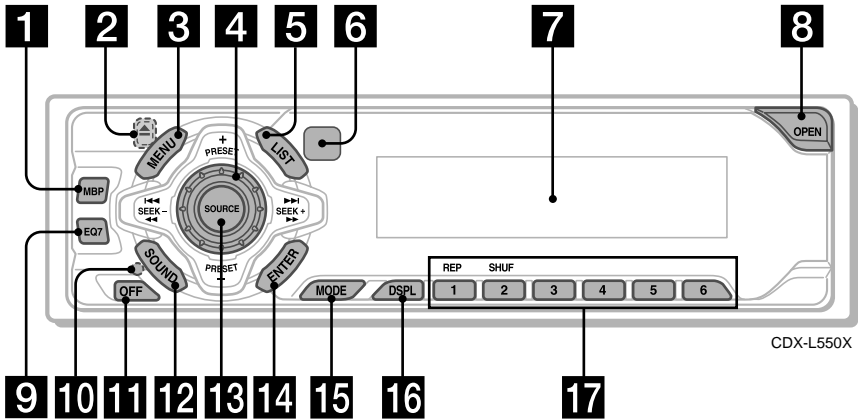


- 1** MBP (My Best sound Position) button 17
- 2** ▲ (eject) button (located on the front side of the unit, behind the front panel) 9
- 3** MENU button 9, 11, 12, 13, 16, 18
- 4** Volume control dial
- 5** LIST button 13
- 6** Receptor for the card remote commander
- 7** Display window
- 8** OPEN button 8, 9
- 9** EQ7 button 17
- 10** RESET button (located on the front side of the unit, behind the front panel) 7
- 11** OFF (Stop/Power off) button* 8, 9
- 12** SOUND button 15, 17
- 13** SOURCE (Power on/Radio/CD) button 8, 9, 11, 12, 17

- 14** ENTER button
 - RADIO** 13
 - MENU** 9, 11, 12, 13, 16, 18
- 15** MODE button 11, 12
- 16** DSPL (display mode change) button 10, 13
- 17** Number buttons
 - CD**
 - ① REP 10
 - ② SHUF 10
 - RADIO** 11, 12

 * **Warning when installing in a car without an ACC (accessory) position on the ignition key switch**
 Be sure to press **OFF** on the unit for 2 seconds to turn off the clock display after turning off the engine.
 Otherwise, the clock display does not turn off and this causes battery drain.

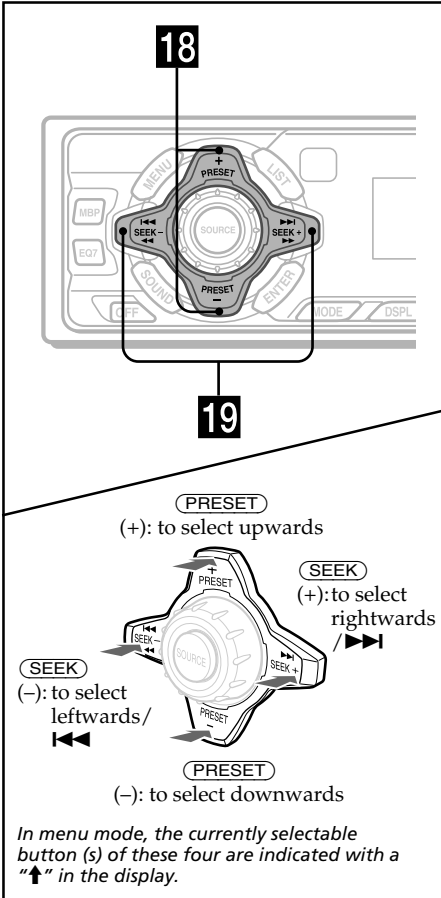

 **Card remote commander
RM-X114 (optional)**

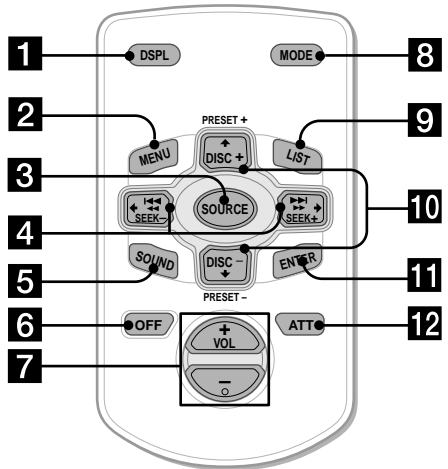

The corresponding buttons of the card remote commander control the same functions as those on this unit.

- 1** DSPL button
- 2** MENU button
- 3** SOURCE button
- 4** SEEK (←/→) buttons
- 5** SOUND button
- 6** OFF button
- 7** VOL (+/-) buttons
- 8** MODE button
- 9** LIST button
- 10** PRESET (↑/↓) buttons
- 11** ENTER button
- 12** ATT button

- 18** PRESET buttons (+/-)
RADIO 11, 13
MENU 9, 11, 12, 13, 16, 18
- 19** SEEK buttons (-/+)
CD 9
RADIO 11, 12
MENU 9, 12, 16, 18

Note
If the unit is turned off by pressing **OFF** for 2 seconds, it cannot be operated with the card remote commander unless **SOURCE** on the unit is pressed, or a disc is inserted to activate the unit first.

Tip
Refer to "Replacing the lithium battery" for details on how to replace the batteries (page 19).

Precautions

- If your car was parked in direct sunlight, allow the unit to cool off before operating it.
- Power antennas will extend automatically while the unit is operating.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Moisture condensation

 
On a rainy day or in a very damp area, moisture condensation may occur inside the lenses and display of the unit. Should this occur, the unit will not operate properly. In such a case, remove the disc and wait for about an hour until the moisture has evaporated.

To maintain high sound quality


Be careful not to splash juice or other soft drinks onto the unit or discs.

Notes on discs


- To keep the disc clean, do not touch the surface. Handle the disc by its edge.
- Keep your discs in their cases or disc magazines when not in use. Do not subject the discs to heat/high temperature. Avoid leaving them in parked cars or on dashboards/rear trays.

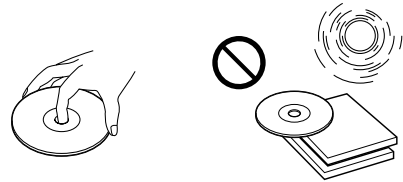

 - Do not attach labels, or use discs with sticky ink/residue. Such discs may stop spinning when used, causing a malfunction, or may ruin the disc.

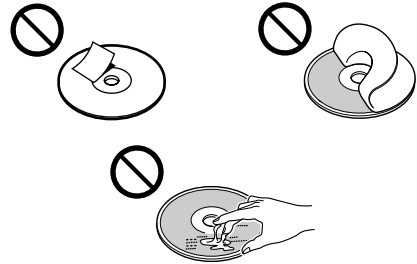

- Discs with special shapes (heart-shaped discs, octagonal discs, etc.) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.
- You cannot play 8 cm (3 in.) CDs.
- Before playing, clean the discs with a commercially available cleaning cloth. Wipe each disc from the center out. Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray intended for analog discs.

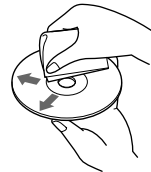 

Notes on CD-R discs

- You can play CD-Rs (recordable CDs) designed for audio use on this unit. Look for this mark to distinguish CD-Rs for audio use.



This mark denotes that a disc is not for audio use.



 
- Some CD-Rs (depending on the equipment used for its recording or the condition of the disc) may not play on this unit.
 - You cannot play a CD-R that is not finalized*.
- * A process necessary for a recorded CD-R disc to be played on the audio CD player.

Getting Started

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Remove the front panel and press the RESET button with a pointed object, such as a ball-point pen.



RESET button

Note

Pressing the RESET button will erase the clock setting and some stored contents.

Detaching the front panel

You can detach the front panel of this unit to protect the unit from being stolen.

Caution alarm

 
If you turn the ignition switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds. If you connect an optional amplifier and do not use the built-in amplifier, the beep sound will be deactivated.

1 Press (OFF)*.

CD playback or radio reception stops (the key illumination and display remain on).

* If your car has no ACC position on the ignition switch, be sure to turn the unit off by pressing (OFF) for 2 seconds to avoid car battery drain.

2 Press (OPEN), then slide the front panel to the right, and gently pull out the left end of the front panel.

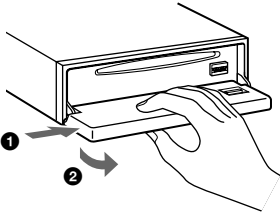

Notes

- If you detach the panel while the unit is still turned on, the power will turn off automatically to prevent the speakers from being damaged.
- Do not drop or put excessive pressure on the front panel and its display window.
- Do not subject the front panel to heat/high temperature or moisture. Avoid leaving it in parked cars or on dashboards/rear trays.

 
 
 
Tip

When carrying the front panel with you, use the supplied front panel case.

Attaching the front panel

Place hole (A) of the front panel onto the spindle (B) on the unit, then lightly push the left side in.

Press (SOURCE) (or insert a CD) to operate the unit.

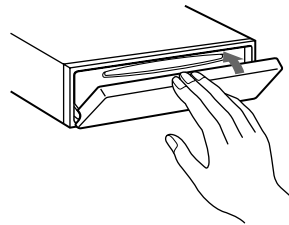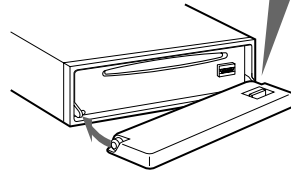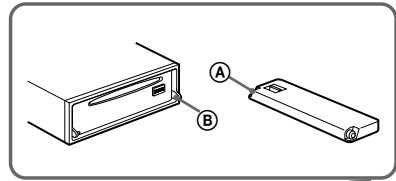

Note

 
Do not put anything on the inner surface of the front panel.

Setting the clock

The clock uses a 12-hour digital indication.

Example: To set the clock to 10:08

- 1 Press **(MENU)**, then press either side of **(PRESET)** repeatedly until "CLOCK" appears.



- 1 Press **(ENTER)**.
The hour indication flashes.
- 2 Press either side of **(PRESET)** to set the hour.
- 3 Press the (+) side of **(SEEK)**.
The minute indication flashes.
- 4 Press either side of **(PRESET)** to set the minute.

- 2 Press **(ENTER)**.



 
The clock starts. After the clock setting is completed, the display returns to normal playback mode.

Tip
When D.INFO mode is set to ON, the time is always displayed (page 16).

CD Player

Playing a disc

- 1 Press **(OPEN)** and insert the disc (labeled side up).

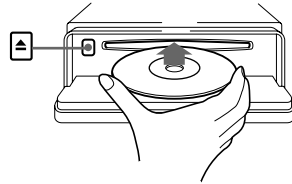

- 2 Close the front panel.
Playback starts automatically.


If a disc is already inserted, press **(SOURCE)** repeatedly until "CD" appears to start playback.

| To | Press |
|--|--|
| Stop playback | (OFF) |
| Eject the disc | (OPEN) then ▲ |
| Skip tracks – Automatic – Music Sensor | (SEEK) (◀◀ / ▶▶) [once for each track] |
| Fast-forward/ reverse – Manual Search | (SEEK) (◀◀ / ▶▶) [hold to desired point] |

Note
When the last track on the disc is over, playback restarts from the first track of the disc.

Display items

 When the disc/track changes, any prerecorded title of the new disc/track is automatically displayed (if the Auto Scroll function is set to "ON," names exceeding 8 characters will be scrolled (page 16)).

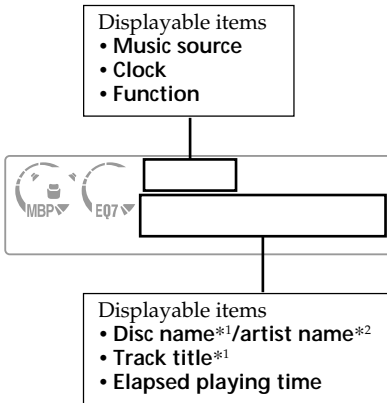

| To | Press |
|---------------------|--------|
| Switch display item | (DSPL) |

*1 "NO NAME" indicates there is no prerecorded name to display.

*2 Only for CD TEXT discs with the artist name.

Notes

- Some characters cannot be displayed.
- For some CD TEXT discs with very many characters, information may not scroll.
- This unit cannot display the artist name for each track of a CD TEXT disc.

Playing tracks repeatedly

— Repeat Play

The current track will repeat itself when it reaches the end.

During playback, press (1) (REP) repeatedly until "REP-1" appears in the display.

Repeat Play starts.

To return to normal play mode, select "REP-OFF."

Playing tracks in random order — Shuffle Play

You can select to play the tracks on the current disc in random order.

During playback, press (2) (SHUF) repeatedly until "SHUF-1" appears in the display.

Shuffle Play starts.

To return to normal play mode, select "SHUF-OFF."

Radio

The unit can store up to 6 stations per band (FM1, FM2, FM3, AM1, and AM2).

Caution

When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

Storing stations automatically

— Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals within the selected band, and stores them in the order of their frequency.

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press **(MENU)**, then press either side of **(PRESET)** repeatedly until "BTM" appears.
- 4 Press **(ENTER)**.
A beep sounds when the setting is stored.

Notes

- If only a few stations can be received due to weak signals, some number buttons will retain their former settings.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

Receiving the stored stations

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press the number button (**(1)** to **(6)**) on which the desired station is stored.

Tip

Press either side of **(PRESET)** to receive the stations in the order they are stored in the memory (Preset Search function).

If preset tuning does not work

Press either side of **(SEEK)** to search for the station (automatic tuning).

Scanning stops when the unit receives a station. Repeat until the desired station is received.

Tips

- If automatic tuning stops too frequently, turn on the Local Seek to limit seek to stations with stronger signals (see "Changing the sound and display settings," page 16).
- If you know the frequency of the station you want to listen to, press and hold either side of **(SEEK)** to locate the approximate frequency, then press **(SEEK)** repeatedly to fine adjust to the desired frequency (manual tuning).

If FM stereo reception is poor

Select monaural reception mode.

(see "Changing the sound and display settings," page 16).

The sound improves, but becomes monaural ("ST" disappears).

Note

If interference occurs, this unit will automatically narrow the reception frequency to eliminate noise (IF AUTO function). In such cases, some FM stereo broadcasts may become monaural while in the stereo reception mode.

Tip

To always hear FM stereo broadcasts in stereo, you can change the IF AUTO setting and widen the frequency signal reception (see "Changing the sound and display settings," page 16). Note that some interference may occur in this setting.

Storing only the desired stations

You can manually preset the desired stations on any chosen number button.

- 1 Press **(SOURCE)** repeatedly to select the radio.
- 2 Press **(MODE)** repeatedly to select the band.
- 3 Press either side of **(SEEK)** to tune in the station that you want to store.
- 4 Press the desired number button (**(1)** to **(6)**) for 2 seconds until "MEM" appears. The number button indication appears in the display.

Note

If you try to store another station on the same number button, the previously stored station will be erased.

 
Storing station names

— Station Memo

You can assign a name to each radio station and store it in memory. The name of the station currently tuned in appears in the display. You can assign a name using up to 8 characters for a station.

Storing the station names

- 1 Tune in a station whose name you want to store.
- 2 Press **(MENU)**, then press either side of **(PRESET)** repeatedly until "NAMEEDIT" appears.
- 3 Press **(ENTER)**.



4 Enter the characters.

 
- 1 Press the (+)^{*1} side of **(PRESET)** repeatedly to select the desired character.

A → B → C ... → 0 → 1 → 2 ...
→ + → - → * ... → _^{*2} → A

^{*1} For reverse order, press the (-) side of **(PRESET)**.

^{*2} (blank space)

- 2 Press the (+) side of **(SEEK)** after locating the desired character.



If you press the (-) side of **(SEEK)**, you can move back to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.

- 5 Press **(ENTER)**.

Tips

- Simply overwrite or enter “_” to correct or erase a name.
- There is another way to start storing station names: Press (LIST) for 2 seconds instead of performing steps 2 and 3. You can also complete the operation by pressing (LIST) for 2 seconds instead of step 5.

Displaying the station name

Switch the display item to frequency or station name*.

| To | Press |
|---------------------|-------------------------------|
| Switch display item | (DSPL) during radio reception |

* If the station name is not stored, “NO NAME” appears in the display for one second.

Erasing the station name

- 1 During radio reception, press (MENU), then press either side of (PRESET) repeatedly until “NAME DEL” appears.
- 2 Press (ENTER).
- 3 Press either side of (PRESET) repeatedly to select the station whose name you want to erase.
- 4 Press (ENTER) for 2 seconds.
The name is erased.
Repeat steps 3 to 4 if you want to erase other names.
- 5 Press (MENU) twice.
The unit returns to normal radio reception mode.

Note

If you have already erased all of the station names, “NO DATA” appears in step 4.

Locating a station by name — List-up

- 1 During radio reception, press (LIST).
The name assigned to the station currently tuned appears in the display.



- 2 Press either side of (PRESET) repeatedly until you find the desired station.
If no name is assigned to the selected station, the frequency appears in the display.
- 3 Press (ENTER) to tune in the desired station.

 
Other Functions

You can also control the unit with a rotary commander (optional).


Using the rotary commander

First, attach the appropriate label depending on how you want to mount the rotary commander.

The rotary commander works by pressing buttons and/or rotating controls.

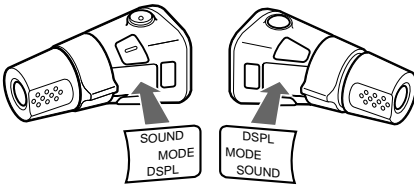

By pressing buttons

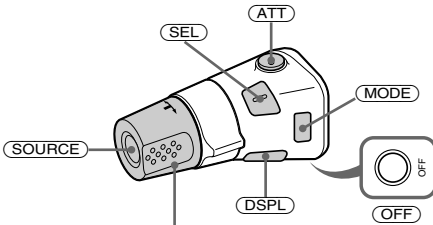 


Rotate the VOL control to adjust the volume.

| Press | To |
|---------------|----------------------------------|
| SOURCE | Change source (radio/CD) |
| MODE | Change radio band |
| ATT | Attenuate sound |
| OFF * | Stop playback or radio reception |
| SOUND | Adjust the sound menu |
| DSPL | Change the display item |

* If your car has no ACC (accessory) position on the ignition key switch, be sure to press **OFF** for 2 seconds to turn off the clock indication after turning off the ignition.

 By rotating the control

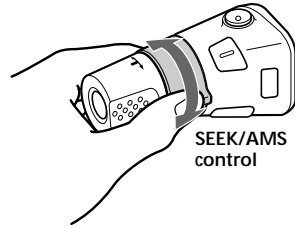

SEEK/AMS control

 
Rotate and release to:

- Skip tracks.
- Tune in stations automatically.

Rotate, hold, and release to:

- Fast-forward/reverse a track.
- find a station manually.

By pushing in and rotating the control

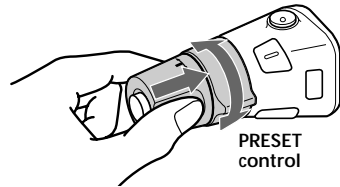


PRESET control

Push in and rotate the control to:


- Receive preset stations.

Changing the operative direction

 The operative direction of controls is factory-set as shown below.

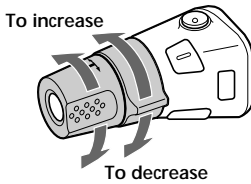

 If you need to mount the rotary commander on the right hand side of the steering column, you can reverse the operative direction.

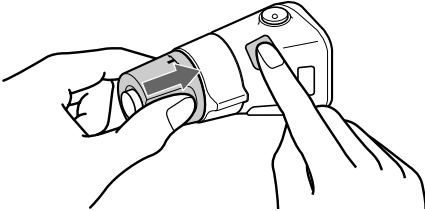

Press **(SOUND)** for 2 seconds while pushing the VOL control.

Adjusting the sound characteristics

You can adjust the bass, treble, balance, and fader.

The bass and treble levels can be stored independently for each source.

1 Select the item you want to adjust by pressing **(SOUND)** repeatedly.

Each time you press **(SOUND)**, the item changes as follows:

BAS (bass) → TRE (treble) →
BAL (left-right) → FAD (front-rear)

2 Adjust the selected item by pressing either side of **(SEEK)**.

When adjusting with the rotary commander, press **(SOUND)** and rotate the VOL control.

Note

Adjust within 3 seconds after selecting the item.

Quickly attenuating the sound

(With the rotary commander or the card remote commander)

Press **(ATT)** on the rotary commander or card remote commander.

After "ATT-ON" momentarily appears, the "ATT" appears in the display.

To restore the previous volume level, press **(ATT)** again.

Changing the sound and display settings — Menu

The following items can be set:

SET (Set Up)

- CLOCK (page 9)
- BEEP — to turn the beeps on or off.
- RM (Rotary Commander) — to change the operative direction of the controls of the rotary commander.
 - Select “NORM” to use the rotary commander as the factory-set position.
 - Select “REV” when you mount the rotary commander on the right side of the steering column.

DSPL (Display)

- D.INFO (Dual Information) — to display the clock and the play mode at the same time (ON).
- M.DSPL (Motion Display) — to select the Motion Display mode from “1,” “2,” and “OFF.”
 - Select “1” to show decoration lines in the display and activate Demo display.
 - Select “2” to show decoration lines in the display and deactivate Demo display.
 - Select “OFF” to deactivate the Motion Display.
- A.SCRL (Auto Scroll)
 - Select “ON” to scroll all automatically displayed names exceeding 8 characters.
 - When Auto scroll is set to off and the disc/track name is changed, the disc/track name does not scroll.

SND (Sound)

- LOUD (Loudness) — to enjoy bass and treble even at low volumes. The bass and treble will be reinforced.

P/M (Play Mode)

- LOCAL-ON/OFF (Local seek mode) (page 11)
 - Select “ON” to only tune into stations with stronger signals.
- MONO-ON/OFF (Monaural mode) (page 11)
 - Select “ON” to hear FM stereo broadcast in monaural. Select “OFF” to return to normal mode.
- IF AUTO/WIDE (page 11)

- 1 Press **(MENU)**.
To set A.SCRL, press **(MENU)** during CD Playback.
- 2 Press either side of **(PRESET)** repeatedly until the desired item appears.
- 3 Press the (+) side of **(SEEK)** to select the desired setting (Example: ON or OFF).
- 4 Press **(ENTER)**.
After the mode setting is completed, the display returns to normal play mode.

Note

The displayed item will differ depending on the source.

Tip

You can easily switch among categories (“SET,” “DSPL,” “SND,” and “P/M”) by pressing either side of **(PRESET)** for 2 seconds.

Selecting the sound position

— “My Best sound Position (MBP)”

When you drive without passengers, you can enjoy the most comfortable sound environment with “My Best sound Position.” “My Best sound Position” has two presets, which adjust the sound level of balance and fader. You can select one very easily with the MBP button.

| Display window | Balance Level | | Fader Level | |
|----------------|---------------|------|-------------|------|
| | Right | Left | Front | Rear |
| MBP-A | -4dB | 0 | 0 | -4dB |
| MBP-B | 0 | -4dB | 0 | -4dB |
| MBP-OFF | 0 | 0 | 0 | 0 |

Press **(MBP)** repeatedly for the desired listening position.

The mode of “My Best sound Position” is shown in the display in order of the table.



After one second, the display goes back to the normal playback mode.

If you want to adjust the sound level of balance and fader more precisely, you can do it using the **(SOUND)** button. (See “Adjusting the sound characteristics” on page 15.)

Notes

 
- When the **BAL** (balance) or **FAD** (fader) in “Adjusting the sound characteristics” (page 15) is adjusted, the **MBP** setting returns to **OFF**.
- When **MBP** is set to **OFF**, the **BAL** and **FAD** setting is activated.

Setting the equalizer

You can select an equalizer curve for seven music types (VOCAL, CLUB, JAZZ, NEW AGE, ROCK, CUSTOM, and XPL0D). You can store and adjust the equalizer settings for frequency and level.

Selecting the equalizer curve

- 1 Press **(SOURCE)** to select a source (radio or CD).
- 2 Press **(EQ7)** repeatedly until the desired equalizer curve appears. Each time you press **(EQ7)**, the item changes.



To cancel the equalizing effect, select “OFF.”

After 3 seconds, the display returns to the normal playback mode.

continue to next page →

Adjusting the equalizer curve

- 1 Press **(MENU)**.
- 2 Press either side of **(PRESET)** repeatedly until "EQ7 TUNE" appears, then press **(ENTER)**.
- 3 Press either side of **(SEEK)** to select the desired equalizer curve, then press **(ENTER)**.
Each time you press **(SEEK)**, the item changes.
- 4 Select the desired frequency and level.
 - 1 Press either side of **(SEEK)** to select the desired frequency.
Each time you press **(SEEK)**, the frequency changes.
62 Hz ↔ 157 Hz ↔ 396 Hz
↔ 1.0 kHz ↔ 2.5 kHz ↔ 6.3 kHz
↔ 16.0 kHz
 - 2 Press either side of **(PRESET)** to adjust the desired volume level.
The volume level is adjustable by 1 dB steps from -10 dB to +10 dB.



To restore the factory-set equalizer curve, press **(ENTER)** for two seconds.

 
- 5 Press **(MENU)** twice.
When the effect setting is complete, the normal playback mode appears.

Additional Information

Maintenance

Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

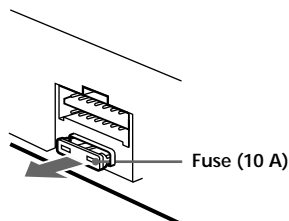


Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the connectors

 The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, detach the front panel (page 8) and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

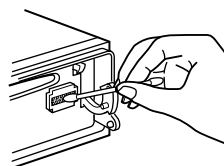

Main unit

 



Back of the front panel

Notes

- For safety, turn off the ignition before cleaning the connectors, and remove the key from the ignition switch.
- Never touch the connectors directly with your fingers or with any metal device.

Replacing the lithium battery

  Under normal conditions, batteries will last approximately 1 year. (The service life may be shorter, depending on the conditions of use.) When the battery becomes weak, the range of the card remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery.

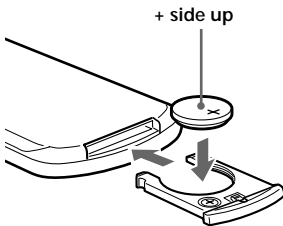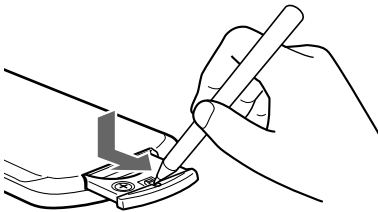

Notes on lithium battery

- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

 
WARNING

Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

Removing the unit

1 Remove the front cover


- 1 Detach the front panel (page 8).
- 2 Press the clip inside the front cover with a thin screwdriver.

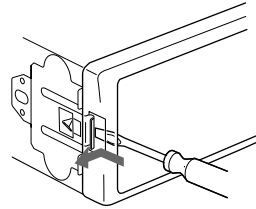

- 3 Repeat step 2 for the other side.

2 Remove the unit

 - 1 Use a thin screwdriver to push in the clip on the left side of the unit, then pull out the left side of the unit until the catch clears the mounting.

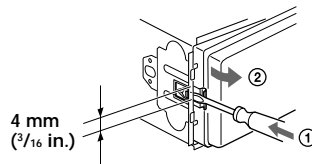

- 2 Repeat step 1 for the right side.
- 3 Slide the unit out of its mounting.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

23 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 5% total harmonic distortion.

CD player section

| | |
|------------------------|-------------------------|
| Signal-to-noise ratio | 90 dB |
| Frequency response | 10 – 20,000 Hz |
| Wow and flutter | Below measurable limit |
| Laser Diode Properties | |
| Material | GaAlAs |
| Wavelength | 780 nm |
| Emission Duration | Continuous |
| Laser output power | Less than 44.6 μ W* |

* *This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.*

Tuner section

FM

| | |
|------------------------------|---------------------------------|
| Tuning range | 87.5 – 107.9 MHz |
| Antenna terminal | External antenna connector |
| Intermediate frequency | 10.7 MHz/450 kHz |
| Usable sensitivity | 8 dBf |
| Selectivity | 75 dB at 400 kHz |
| Signal-to-noise ratio | 66 dB (stereo), 72 dB (mono) |
| Harmonic distortion at 1 kHz | 0.6 % (stereo), 0.3 % (mono) |
| Separation | 35 dB at 1 kHz |
| Frequency response | 30 – 15,000 Hz |

AM

| | |
|------------------------|----------------------------|
| Tuning range | 530 – 1,710 kHz |
| Antenna terminal | External antenna connector |
| Intermediate frequency | 10.7 MHz/450 kHz |
| Sensitivity | 30 μ V |

Power amplifier section

| | |
|----------------------|---|
| Outputs | Speaker outputs (sure seal connectors) |
| Speaker impedance | 4 – 8 ohms |
| Maximum power output | 52 W \times 4 (at 4 ohms) |

General

| | |
|----------------------|---|
| Outputs | Audio outputs Power antenna relay control lead Power amplifier control lead |
| Input | Telephone ATT control lead |
| Tone controls | Bass \pm 10 dB at 62 Hz Treble \pm 10 dB at 16 kHz |
| Power requirements | 12 V DC car battery (negative ground) |
| Dimensions | Approx. 178 \times 50 \times 176 mm (7 ¹ / ₈ \times 2 \times 7 in.) (w/h/d) |
| Mounting dimensions | Approx. 182 \times 53 \times 161 mm (7 ¹ / ₄ \times 2 ¹ / ₈ \times 6 ³ / ₈ in.) (w/h/d) |
| Mass | Approx. 1.2 kg (2 lb 10 oz) |
| Supplied accessories | Parts for installation and connections (1 set) Front panel case (1) |
| Optional accessories | Rotary commander RM-X4S Card remote commander RM-X114 |

Note

This unit cannot be connected to a digital preamplifier or an equalizer.

Design and specifications are subject to change without notice.

Troubleshooting

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

General

No sound.

- Rotate the volume control dial clockwise to adjust the volume.
- Cancel the ATT function.
- Set the fader control to the center position for a 2-speaker system.

The contents of the memory have been erased.

- The RESET button has been pressed.
→ Store again into the memory.
- The power cord or battery has been disconnected.
- The power connecting cord is not connected properly.

No beep sound.

The beep sound is cancelled (page 16).

Indications disappear from/do not appear in the display.

- The clock display disappears if you press **(OFF)** for 2 seconds.
→ Press **(OFF)** again for 2 seconds to display the clock.
- Remove the front panel and clean the connectors. See “Cleaning the connectors” (page 18) for details.

Stored stations and correct time are erased.

The fuse has blown.

Makes noise when the ignition key is in the ON, ACC, or OFF position.

The leads are not matched correctly with the car’s accessory power connector.

No power is being supplied to the unit.

- Check the connection. If everything is in order, check the fuse.
 - The car does not have an ACC position.
→ Press **(SOURCE)** (or insert a disc) to turn on the unit.
-

The power is continuously supplied to the unit.

The car does not have an ACC position.

The power antenna does not extend.

The power antenna does not have a relay box.

CD playback

A disc cannot be loaded.

- Another CD is already loaded.
- The CD is forcibly inserted upside down or in the wrong way.

Playback does not begin.

- Dirty or defective disc.
- CD-R that is not finalized.
- You tried to playback a CD-R not designed for audio use.
- Some CD-Rs may not play due to its recording equipment or the disc condition.

A disc is automatically ejected.

The ambient temperature exceeds 50°C (122°F).

The operation buttons do not function.

Press the RESET button.

The sound skips from vibration.

- The unit is installed at an angle of more than 60°.
- The unit is not installed in a sturdy part of the car.

The sound skips.

Dirty or defective disc.

continue to next page →

Radio reception

Preset tuning is not possible.

- Store the correct frequency in the memory.
- The broadcast signal is too weak.

The stations cannot be received.

The sound is hampered by noises.

- Connect a power antenna control lead (blue) or accessory power supply lead (red) to the power supply lead of a car's antenna booster. (Only when your car has built-in FM/AM antenna in the rear/side glass.)
- Check the connection of the car antenna.
- The auto antenna will not go up.
 - Check the connection of the power antenna control lead.
- Check the frequency.

Automatic tuning is not possible.

- The local seek mode is set to "ON."
 - Set the local seek mode to "OFF" (page 16).
- The broadcast signal is too weak.
 - Perform manual tuning.

The "ST" indication flashes.

- Tune in the frequency accurately.
- The broadcast signal is too weak.
 - Set to the monaural reception mode (page 16).

A program broadcast in stereo is heard in monaural.

The unit is in monaural reception mode.
→ Cancel monaural reception mode (page 16).

Interference occurs during FM reception.

The wide mode is selected.
→ Set the IF mode to "IF AUTO" (page 16).

Error displays/Messages

Error displays

The following indications will flash for about 5 seconds, and an alarm sound will be heard.

ERROR

- A CD is dirty or inserted upside down.
 - Clean or insert the CD correctly.
- A CD cannot play because of some problem.
 - Insert another CD.

HI TEMP

The ambient temperature is more than 50°C (122°F).
→ Wait until the temperature goes down below 50°C (122°F).

RESET

The CD unit cannot be operated because of some problem.
→ Press the RESET button on the unit.

If these solutions do not help improve the situation, consult your nearest Sony dealer.

Messages

L.SEEK +/-

The Local Seek mode is on during automatic tuning (page 11).

"....." Or "....."

You have reached the beginning or the end of the disc and you cannot go any further.

Sony  line <http://www.world.sony.com/>

Sony Corporation Printed in Korea
