 



Playing a CD right away!

If you want to play a CD right now, choose to use your CD player on house current. Other choices are the following two: dry batteries (see "Power Sources" on the reverse side) and car battery.

1 Connect

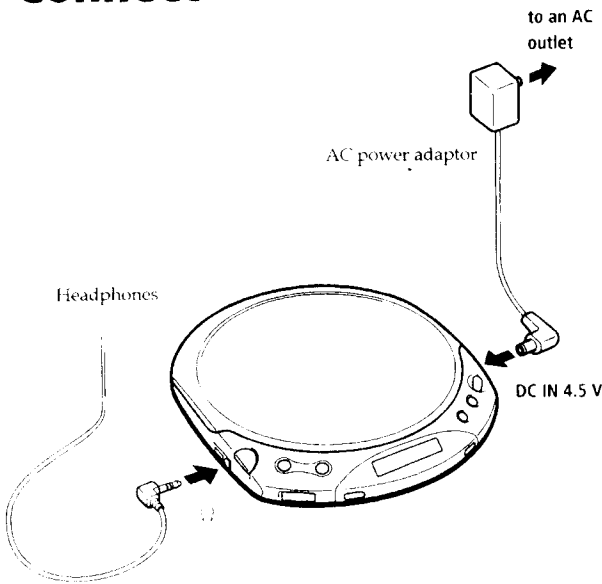

 2 Place a CD

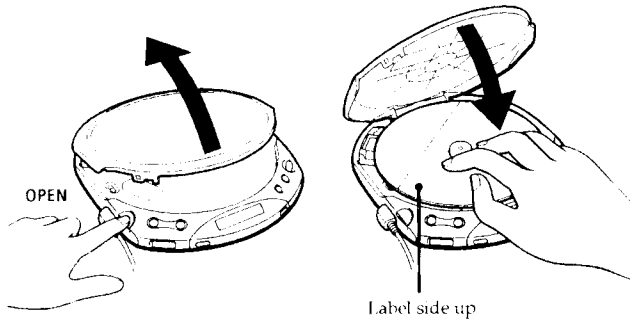


① Press OPEN to open the lid.

② Fit the CD to the pivot.

③ Close the lid.

 3 Play

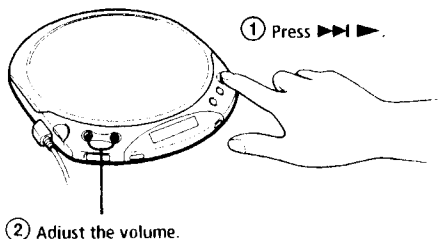


To	Press
Find the beginning of the current track (AMS*)	◀◀ once
Find the beginning of previous tracks (AMS)	◀◀ repeatedly
Find the beginning of the next track (AMS)	▶▶ once
Find the beginning of succeeding tracks (AMS)	▶▶ repeatedly
Go forward quickly	Hold down ▶▶▶▶
Go backwards quickly	Hold down ◀◀◀◀

* AMS - Automatic Music Sensor

To remove the CD

 Remove the CD while pressing the pivot.

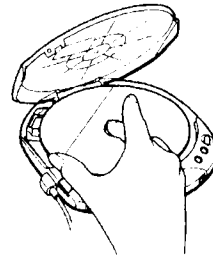


Notes on display

- When you press ▶▶▶▶, the total number of tracks in the CD and the total playing time appear.
- During play, the track number and the elapsed playing time of the current track appear.

Notes on handling CDs

 - To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

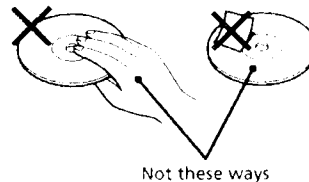


About CD-Rs

This CD player is compatible with CD-Rs but playback capability may vary depending on the quality of the disc, the recording device and application software.


► Other Operations

Selecting play mode

 You can enjoy the following five play modes: "Normal play", "Repeat play — all the tracks", "Single track play", "Repeat play — a single track" and "Repeat shuffle play".

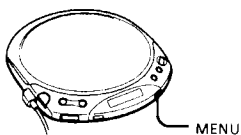

 Press MENU during play. Each time you press the button, the play mode indication in the display changes as follows:



No indication (Normal play)

The player plays all the tracks on the CD once.

"↺" (Repeat play — all the tracks)*

The player plays all the tracks on the CD repeatedly.

"1" (Single track play)

The player plays a single track you've selected once.

"↺ 1" (Repeat play — a single track)

The player plays a single track you've selected repeatedly.

"↺ SHUF" (Repeat shuffle play)

The player plays all the track on the CD in random order repeatedly.

 
* During Repeat play, you can locate the first track after the last track by pressing **▶▶** repeatedly. You can also locate the last track after first track by pressing **◀◀** repeatedly.

Using other functions

To maximize the skip protection performance (ESP MAX)


The typical ESP (Electronic Shock Protection) function minimizes skipping by using a buffer memory that stores music data and plays it back in the event of a shock. The ESP MAX system is an extremely sophisticated technology. Due to the light weight and improved anti-shock characteristics of the optical block, this system recovers from the skipping much quicker than conventional technology such as ESP or ESP!.*

* Although ESP MAX provides excellent protection, skipping may occasionally occur.

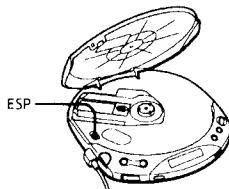

Set ESP to "ON."*
The ESP indication appears.

 To release the ESP MAX function, set ESP to "OFF."




Notes



- Playing may stop when the CD player gets a strong shock even with the ESP MAX function on.
- You may hear a noise or sound may skip:
 - when listening to a dirty or scratched CD,
 - when listening to an audio test CD,
 - when the player receives continuous shock or
 - when using poor-quality CD-Rs or if there is a problem with the recording device or application software.

To enjoy more powerful bass sound (Digital MEGA BASS)

 You can emphasize the bass-boosted sound.

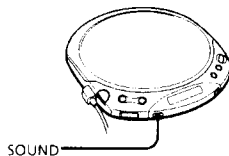

  Press SOUND to select "BASS ■■" or "BASS ■■."

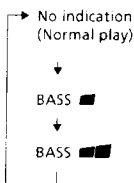

The selected sound mode is displayed.

 
"BASS ■■" enhances the bass sound more than "BASS ■."

Note

- If the sound is distorted when using the SOUND function, turn down the volume.

To lock the buttons

You can lock your CD player against any accidental operations.

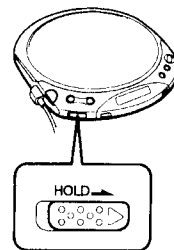


Slide HOLD in the direction of the arrow. When you press any button, "Hold" appears in the display and you cannot operate the CD player.

To unlock, slide HOLD in the opposite direction of the arrow.


To protect your hearing (AVLS)

 The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your ears.

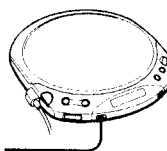


SOUND

 Hold down SOUND until "AVLS" appears in the display.



 If you turn up the volume to "3", you cannot turn up the volume any more.



If you want to turn up the volume to more than "3", hold down SOUND until "AVLS" disappears from the display.

 
* For the customers in France
This level is set to "6".

Note

- If you use the sound function and the AVLS function at the same time, sound may be distorted. If this happens, turn down the volume.

Connecting to other stereo equipment

You can listen to the CD through other stereo equipment or record a CD on a cassette tape. Refer to the instruction manual of the other equipment for details. Before making connections, turn off each piece of equipment.

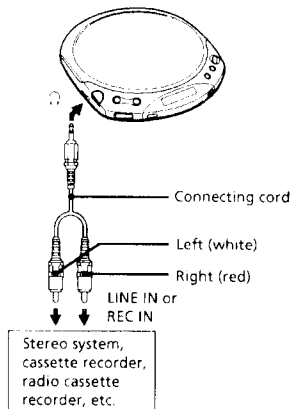


Notes

- Before you play the CD, turn down the volume of the connected equipment so as not to damage the connected speakers.
- If you turn up the volume to more than "8", the sound may be distorted.

Playing a CD in a car

 You can use your CD player in a car as illustrated below.

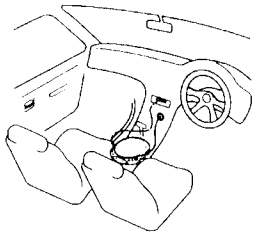

To connect your CD player to a car cassette deck, you need the following accessories:

- Car connecting pack
- Car battery cord

You can use the car mount plate for this CD player.

Refer to the instruction manual of each accessory for details.

Notes

- Do not put the CD player on the dashboard.
- Do not leave the CD player in a car parked under sunlight.
- If the sound is distorted, press SOUND until the BASS indication disappears from the display.
- Use a Sony car connecting pack for reducing noise.
- Use only the car battery cord listed in the optional accessories. If you use any other car battery cord, smoke, fire or malfunction may occur.

Switched ignition function (when using the car battery cord)

With this feature, your CD player stops automatically when you turn off the engine of the car. (This function is not possible with some cars depending on the model.)

Power Sources (E220/E226CK)

Using the dry batteries

 
Use only the following dry battery type for your CD player:

- LR6 (size AA) alkaline batteries

Note


Be sure to remove the AC power adaptor when using the dry batteries.

- 1 Open the battery compartment lid.

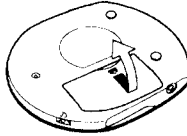


(rear)

 - 2 Insert two LR6 (size AA) alkaline batteries by matching the ⊕ to the diagram in the battery compartment.

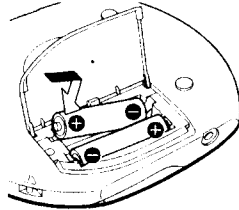


To remove the batteries

 Remove the batteries as illustrated below.

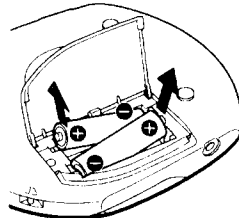

To attach the battery compartment lid

 If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated below.

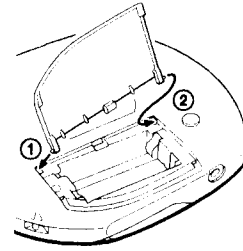

Battery life (approx. hours)(EIAJ*)

Battery life varies depending on how the player is used.


	ESP OFF	ESP ON
Two Sony alkaline batteries LR6(SC)	25	24

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (When the unit is used on a flat and stable place.)

** Charging time varies depending on how the rechargeable battery is used.

When to replace the batteries

 You can check the remaining power of the batteries in the display.

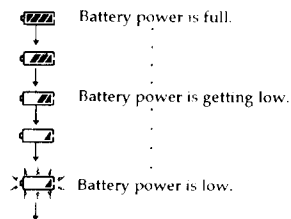

Lo batt* Batteries are depleted.
*Beep sounds.

When the batteries are depleted, replace both batteries with new ones.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

 
► Power Sources (E225)

Using the rechargeable batteries

Charge the rechargeable batteries before using them for the first time. You can use only the following rechargeable batteries for your CD player.


- NC-WMAA
- NH-WM2AA

- 1 Open the battery compartment lid.

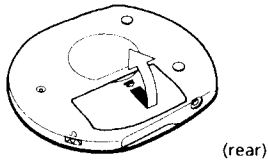


(rear)

 - 2 Insert two rechargeable batteries by matching the ⊕ to the diagram in the battery compartment and close the lid.

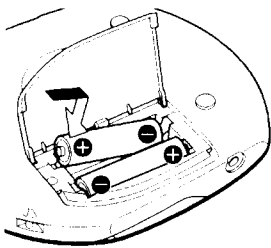

 - 3 Connect the AC power adaptor to the DC IN 4.5 V jack of your CD player and an AC outlet, then press ■/CHG to start charging.

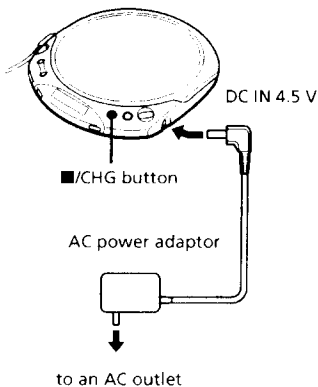


The CD player charges the batteries. The "CHG" indicator turns on in the display, and the indicator sections of light up in succession. When the batteries are completely charged, the "CHG" and indicators turn off.

If you press ■/CHG after the charge has already been completed, the indicator flashes and "Full" appears in the display.

- 4 Disconnect the AC power adaptor.


To remove the rechargeable batteries

 Remove the batteries as illustrated below.

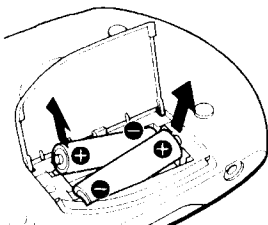

When to charge the rechargeable batteries

 You can check the remaining power of the batteries in the display.

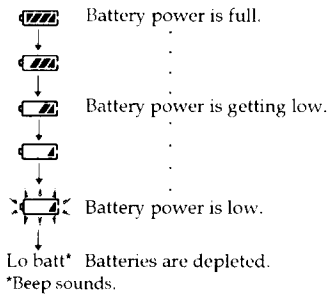

To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

Note on the rechargeable batteries

 
If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.

Note on carrying the rechargeable batteries

Use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects are contacted, heat or fire may occur due to a short circuit.

To attach the battery compartment lid

If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated below.

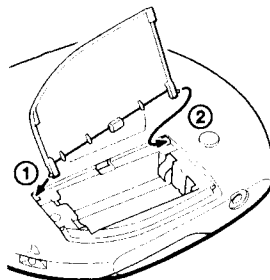

Using the dry batteries

Use only the following dry battery type for your CD player:

- LR6 (size AA) alkaline batteries

Note

Be sure to remove the AC power adaptor when using the dry batteries.

 
- 1 Open the lid of the battery compartment.
- 2 Insert two LR6 (size AA) alkaline batteries by matching the ⊕ to the diagram in the battery compartment.

To remove the batteries

Remove the batteries in the same way as rechargeable batteries.

When to replace the batteries

You can check the remaining power of the batteries in the display.

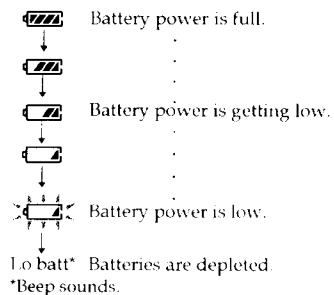

When the batteries are depleted, replace both batteries with new ones.

Battery life (approx. hours)(EIAJ*)

Battery life varies depending on how the player is used.


	ESP OFF	ESP ON
Two NC-WMAA (charged for about 3 hours**)	8	8
Two NH-WM2AA (charged for about 8 hours**)	11.5	11
Two Sony alkaline batteries LR6(SG)	25	21

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (When the unit is used on a flat and stable place.)

** Charging time varies depending on how the rechargeable battery is used.

Using the supplied remote control

 You can use the remote control as the wired remote control.

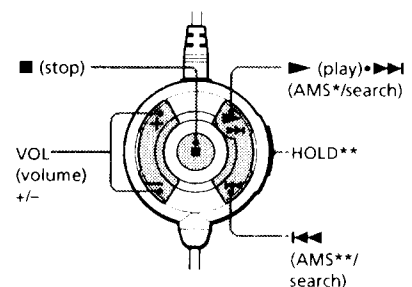

* Automatic Music Sensor

** When you are not using the remote control, slide HOLD in the direction of the arrow to prevent any accidental operations.