

Compact Disc Compact Player

Operating Instructions

About area code

The area code of the Discman you purchased is shown on upper left of the bar code label on the package.

For accessories supplied with your Discman, check the area code of your model and refer to "Supplied accessories" toward the end of this manual.



 
D-M801

Sony Corporation ©1997 Printed in Malaysia


Playing a CD in a car

You can play a CD in a car, using your Discman on car battery. You can also use it on house current, rechargeable battery and dry batteries (see "Power sources" on the reverse side.)


1 Connect

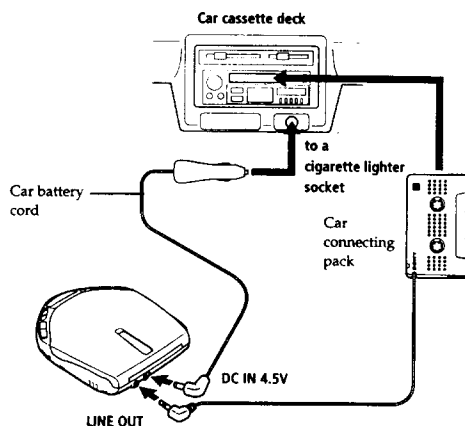

2 Place a CD

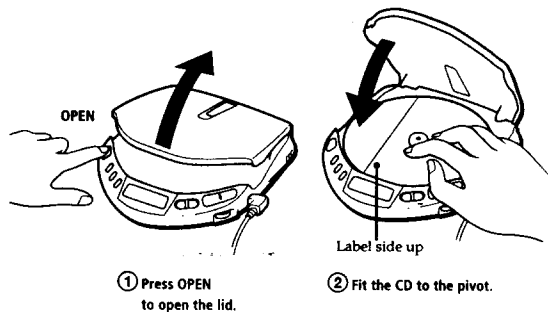 


3 Play

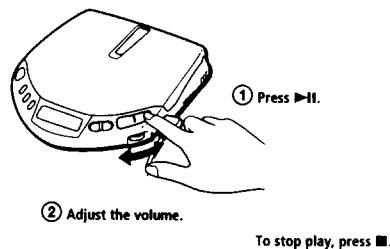 

To	Press
Pause	►II
Resume play after pause	►II
Find the beginning of the current track (AMS*)	◀◀ once**
Find the beginning of previous tracks (AMS)	◀◀ repeated
Find the beginning of the next track (AMS)	►► once**
Find the beginning of succeeding tracks (AMS)	►► repeated
Go forward quickly	Hold down ►►**
Go backwards quickly	Hold down ◀◀**

*AMS = Automatic Music Sensor
**These operations are possible during play and pause.

 To remove the CD
Remove the CD while pressing the pivot.

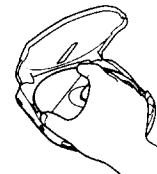

Notes on display

- When you press ►II (when RESUME set to OFF), the total number of track, the CD and the total playing time appear for about 2 seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- During pause, the elapsed playing time flashes in the display.
- Between tracks, the time to the beginning of the next track will appear with the indication.

Illumination of the display and the buttons on the main unit

When using the unit on the AC power adaptor or car battery, the display and buttons are illuminated during play so you can check the display and the location of the buttons easily.

The display and the buttons are also illuminated for about one minute in the following cases:

- When you connect the AC power adaptor or car battery cord
 - When you open the lid of the unit
 - When you stop play by pressing ■
 - When the CD finishes playing.
- If you want to turn off the illumination right away, press ■.

Note on illumination

When using the unit on the AC power adaptor, illumination of the display and the buttons may become dim during AM operation, etc., but this is not a malfunction of the unit.

Notes on handling CDs

 
- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.




Playing a CD in a car

You can play a CD in a car, using your Discman on car battery. You can also use it on house current, rechargeable battery and dry batteries (see "Power sources" on the reverse side.)


1 Connect

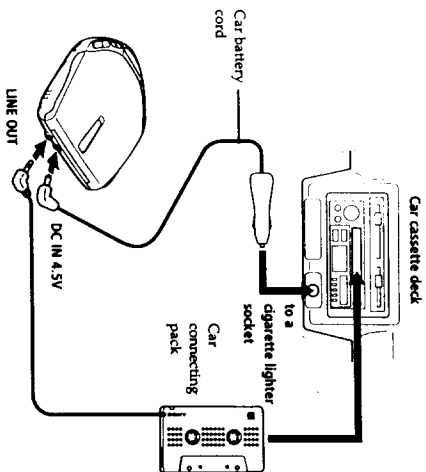

2 Place a CD

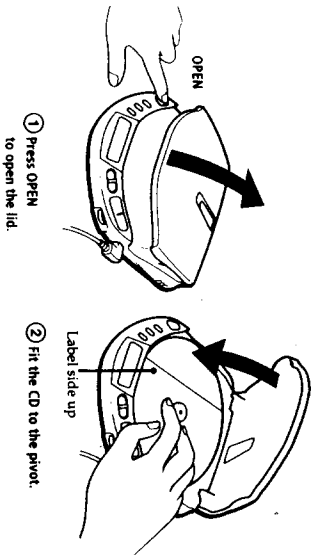 

3 Play

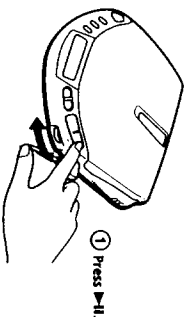 

Pause **||**

Resume play after pause **⏪**

Find the beginning of the current track (AMS) **⏮** once**

Find the beginning of previous tracks (AMS) **⏮** repeatedly**

Find the beginning of the next track (AMS) **⏭** once**

Find the beginning of succeeding tracks (AMS) **⏭** repeatedly**

Go forward quickly **⏭** Hold down

Go backwards quickly **⏮** Hold down

*AMS = Automatic Music Sensor

**These operations are possible during both play and pause.

To remove the CD
Remove the CD while pressing the pivot.



Notes on display

- When you press **⏮** (when RESUME is set to OFF), the total number of tracks in the CD and the total playing time appear for about 2 seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- During pause, the elapsed playing time flashes in the display.
- Between tracks, the time to the beginning of the next track will appear with the " " indication.

Illumination of the display and the buttons on the main unit

- When using the unit on the AC power adaptor or car battery, the display and the buttons are illuminated during play so that you can check the display and the location of the buttons easily.
- The display and the buttons are also illuminated for about one minute in the following cases:
- When you connect the AC power adaptor or car battery cord
 - When you open the lid of the unit
 - When you stop play by pressing **⏮**
 - When the CD finishes playing. If you want to turn off the illumination right away, press **⏮**.

Note on illumination

 
When using the unit on the AC power adaptor, illumination of the display and the buttons may become dim during AMS operation, etc., but this is not a malfunction of the unit.

Notes on handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.



To resume playing from the point you stopped the CD (Resume Play)
Normally, every time you stop and play, playing starts from the beginning of the CD. The resume play function, however, let you listen to from the point at which you last turned off the Dictaman.

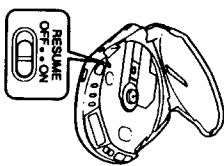

Set RESUME to ON.

To cancel resume play, set RESUME to OFF.

Notes

- Even if RESUME is set to ON, playing starts from the beginning when you open the lid.
- The resume point may be inaccurate by about 30 seconds.

 
To turn off the beep

You can turn off the beep that sounds as you operate your Dictaman.

Disconnect the power source (AC power adaptor, rechargeable battery or alkaline batteries). While you press and hold down, connect the power source again. To make the beep sound again, disconnect the power source, and then connect it without pressing.

Connecting to other stereo equipment

You can listen to the CD through other stereo equipment or record a CD on a cassette tape. Refer to the instruction manual of the other equipment for details. Before making connections, turn off each piece of equipment.



Connecting cord
RK-G125H/6
Right (red)
Left (white)
LINE IN or REC IN

Stereo system,
cassette recorder,
radio cassette

 
Listening in a car or during a walk.



Press ESP.

The ESP indication appears.

To release the ESP function, press ESP again.




Notes

- Parking may stop when the Diemann gets a message from the ESP function on.
- You may hear a noise or sound slip when:
 - listening to a dirty or scratched CD,
 - listening to an audio test CD or,
 - the Diemann receives continuous shock.
- Sound may drop for a while if you press ESP during play.

To lock the buttons

 You can lock your Diemann against any accidental operations.

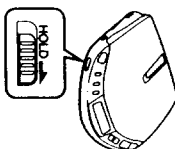


Slide HOLD in the direction of the arrow. The buttons are locked. When you press any button, 'HOLD' appears in the display.

To unlock, slide HOLD back.

To protect your hearing (AVLS)

 The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your ears.

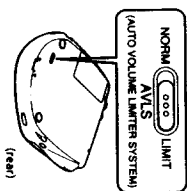

Set AVLS to LIMIT.
The AVLS indication appears.



Note

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS function, turn down the volume.

Continue to the reverse side ▶