

If your CD player does not operate properly

Disconnect all power sources (AC power adaptor, rechargeable batteries or dry batteries) from the CD player, and then connect them again.