

FM/AM Clock Radio

 
ICF-C760

Operating Instructions

Sony Corporation © 1993 Printed in Malaysia

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

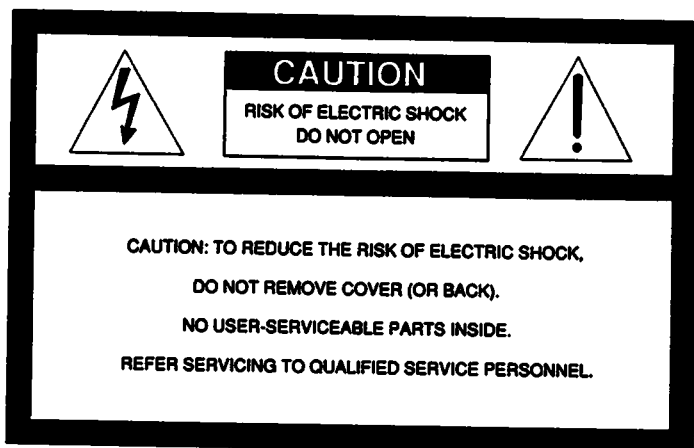

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are on the bottom enclosure of the AC power adaptor.

Setting the Clock and the Date

Setting the Clock

1. Plug in the unit.
The display will flash "AM 12:00".
 2. While holding down **CLOCK**, press either + or - above **TIME SET** till the correct time appears in the display. When you release **CLOCK**, the clock begins to operate.
- To set the current time rapidly, keep pressing **CLOCK** and the + or - button together to advance or return to a time that is within a few minutes of the current time. Then press the + or - button to set the time to the current time.

Setting the Date

1. While holding down **SNOOZE/DATE/SLEEP OFF**, press either + or - above **TIME SET** till the correct date appears in the display. Then, release **SNOOZE/DATE/SLEEP OFF**.

- To display the date, press **SNOOZE/DATE/SLEEP OFF**. The display returns to the current time when you release **SNOOZE/DATE/SLEEP OFF**.

Changing the Brightness of the Display Window

To change the brightness of the display window, slide **BRIGHT** (brightness) to H (high) or L (low).

Changing the Angle of the Clock Radio

You can change the angle of the unit by pulling the legs in the direction of the arrow as illustrated.

Playing the Radio

1. Press **RADIO ON/SLEEP** to turn on the radio and adjust **VOL** (volume).
2. Select **FM** or **AM**, and tune in a station using the **TUNE** (tuning) dial.

- To turn off the radio, press **RADIO OFF/ALARM RESET/OFF**.
- To improve radio reception
FM: Since the antenna is encased in the AC power cord, extend the cord to improve FM reception.
AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built into the unit.

Setting the Alarm

To set the radio alarm, first tune in a station and adjust the volume.

1. While holding down the **ALARM A** or **B** button (for example, **A** for the radio or **B** for the buzzer), press either + or - above **TIME SET** till the desired time appears in the display. When you release **ALARM A** or **B**, the **ALARM A** or **B** indicator and ":" stop flashing and light up, and the current time appears in the display.
2. Set the **ALARM A** selector (for radio) to **RADIO** or **ALARM B** selector (for buzzer) to **BUZZER**.
The alarm will come on at the preset time and automatically turn itself off after 59 minutes.

- If you set **ALARM A** and **ALARM B** at the same desired time, only **ALARM A** will work.
- To shut off the alarm, press **RADIO OFF/ALARM RESET/OFF**. The alarm will come on at the preset time the next day.
- To cancel either alarm, while holding down the **ALARM A** or **ALARM B** button, press **RADIO OFF/ALARM RESET/OFF**.
- To doze for a few more minutes, press **SNOOZE/DATE/SLEEP OFF**.
The alarm will shut off, but will come on again after about 6 minutes. You can repeat this process as many times as you like.
- To adjust the radio alarm volume, turn **VOL**.
- To check the preset time, press **ALARM A** or **B**.

Setting the Sleep Timer

Enjoy falling asleep to the radio using the built-in sleep timer that shuts off the radio automatically at a preset time.

1. Press **RADIO ON/SLEEP**.
The radio turns on. It will go off after the preset time has passed. You can set the sleep timer of 90, 60, 45, 30 or 15 minutes.
Every push changes the display as follows.
Current time → On → 90 → 60
 ↑ 15 ← 30 ← 45 ↓
The radio will play for the time you set, then shut off.

- To turn off the radio before the preset time, press **SNOOZE/DATE/SLEEP OFF**.

Precautions

- Operate the unit on the power sources specified in "Specifications".
- To disconnect the power cord, pull it out by the plug, not the cord.
- Do not place the unit on the surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that block the ventilation holes.
- Should anything fall into the unit, unplug the unit and have it checked by qualified personnel before operating it further.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.

Battery Warning

When the unit will be left unplugged for a long time, remove the battery to avoid undue battery discharge and damage to the unit from battery leakage.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Specifications

Frequency range: FM:87.6-108 MHz
AM:530-1,610 kHz

Speaker: Approx. 5.7cm (2 1/4 inches) dia.

Power output: 120 mW (at 10% harmonic distortion)

 
 
 
 
 
Power requirements: 120 V AC, 60 Hz
For power backup: 9 V DC, one 6F22 battery

Battery life: Approx. 36 hours using the Sony S-006P(U) battery

Dimensions: Approx. 271 × 63 × 68 mm (w/h/d)
(10 3/4 × 2 1/2 × 2 3/4 inches) not incl. projecting parts and controls

Mass: Approx. 550 g (1lb 3oz) not incl. battery

Design and specifications are subject to change without notice.

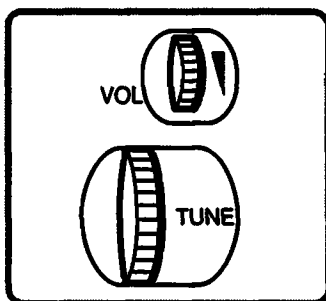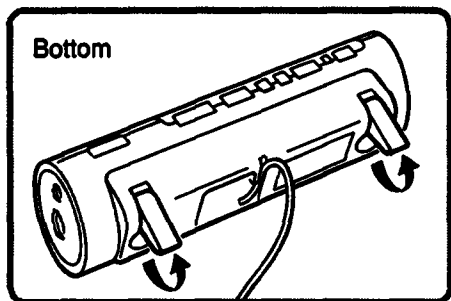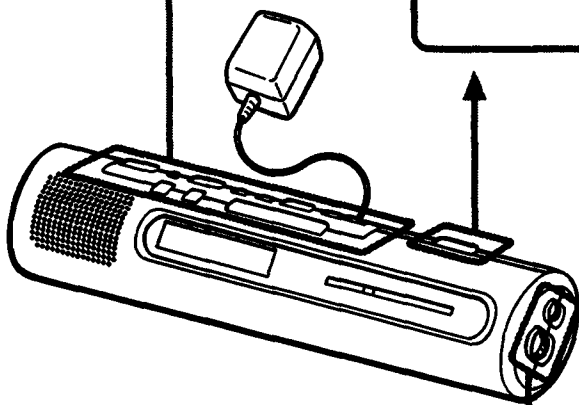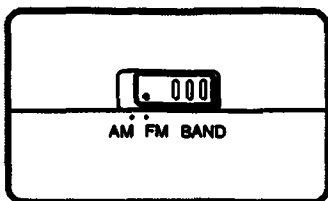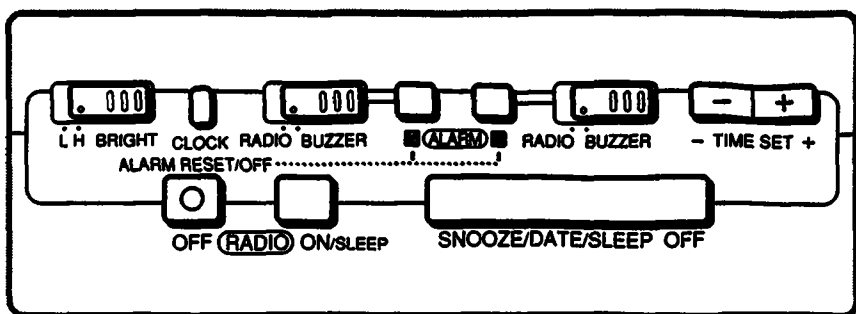

Before You Begin

Thank you for choosing the Sony clock radio! The clock radio will give you many hours of reliable service and listening pleasure.

Before operating the clock radio, please read these instructions thoroughly and retain them for future reference.

Features

- Dual alarm
- Date display
- Display with adjustable brightness
- Adjustable legs to change the angle of the unit
- Forward/reverse time setting
- Full power backup to keep the clock and the alarm (radio and buzzer) during a power interruption with a 6F22 battery (not supplied) installed

Installing the Battery

To keep good time, your clock radio needs one 6F22 battery (not supplied), in addition to house current. The battery keeps the clock operating in the event of a power interruption. Before setting the time on your clock radio, open the lid at the bottom of the unit, install the battery with correct polarity and then close the lid.

- After a power interruption, the displayed time may not be always correct. (It may gain or lose about 10 minutes per hour.)

Knowing When To Replace the Battery

- To check battery power, unplug the power cord from the wall outlet and plug it in again after a few minutes. If the displayed time is incorrect, replace the battery with a new one.

SONY LIMITED WARRANTY

SONY CORPORATION OF AMERICA ("SONY") warrants this product against defects in material or workmanship, as follows:

For a period of 1 year from the date of retail purchase, SONY shall at its sole and absolute option either repair the defective product at no charge or replace the defective product with the same model or its equivalent model at no charge through a SONY SERVICE CENTER.

To obtain warranty service, you must take the product, or deliver the product prepaid, to one of the SONY SERVICE CENTERS located in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice, which indicates that the product is within the warranty period, must be presented to obtain warranty service. SONY suggests that the purchaser retain the dealer's dated bill of sale as evidence of the date of retail purchase.

This warranty does not cover cosmetic damage, and damage to any part of the product, including the antenna, which results from acts of God, accident, misuse, abuse, improper maintenance, or connection to an improper voltage supply.

This warranty is valid only if the serial number appears on the product. This warranty is valid only in the United States of America.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please refer to the list of SONY SERVICE CENTERS on the reverse side for the SONY SERVICE CENTER nearest you.

For your convenience, Sony Corporation of America has established the Customer Information Center to supply you with product or service information.

SONY CUSTOMER INFORMATION CENTER
201-930-SONY (7669)
714-821-SONY (7669)
708-250-SONY (7669)

or write to:

SONY CUSTOMER INFORMATION CENTER
Sony Drive, Mail Drop #T1-11
Park Ridge, New Jersey 07656

SONY CORPORATION OF AMERICA
Sony Drive, Park Ridge, New Jersey 07656

To obtain warranty service, please take the product, or deliver the product prepaid, to one of the following Sony Service Centers located around the United States.

All of the following items must be included when the product is shipped prepaid to the SONY SERVICE CENTER.

- Name, address and a phone number where you may be reached during the day.
- A copy of proof of purchase, as evidence that the product is within the warranty period.
- Brief description of the product defect.
- All supplied accessories with the product.

Sony Service Centers

Arizona Phoenix 2240 North Scottsdale Road Tempe, AZ 85281 (602) 949-7669	Hawaii Honolulu 950 Maunapuna Street Honolulu, HI 96819 (808) 834-6622	Missouri St. Louis 12482-O Natural Bridge Road Bridgeton, MO 63044 (314) 291-2201
California Burbank (Los Angeles area) 4100 Riverside Drive, Suite A Burbank, CA 91505 (818) 842-7669 Costa Mesa (Orange County area) 2729 Bristol Street South Costa Mesa, CA 92626 (714) 549-4833 San Bruno (San Francisco area) 751 Camino Plaza San Bruno, CA 94066 (415) 871-2610 San Diego 8975 Complex Drive San Diego, CA 92123 (619) 279-2724 San Jose 1359 Old Oakland Road San Jose, CA 95112 (408) 280-7669	Illinois Chicago 1730 West Fullerton, Suite 4 Riverpoint Shopping Center Chicago, IL 60614 (312) 929-8585 Niles (Chicago NW) 7540 North Caldwell Avenue Niles, IL 60048 (708) 847-2400 Westmont (Chicago SW) 6038-38 South Cass Avenue Westmont, IL 60559 (708) 969-0049 Kansas Kansas City 11712 West 95th Street Overland Park KS 66214 (913) 688-2622 Maryland (Washington D.C.) Washington DC 5300 Sunnyside Avenue Beltsville, MD 20705 (301) 595-1818 Massachusetts Boston 390 University Avenue 125 Westwood Industrial Center Westwood, MA 02090 (617) 329-5130 Michigan Detroit 43304 Eleven Mile Road Novi, MI 48050 (313) 344-4044 Minnesota Minneapolis 4300 W 36 th Street St. Louis Park, MN 55416 (612) 920 8000	New Jersey Mahwah (N.Y. Metropolitan Area) US Highway 22 At Morris Avenue Union, NJ 07083 (201) 529-1655 Union Bradlee Shopping Center US Highway 22 At Morris Avenue Union, NJ 07083 (201) 687-9555 Ohio Cleveland 6370 York Road Parma Heights, OH 44130 (216) 845-7669 Pennsylvania Philadelphia 651 Park Avenue King of Prussia, PA 19406 (215) 768 6850 Pittsburgh Westford Plaza 10810 Perry Highway (Rt. 19N) Westford, PA 15090 (412) 935-8466 Texas Dallas 401 Preston Valley Shopping Center Dallas, TX 75230 (214) 661-3537 Houston 7639 Westhamer Houston, TX 77063 (713) 783-8761 Washington Seattle 835 Fidalgo Seattle, WA 98108 (206) 762 6500
Colorado Denver Havana Place Center 10740 East 14th Avenue Aurora, CO 80014 (303) 755-7669		
Florida Fort Lauderdale 2850 North 28th Terrace Hollywood, FL 33020 (305) 920-5600		
Georgia Atlanta 120 Interstate North Parkway East Suite 410 Atlanta, GA 30339 (404) 953-5871		