

SONY®

If the buttons on the remote fail to operate

Check if the command modes of the receiver and the remote are the same (AV1 or AV2).
Refer to the operating instructions on SET UP button usage.