

Playback



ATRAC3
MP3

CDDA
MP3

CDDA
MP3



Playback

- 1) Insert media (CD, CD-R/W, Memory Stick) into player.
- 2) Press the "Source" button repeatedly to toggle to the desired source and initiate

HDD Record



CDDA

 
CDDA



HDD Record

- 1) Initiate CD playback
- 2) Press the "Record" button. This brings up the record menu options.
- 3) Optional - Press [F1] to select bit rate, Press [F2] to select record speed
- 4) Press the "Record" button

Backup/Restore

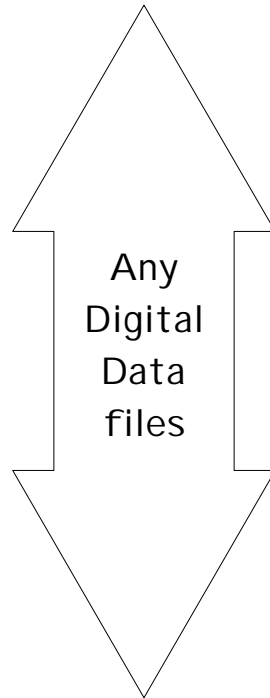

Backup

- 1) Press "Source", then the "R" dial, and then [F1] to display source list
- 2) Rotate the "R" dial to select "Memory Stick", and then press the "R" dial
- 3) Rotate the "R" dial to select the folder or file to be backed up.
- 4) Press the "Menu" button
- 5) Rotate the "R" dial to select "Backup", and press the "R" dial
- 6) When the backup is complete, Press [F3] to return to the normal display

Restore

- 1) Press "Source", then the "R" dial, and then [F1] to display source list
- 2) Rotate the "R" dial to select "HDD", and then press the "R" dial
- 3) Rotate the "R" dial to select "Data", and then press the "R" dial
- 4) Rotate the "R" dial to select the backed up folder or file, and press the "Menu" button
- 5) Rotate the "R" dial to select "Restore", then press the "R" dial
- 6) When restore is complete, press the [F3] button to restore the normal display

Check Out & In



Check Out/
Check In
ATRAC
Music
Files
Up to
3 times


Check Out/
Check In
ATRAC
Music
Files
Up to
3 times

Check Out




- 1) Press the "Source" button repeatedly to select "HDD"
- 2) Press the "Menu" button
- 3) Rotate the "R" dial to select "Check Out", and then press the "R" dial
- 4) Rotate the "R" dial again to select "Check Out", and then press the "R" dial
- 5) Rotate the "R" dial to select the desired track, and then press the "R" dial. By default, all tracks in the track name list are selected. Press [F2] to deselect all tracks, and use the "R" dial to select only the desired tracks.
- 6) Press [F1] to initiate the check out procedure

Check In

 - 1) Press the "Source" button repeatedly to select "Memory Stick"
- 2) Press the "menu" button
- 3) Rotate the "R" dial to select "Check In", and then Press the "R" dial
- 4) Rotate the "R" dial again to select "Check In", and then Press the "R" dial
- 5) Rotate the "R" dial to select the desired track, and then press the "R" dial. By default, all tracks in the track name list are selected. Press [F2] to deselect all tracks, and use the "R" dial to select only the desired tracks.
- 6) Press [F1] to initiate the check in procedure

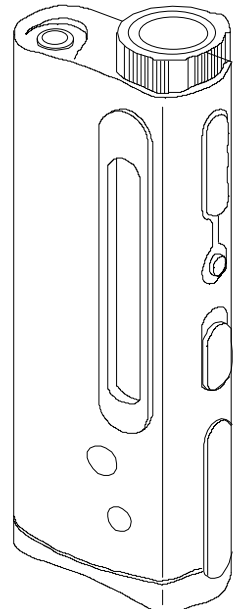

Move/Import

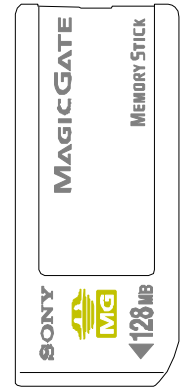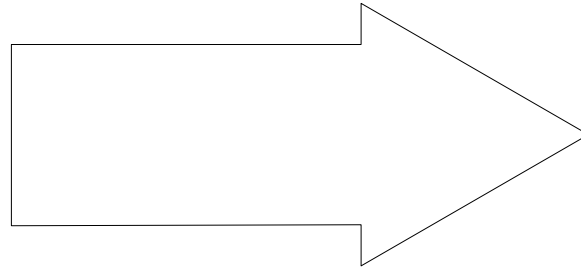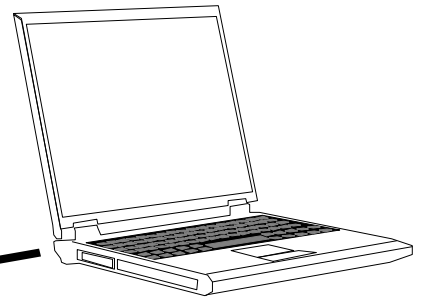   


Move In

- 1) Press the "Source" button repeatedly to select "Memory Stick"
- 2) Press the "menu" button
- 3) Rotate the "R" dial to select "Check In", and then Press the "R" dial
- 4) Rotate the "R" dial again to select "Move In", and then Press the "R" dial
- 5) Rotate the "R" dial to select the desired track, and then press the "R" dial. By default, all tracks in the track name list are selected. Press [F2] to deselect all tracks, and use the "R" dial to select only the desired tracks.
- 6) Press [F1] to initiate the Move-in procedure

Move Out

 - 1) Press the "Source" button repeatedly to select "HDD"
- 2) Press the "Menu" button
- 3) Rotate the "R" dial to select "Check Out", and then press the "R" dial
- 4) Rotate the "R" dial again to select "Move Out", and then press the "R" dial
- 5) Rotate the "R" dial to select the desired track, and then press the "R" dial. By default, all tracks in the track name list are selected. Press [F2] to deselect all tracks, and use the "R" dial to select only the desired tracks.
- 6) Press [F1] to initiate the Move-out procedure

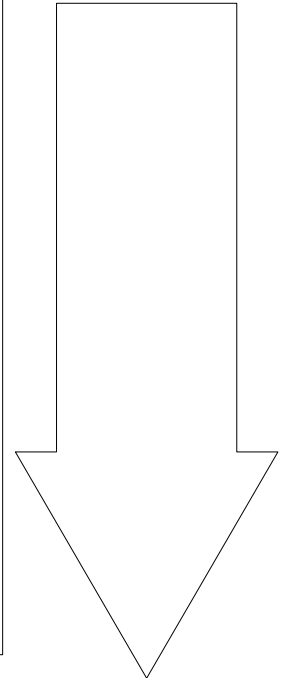

Note that the only files that can be moved, are those purchased and downloaded over the internet.