

Memory Stick® Media Compatibility Information for Sony® Action Cam Camcorders

How to Use This Chart:

Locate your camcorder model on the left-hand side and then scan along the top row for your memory card model. If the camcorder or memory card you are looking for is not on the page, continue checking later pages in the document.

Important Information:

- This "Compatibility Chart" only provides compatibility testing results for the Memory Stick media applications listed in each product's instruction manual with Memory Stick media types listed below.
- This chart does not guarantee support for all Memory Stick media types' performance nor compatibility among Memory Stick media compliant products.
- Memory Stick media transmission speed varies by, and depends on, host hardware devices' features and circumstances of use.
- The recording time and the number of still images that can be recorded will vary by device. Refer to the instruction manual supplied with your camera for more information.
- Attach a dedicated adapter to use Memory Stick Duo™ media in a slot for standard size media.
- The Memory Stick media capacity indicated on the packaging will differ from actual usable capacity. A portion of the memory is used for data management file functions. Refer to the back of the packaging for the minimum guaranteed capacity. [Click here to view the Memory Stick media user capacity chart.](#)
- This compatibility chart and specifications are subject to change without notice.

Notes:

| | |
|-----|---|
| *1 | This media is not compatible with XAVC S movie mode. |
| *2 | TransferJet function is not available for use with this product. |
| *3 | A dedicated adapter must be attached to use the Memory Stick Micro® media . |
| *4 | This media cannot be used when Secure Access is set to ON. Please switch off Secure Access function, using the software Memory Media Utility. |
| *5 | Mirroring function is not available for use with this product. |
| *6 | This Memory Stick® may not be able to record or play video. |
| *7 | Use a Memory Stick® 1GB or over when shooting video. |
| *8 | This media is not compatible with HD movie mode. |
| *9 | This media is not compatible with simultaneous movie recording. |
| *10 | This media is not compatible with simultaneous movie recording in Standard mode. |
| *11 | This media cannot be used in "Standard mode" as file system is different. |
| *12 | Use the AD-MSCF1 Memory Stick® adaptor for Memory Stick Duo® media. |
| *13 | The recording failure of sound may occur by pushing the DIVIDE button during recording. |
| *14 | The Transmission speed may not be faster when using Memory Stick PRO® (High Speed/Mark2) and Memory Stick PRO-HG®. |
| *15 | The recording failure of sound may briefly occur while pre-recording buffer is activated. |

Memory Stick

| Action Cam | MS-A4GU2 | MS-A512 | MS-A8G | MS-A8GN | MS-A8GU2 | MS-EX1G | MS-EX2G | MS-EX4G | MS-HX16A | MS-HX16AG | MS-HX16B |
|-------------|----------|---------|--------|---------|----------|---------|---------|---------|----------|-----------|----------|
| FDR-X1000V | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| FDR-X1000VR | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS200V | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS200VB | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS200VR | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS200VT | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS20 | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AZ1 | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AZ1VB | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AZ1VR | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AZ1VW | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS100V | OK*6 | OK*6 | OK*6 | OK*6 | OK*6 | NA | NA | NA | NA | NA | NA |
| HDR-AS100VB | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS100VR | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS100VW | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS30V | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS30VB | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS30VD | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS30VR | | | | | | NA | NA | NA | NA | NA | NA |
| HDR-AS30VW | | | | | | NA | NA | NA | NA | NA | NA |

