

# Memory Stick® Media Compatibility Information for Bloggie & Webbie HD™ Cameras

## How to Use This Chart:

Locate your camera model on the left-hand side and then scan along the top row for your memory card model.

## Important Information:

- This "Compatibility Chart" only provides compatibility testing results for the Memory Stick media applications listed in each product's instruction manual with Memory Stick media types listed below.
- This chart does not guarantee support for all Memory Stick media types' performance nor compatibility among Memory Stick media compliant products.
- Memory Stick media transmission speed varies by, and depends on, host hardware devices' features and circumstances of use.
- The recording time and the number of still images that can be recorded will vary by device. Refer to the instruction manual supplied with your camera for more information.
- Attach a dedicated adapter to use Memory Stick Duo™ media in a slot for standard size media.
- The Memory Stick media capacity indicated on the packaging will differ from actual usable capacity. A portion of the memory is used for data management file functions. Refer to the back of the packaging for the minimum guaranteed capacity. [Click here to view the Memory Stick media user capacity chart.](#)
- This compatibility chart and specifications are subject to change without notice.

## Notes:

*1	This media is not compatible with XAVC S movie mode.
*2	TransferJet function is not available for use with this product.
*3	A dedicated adapter must be attached to use the Memory Stick Micro™ media .
*4	This media cannot be used when Secure Access is set to ON. Please switch off Secure Access function, using the software Memory Media Utility.
*5	Mirroring function is not available for use with this product.
*6	This Memory Stick™ may not be able to record or play video.
*7	Use a Memory Stick™; 1GB or over when shooting video.
*8	This media is not compatible with HD movie mode.
*9	This media is not compatible with simultaneous movie recording.
*10	This media is not compatible with simultaneous movie recording in Standard mode.
*11	This media cannot be used in "Standard mode" as file system is different.
*12	Use the AD-MSCF1 Memory Stick™; adaptor for Memory Stick Duo™; media.
*13	The recording failure of sound may occur by pushing the DIVIDE button during recording.
*14	The Transmission speed may not be faster when using Memory Stick PRO™; (High Speed/Mark2) and Memory Stick PRO-HG™;.
*15	The recording failure of sound may briefly occur while pre-recording buffer is activated.

Memory Stick										
Camera	MS-A16G	MS-A16GU2	MS-A1G	MS-A1GN	MS-A1GU2	MS-A256	MS-A2G	MS-A2GN	MS-A2GU2	MS-A4G
MHS-CM5	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6
MHS-PM5	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6
MHS-PM5K	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6
Memory Stick										
Camera	MS-A4GN	MS-A4GU2	MS-A512	MS-A8G	MS-A8GN	MS-A8GU2	MS-EX1G	MS-EX2G	MS-EX4G	MS-HX16A
MHS-CM5	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK	OK	OK	OK
MHS-PM5	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK	OK	OK	OK
MHS-PM5K	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK*3*6	OK	OK	OK	OK
Memory Stick										
Camera	MS-HX16AG	MS-HX16B	MS-HX16G	MS-HX32A	MS-HX32AG	MS-HX32B	MS-HX32G	MS-HX4G	MS-HX8A	MS-HX8AG
MHS-CM5	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
MHS-PM5	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
MHS-PM5K	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
Memory Stick										
Camera	MS-HX8B	MS-HX8G	MS-JX8G	MS-M16	MS-M4	MS-M8	MS-MT16G	MS-MT1G	MS-MT2G	MS-MT32G
MHS-CM5	OK	OK	OK*2				OK	OK	OK	OK
MHS-PM5	OK	OK	OK*2				OK	OK	OK	OK
MHS-PM5K	OK	OK	OK*2				OK	OK	OK	OK
Memory Stick										
Camera	MS-MT4G	MS-MT8G	MS-PX16	MS-PX32	MS-PX64	MSX-M1GS	MSX-M1GST	MSX-M256	MSX-M256S	MSX-M2GS
MHS-CM5	OK	OK				OK	OK	OK*7	OK*7	OK
MHS-PM5	OK	OK				OK	OK	OK*7	OK*7	OK
MHS-PM5K	OK	OK				OK	OK	OK*7	OK*7	OK
Memory Stick										
Camera	MSX-M4GS	MSX-M512S	MSX-M8GS							
MHS-CM5	OK	OK*7	OK							
MHS-PM5	OK	OK*7	OK							
MHS-PM5K	OK	OK*7	OK							