

Playback Adaptor

MAP-T1

Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

This unit is a playback adaptor for the Mavica MVC-C1.

It plays back the Mavipak on TV and also can erase unnecessary tracks. In addition to a playback function, it also can charge battery packs.

Contents

Precautions**3**

Summary of Operation**4**

Location and Function of Parts**5**

Power Source**6**

Connection to a TV Set**8**

Playback on a TV Set**10**

To Erase Unnecessary Track(s)**11**


Specifications**11****Hi V F**

© 1989 by Sony Corporation

**Hi-Band
Mavica**

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

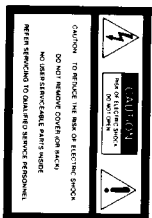

This symbol is intended to alert the user to the presence of unshielded "dangerous voltage" within the product which may be of sufficient magnitude to constitute a risk of electric shock persons.



This symbol is intended to alert the user to the presence of instructions for operating and maintenance (cleaning) restrictions in the literature accompanying the appliance.

Precautions

- Use the camera and the playback adapter as far from the TV set as possible. When placed on the TV set, the picture played back may be poor or the picture recorded may not show.
 - Do not use the camera for more than 10 minutes based on the **100** format. Manual recording of electronic still camera that does not have the **100** format may not play back correctly.
 - Operate the unit only with the supplied battery pack or NiMH battery pack.
 - Do not leave the unit in a location near heat source or in a place subject to direct sunlight, excessive dust or moisture.
 - The lens cover becomes solid. Clean it with a soft cloth. Do not use alcohol, acetone, thinner, or other abrasive cleansers or chemical solvents, as they may harm the casing.
- If you have any question or problem concerning your unit that is not covered in this manual, please contact the nearest Sony dealer. Be sure to bring the camera and the playback adapter to the Sony dealer when requesting repair.

Owner's Record


The model and serial numbers are located on the bottom of the unit. Record these numbers in the spaces provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. MAACT1 Serial No.

Summary of Operation


The following items are necessary for Playback.

A Merica MWC-C1 (optional) is necessary in order to play back with this unit.

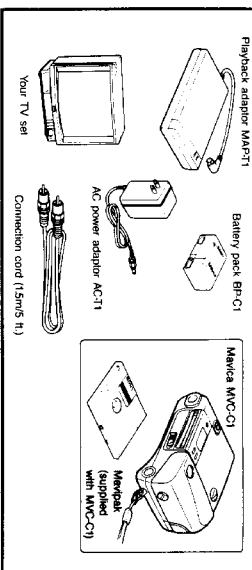


Playback

For details, refer to Page 6.

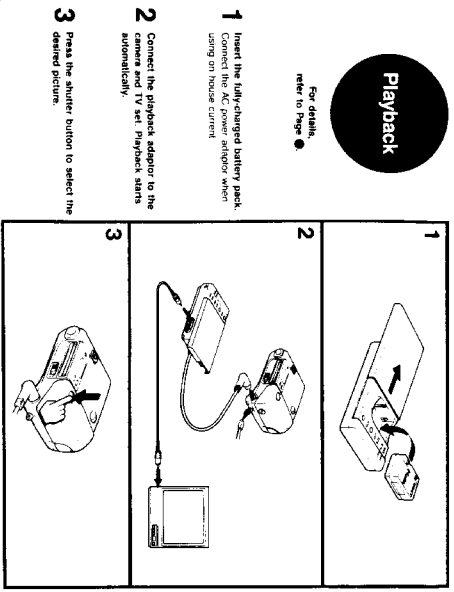


Control and Function of Parts

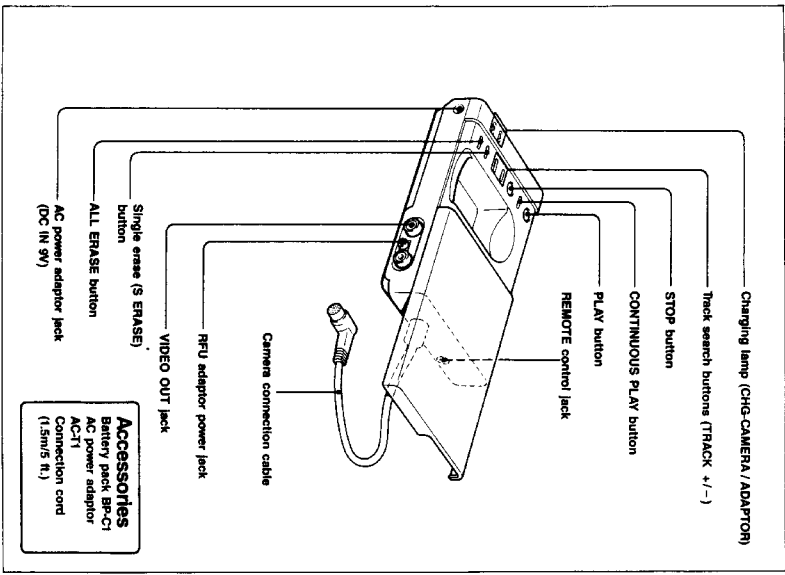


Power Source

When Using the Battery Pack

Install the battery pack.

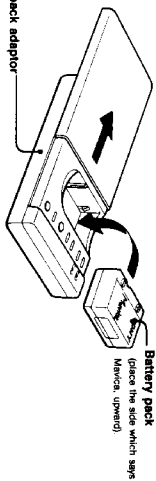

Start charging

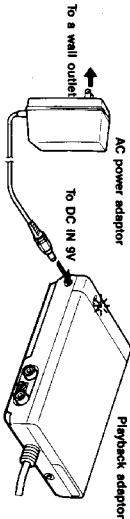

The CHARGE-ADAPTOR lamp lights up when battery charging starts, and goes off when completed. Charging time is about three hours; charging also takes place when playing back by using the AC power adaptor (refer to Page 6).

Time used for playback with one full charging

About 16 minutes of continuous playback is possible (Based on the Sony standard test method).


Precautions on the battery pack

Do not use the AC power adaptor or the battery pack by screwdrivers, pins, etc.

- Do not recharge a fully charged battery pack or the battery may be injured.
- Charging can be done when the temperature is within the range of 0°C to 40°C (32°F to 104°F), however, considering the power consumption, the temperature preferably should be within 5°C to 35°C (41°F to 95°F).
- The AC power adaptor and the playback adaptor may get warm during charging.

When Using on House Current

Connect the supplied AC adaptor as shown:

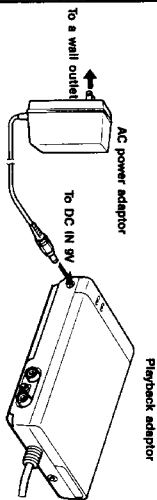

CAUTION

When the camera is not in use, remove the battery pack from the camera. If the battery is installed, even if the shooting mode selector is set to LOCK, a very small amount of electric current flows.

Life of the battery pack

Charge the battery pack when it is only able to play back about half the number of pictures as normally, in average temperatures with a brand new one (BPCL1, optional).

Precaution

Use only the supplied AC power adaptor. Plenty of the plugs of other manufacturers may be different.

Plenty of the Sony plug



Connection to a TV Set

Ready the TV Set

Inspect the connection terminal of the TV set.


TV set with a video input jack



TV set with only an antenna terminal




TV set with a video input jack

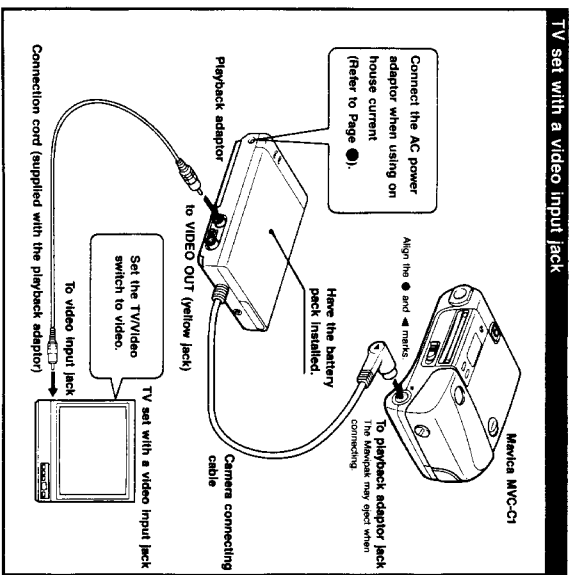

TV Sets Equipped Only With an Antenna Terminal


A RFU adaptor, RFU-89UC/N (optional) is needed.

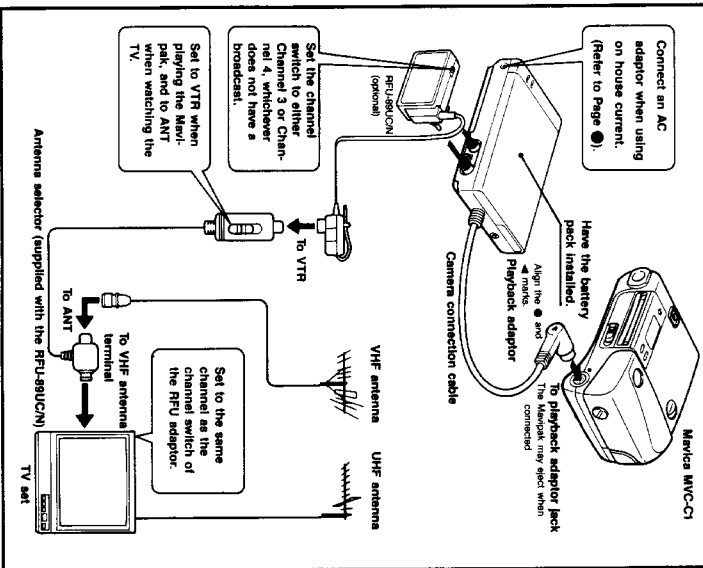
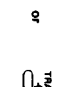
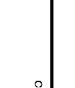
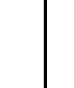

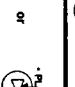


Playback on a TV Set

Insert a recorded Mavipak. Playback starts automatically. The track number of the track playing will show on the display window of the unit and on the upper right corner of

the TV set (3 seconds from when the track changes). When the unrecorded Mavipak is inserted, E appears on the display window.

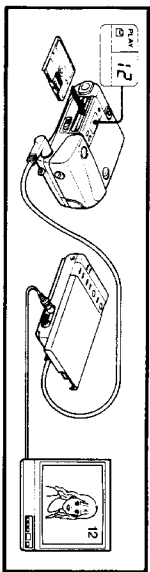

To see the next track	 or 
To see all of the recorded tracks automatically.	CONTINUOUS PLAY 
To stop playing back	STOP 
To start playing back	PLAY  or 

Watching the same track for more than 5 minutes

To prevent Mavipak from being impinged, the unit stops playback automatically. Also, when it is left on, power turns off automatically to avoid consumption of the battery pack. The display window also goes off. When starting either on, press the PLAY or the Shutter button.

To operate with a remote control

Use the wireless remote control kit, RM-CR1 (optional). Refer to the instruction manual of the RM-CR1 for operation.

When playback does not start


Reconnect the camera connection cable and the camera. If it still does not start, take the battery pack out and re-install it.

To Erase Unnecessary Tracks(s)

Since Mavica records pictures magnetically, you can erase unnecessary track(s). First refer to the page at left, and put the track in the Mavipak onto the TV set.


To Erase a Particular Track

- Ex: To erase the 5th track
1. First put the 5th track on the screen.
 2. While pressing the S ERASE, press the PLAY quickly.

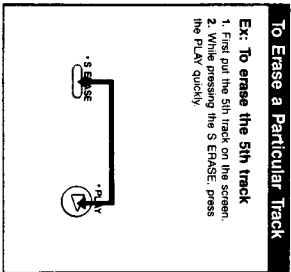

To Erase All the Tracks on the Mavipak

While pressing ALL ERASE, press PLAY when the Mavipak is playing back.

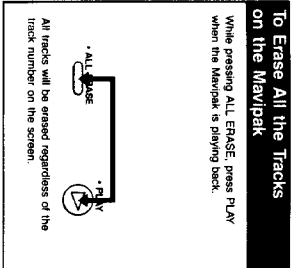

Caution

If the PLAY is pressed more than a second while pressing S ERASE, the following tracks also will be erased.

When the buzzer sounds

The lab to prevent pressure on the Mavipak was taken off. To erase, put the supplied seal on the hole where the lab was.

Specifications

Type:	Playback: auto-advance type for the M-CC11
Playback mode:	PLAY: single track playback CONTINUOUS PLAY: Continuous playback
Erase mode:	ALL ERASE: All track erase S ERASE: Particular track erase
Power source:	By M-CC11 battery pack
Dimensions:	15.84 x 14.33 x 3.94 in. (40.1 x 36.4 x 10.0 cm)
Weight:	2.05 lb (0.93 kg)
Supplied accessories:	RM-CR1 kit (remote control and a battery pack) AC power adapter (ACT1) Connection cord (T-DMC 1)

Design and specifications subject to change without notice.